

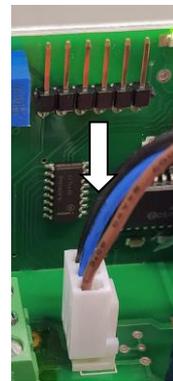
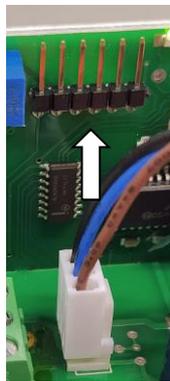


IR Sensor,CO2,LDM150
IR Sensor,CO2,LDM150R

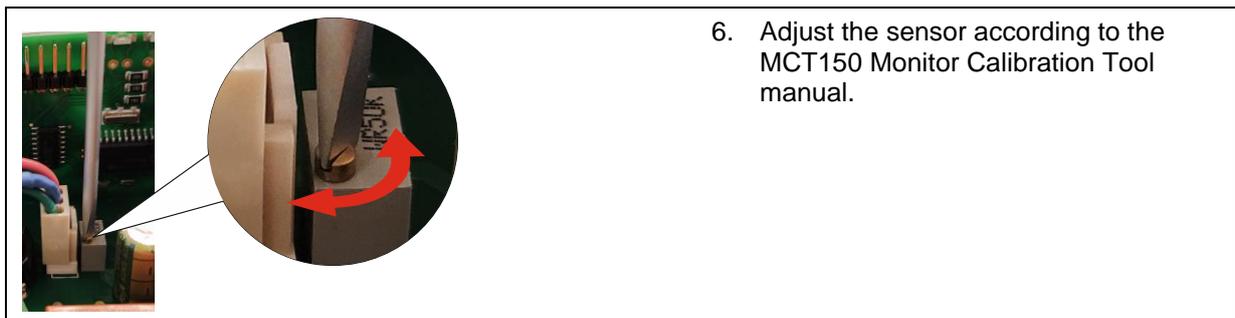

1. Un-plug the old sensor
2. Plug-in the new sensor
3. Control the sensor according to the MCT150 Monitor Calibration Tool manual.


Sensor w/ ATEX Cable,HC,LDM150R

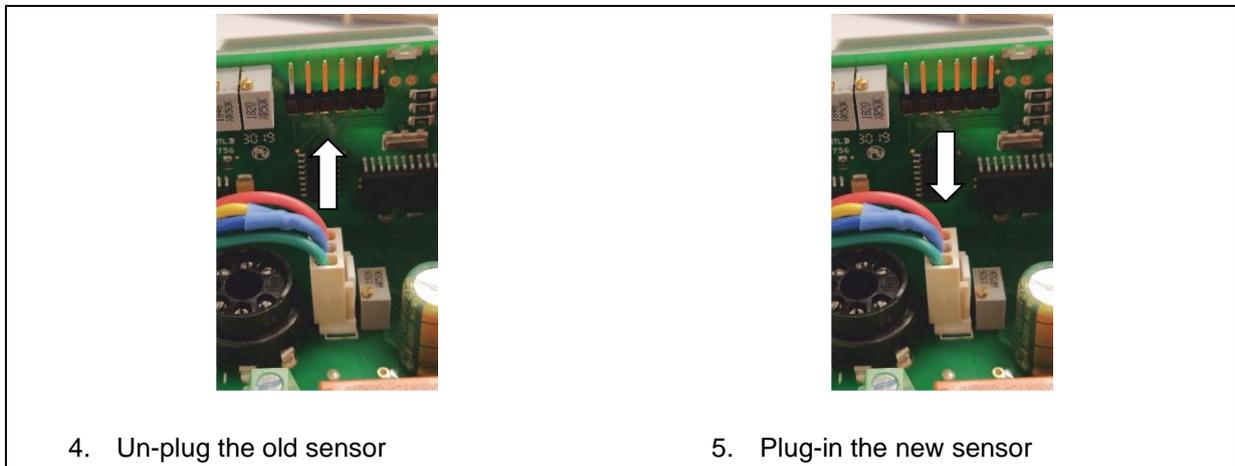



Please Note!

The calibration must be performed in 100% clean air!

Sensor,NH3,LDM150/LDM150R
Sensor,HFC,LDM150/LDM150R

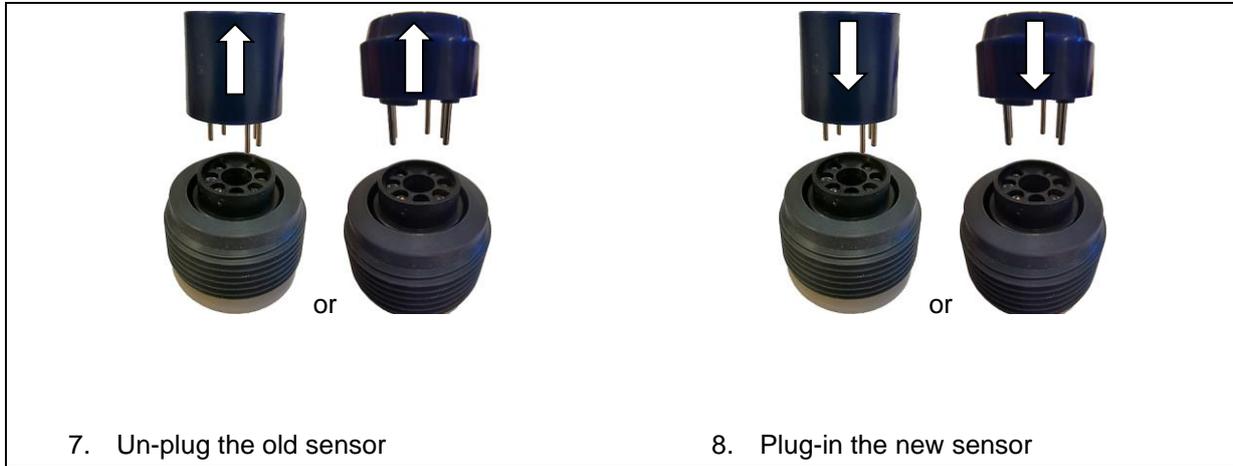

Please Note!
Align the pins in the socket:

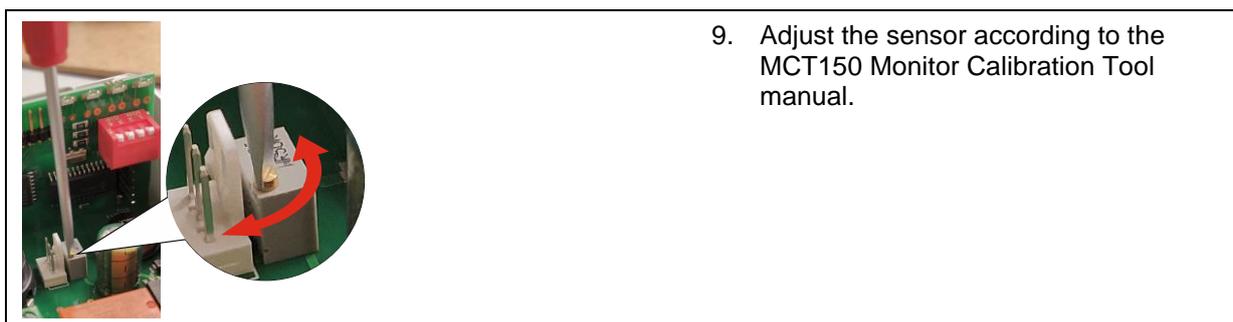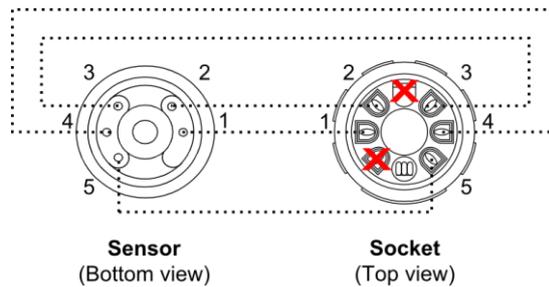

Please Note!
The calibration must be performed in 100% clean air!



Two Technology Place
East Syracuse, NY 13057-9714 USA

Phone: +1.800.344.3304
Fax: +315.434.2520
E-Mail: service.tools@inficon.com
www.inficonservicetools.com

Bonner Strasse 498
D-50968 Cologne, Germany

Phone: +49 221 56788-660
Fax: +49 221 56788-9660
E-Mail: servicetools.europe@inficon.com
www.inficonservicetools-europe.com

Due to our continuing program of product improvements, specifications are subject to change without notice.
All trademarks are the property of their respective owners.
©2019 INFICON