


Pirani Standard Gauge

PSG550

PSG552

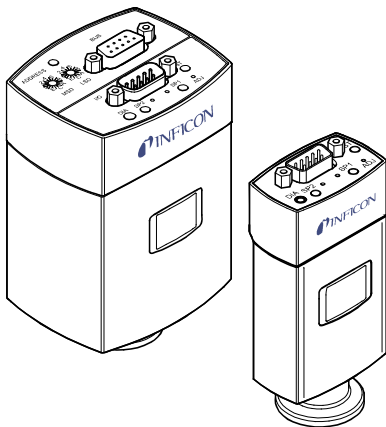


PSG554




Operating Manual
Incl. EU Declaration of Conformity

Product Identification

In all communications with INFICON, please specify the information given on the product nameplate. For convenient reference copy that information into the space provided below.

INFICON AG, LI-9496 Balzers		CE
Model: _____		
PN: _____		 
SN: _____		
_____ V _____ W; LPS	 3103457	

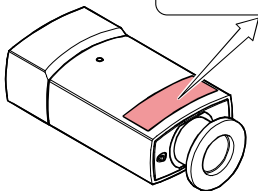


Validity

This document applies to products of the PSG55x series.


Part numbers of standard products are indicated below. OEM products have other part numbers and different parameter settings (e.g. factory setting of setpoint) as defined in the corresponding ordering information.


3Plx-0xx-xxxx

	Flange	<ul style="list-style-type: none"> 1 ⇒ DN 16 ISO-KF 2 ⇒ DN 16 ISO-KF, long tube 4 ⇒ DN 16 CF-F 5 ⇒ DN 16 CF-R, long tube 6 ⇒ DN 25 ISO-KF D ⇒ 4 VCR female E ⇒ 8 VCR female F ⇒ 1/8" NPT K ⇒ Flange 29×29 mm M ⇒ 4 VCR 90° female N ⇒ 7/16-20 UNF female
	Unit	<ul style="list-style-type: none"> 1 ⇒ mbar 2 ⇒ Torr 3 ⇒ Pa 4 ⇒ micron
	Filament	<ul style="list-style-type: none"> 1 ⇒ Tungsten 2 ⇒ Nickel 3 ⇒ Ceramic coated 6 ⇒ Tungsten, galvanically isolated 7 ⇒ Nickel, galvanically isolated 8 ⇒ Ceramic coated, galvanically isolated

3PIx-0xx-xxxx

Measurement signal	0 ⇒ 0.61 ... 10.23 V 1 ⇒ 1.2 ... 8.68 V 2 ⇒ 0.375 ... 5.659 V 3 ⇒ 1.57 ... 9.05 V
Interface	0 ⇒ None (analoge) 1 ⇒ DeviceNet 2 ⇒ Profibus 8 ⇒ EtherCAT *) A ⇒ Profinet G ⇒ EtherCAT **)
Receptacle	0 ⇒ FCC 1 ⇒ D-sub, 9-pin 2 ⇒ D-sub HD, 15-pin 4 ⇒ D-sub HD, 15-pin, RS485 INF
Display	0 ⇒ None
Switching function	1 ⇒ Display 2 ⇒ 2 switching functions ***) 4 ⇒ Display & 2 switching functions ***) 6 ⇒ 2 switching functions ****)

*) ETG.5003.2080 S (R) V1.0.0 (→  [7]) ***) Solid state relays

) ETG.5003.2080 S (R) V1.3.0 (→  [8]) *) Mechanical relays

The part number (PN) can be taken from the product nameplate. If not indicated otherwise in the legends, the illustrations in this document correspond to gauges with the DN 16 ISO-KF vacuum connection and display. They apply to gauges with other vacuum connections by analogy.

We reserve the right to make technical changes without prior notice.

Intended Use

The Pirani Standard Gauge PSG55x has been designed for vacuum measurement of gases in the pressure range of 5×10^{-5} ... 1000 mbar.

They must not be used for measuring flammable or combustible gases in mixtures containing oxidants (e.g. atmospheric oxygen) within the explosion range.

The gauge is intended for operation in connection with an INFICON Vacuum Gauge Controller ¹⁾ for compact gauges or with another suitable controller.

Trademark

VCR® Swagelok Marketing Co.

Patents

EP 0689669 B1, 0689670 B1

US Patent 5608168

Scope of Delivery

1× gauge

1× pin for adjusting settings via buttons



1× Operating Manual

¹⁾ Gauges with measurement signal 0.61 ... 10.23 V (dc) only.

Contents

Product Identification	2
Validity	3
Intended Use	5
Trademark	5
Patents	5
Scope of Delivery	5
1 Safety	8
1.1 Symbols Used	8
1.2 Personnel Qualifications	8
1.3 General Safety Instructions	9
1.4 Liability and Warranty	9
2 Technical Data	10
2.1 Output Signal vs. Pressure	19
2.2 Gas Type Dependence	24
3 Installation	25
3.1 Vacuum Connection	25
3.2 Power Connection	28
3.2.1 FCC 68, 8-pin Connector	29
3.2.2 D-sub, 9-pin Connector	30
3.2.3 D-sub HD, 15-pin Connector	31
3.2.4 D-sub HD, 15-pin, RS485 INF Connector	32
3.2.5 DeviceNet Connector	33
3.2.6 Profibus Connector	34
3.2.7 EtherCAT Connector	35
3.2.8 Profinet Connector	36
4 Operation	37
4.1 Status Indication and Displays	37
4.2 Gas Type Dependence	41
4.3 Switching Functions SP1, SP2	41
4.4 Diagnostic Port (RS232C Interface)	47
4.5 DeviceNet Operation	48
4.6 Profibus Operation	51
4.7 EtherCAT Operation	52
4.8 Profinet Operation	53

5	Deinstallation	54
6	Maintenance, Repair	56
6.1	Adjusting the Gauge	56
6.2	Replacing the Sensor	58
6.3	Troubleshooting	59
7	Returning the Product	61
8	Disposal	62
9	Accessories	63
10	Spare Parts	64
	Further Information	67
	ETL Certification	69
	EU Declaration of Conformity	70
	UKCA Declaration of Conformity	71

For cross-references within this document, the symbol (→  XY) is used, for cross-references to further documents, listed under "Further Information", the symbol (→  [Z]).

1 Safety

1.1 Symbols Used



Information on preventing any kind of physical injury.



Information on preventing extensive equipment and environmental damage.



Information on correct handling or use. Disregard can lead to malfunctions or minor equipment damage.



Notice



Labeling

1.2 Personnel Qualifications



All work described in this document may only be carried out by persons who have suitable technical training and the necessary experience or who have been instructed by the end-user of the product.

1.3 General Safety Instructions

- Adhere to the applicable regulations and take the necessary precautions for the process media used.
Consider possible reactions with the product materials.
Consider possible reactions (e.g. explosion) of the process media due to the heat generated by the product.
- Adhere to the applicable regulations and take the necessary precautions for all work you are going to do and consider the safety instructions in this document.
- Before beginning to work, find out whether any vacuum components are contaminated. Adhere to the relevant regulations and take the necessary precautions when handling contaminated parts.

Communicate the safety instructions to all other users.

1.4 Liability and Warranty

INFICON assumes no liability and the warranty becomes null and void if the end-user or third parties


- disregard the information in this document
- use the product in a non-conforming manner
- make any kind of interventions (modifications, alterations etc.) on the product
- use the product with accessories not listed in the product documentation.

The end-user assumes the responsibility in conjunction with the process media used.

Gauge failures due to contamination or wear and tear, as well as expendable parts (e.g. filament) are not covered by the warranty.

2 Technical Data



For further technical data for gauges with serial interfaces →  [4], [5], [6], [7], [8], [9].

Measurement principle	thermal conductance acc. to Pirani
Measurement range	5×10^{-5} ... 1000 mbar
Accuracy (N ₂)	
5×10^{-4} ... 1×10^{-3} mbar	±50% of reading
1×10^{-3} ... 100 mbar	±15% of reading
100 ... 1000 mbar	±50% of reading
Resolution (at 1000 mbar)	±0.15% of reading
Repeatability (N ₂)	
1×10^{-3} ... 100 mbar	±2% of reading

Output signal (measurement signal)

Voltage range

3PIx-0xx-xxx0	0 ... +10 V
3PIx-0xx-xxx1	0 ... +8.5 V
3PIx-0xx-xxx2	0 ... +5.529 V
3PIx-0xx-xxx3	0 ... +8.875 V


Measurement range

3PIx-0xx-xxx0	+0.61 ... +10 V
3PIx-0xx-xxx1	+1.2 ... +8.5 V
3PIx-0xx-xxx2	+0.375 ... +5.529 V
3PIx-0xx-xxx3	+1.57 ... +8.875 V

Error signal

0 ... 0.05 V


Voltage vs. pressure


3PIx-0xx-xxx0	1.286 V/decade, logarithmic
3PIx-0xx-xxx1	1 V/decade, logarithmic
3PIx-0xx-xxx3	1 V/decade, logarithmic
3PIx-0xx-xxx2	→  21

Output impedance	$2 \times 4.7 \Omega$, short circuit-proof
Load impedance	$\geq 10 \text{ k}\Omega$
Response time	$< 10 \text{ ms}$
<hr/>	
Gauge identification	
FCC 68 (+0.61 ... +10 V)	$27 \text{ k}\Omega$
<hr/>	
HV adjustment	at $< 10^{-5} \text{ mbar}$
<hr/>	
Solid state relays	switching functions SP1/2
Setting range (N_2)	$5.0 \times 10^{-5} \dots 1000 \text{ mbar}$
Hysteresis ²⁾	10% of threshold
Switching characteristics ²⁾	Low Trip Point
Contact rating	$< 30 \text{ V (ac) / (dc)}$, $\leq 0.3 \text{ A}$ resistive
closed	LED lit solid
open	LED off
Switching time	$< 30 \text{ ms}$
<hr/>	
Mechanical relays	switching functions SP1/2
Setting range (N_2)	$5.0 \times 10^{-5} \dots 1000 \text{ mbar}$
Hysteresis ²⁾	10% of threshold
Switching characteristics ²⁾	Low Trip Point
Type	1 floating contact (NO) per switching function
Contact rating	$< 30 \text{ V (ac) / (dc)}$, $\leq 1 \text{ A}$ resistive
closed	LED lit solid
open	LED off
Switching time	$< 30 \text{ ms}$
<hr/>	
Diagnostic port	Jack connector 2.5 mm, 3-pin
<hr/>	

²⁾ The hysteresis and the switching characteristics can be programmed via the serial interface or the diagnostic port.

Supply


DANGER



The gauge may only be connected to power supplies, instruments, or control devices that conform to the requirements of a grounded protective extra-low voltage (PELV) and limited power source (LPS), Class 2. The connection to the gauge has to be fused. ³⁾

Supply voltage at the gauge	Class 2 / LPS +15 ... +30 V (dc)
Ripple	$\leq 1 V_{pp}$
Power consumption without fieldbus	$\leq 2.5 W$
DeviceNet, Profibus	$\leq 3 W$
EtherCAT, Profinet	$\leq 4.5 W$
Fuse to be connected ³⁾	1 AT
<hr/>	
Electrical connection	
3PIx-0xx-x0xx	FCC 68
3PIx-0xx-x1xx	D-sub 9-pin, male
3PIx-0xx-x2xx	D-sub HD 15-pin, male
3PIx-0xx-x4xx	D-sub HD 15-pin, RS485 INF, male
Sensor cable	shielded 0.14 mm ² /conductor
Cable length	$\leq 100 m$
RS232C operation	$\leq 30 m$
<hr/>	
Grounding concept	→ "Power Connection"
Vacuum connection to signal common	connected via 10 k Ω
<hr/>	

³⁾ INFICON controllers fulfill this requirement.


RS232C / RS485 interface

Transmission rate	57600 baud (default)
Data format	binary 8 data bits one stop bit no parity bit no handshake → "Power Connection"


For further information on the RS232C / RS485C interface


→  [4].




DeviceNet interface


Specification, data format,
communication protocol →  [10]

Interface, physical CAN bus






Data rate (adjustable via <RATE>
switch) 125 kBaud
250 kBaud
500 kBaud (default)
<P> (125 kBaud,
250 kBaud, 500 kBaud
programmable via
DeviceNet, →  [5])


Node address (MAC ID)
(Adjustable via <ADDRESS>,
<MSD>, <LSD> switches) 0 ... 63dec (63dec default)
<P> (0 ... 63 programmable
via DeviceNet, →  [5])

DeviceNet connector Micro-Style, 5-pin, male
Cable shielded, special DeviceNet
cable, 5 conductors
→  33, →  [11]
Cable length, system wiring according to DeviceNet
specifications, →  [10],
[11]



For further information on the DeviceNet interface →  [5]

Profibus interface

Specification, data format, communication protocol	→  [12]
Interface, physical	RS485
Data rate	≤12 Mbaud (→  [6])
Node address	
Local	
(Adjustable via hexadecimal <ADDRESS>, <MSD>, <LSD> switches)	00 ... 7D _{hex} (0 ... 125 _{dec})
Default setting	01C _{hex}
Via Profibus	
(hexadecimal <ADDRESS> switches set to >7D _{hex} (>125 _{dec}))	00 ... 7D _{hex} (0 ... 125 _{dec})
Profibus connection	D-sub, 9-pin, female
Cable	shielded, special Profibus cable, →  34, →  [13]
Cable length, system wiring	according to Profibus specifications, →  [12], [13]



For further information on the Profibus interface →  [6]

EtherCAT interface

Specification, data format, communication protocol	
3Plx-0xx-xx G x	→  [16], [17]
3Plx-0xx-xx 8 x	→  [14], [15]
Data rate	100 Mbps
Note address	explicit device identification
EtherCAT connector	2×RJ45, 8-pin, socket input and output
Cable	8-pin, shielded, Ethernet Patch Cable (CAT5e quality or higher)
Cable length	≤100 m

For further information on the EtherCAT interface →  [7], [8]

Profinet interface

Specification, data format, communication protocol	→  [14]
Data rate	100 Mbps
Note address	explicit device identification
Profinet connector	2×RJ45, 8-pin, socket input and output
Cable	8-pin, shielded, Ethernet Patch Cable (CAT5e quality or higher)
Cable length	≤100 m
For further information on the Profinet interface →  [9].	

Materials exposed to vacuum

Vacuum connection	stainless steel 1.4435
Filament	
3PI1 / 6-0xx-xxxx	W
3PI2 / 7-0xx-xxxx	Ni
3PI3 / 8-0xx-xxxx	ceramic coated
Feedthrough	glass
Orifice ⁴⁾	stainless steel
Further materials	Ni, NiFe, stainless steel 1.4301

Internal volume


DN 16 ISO-KF	4.7 cm ³
DN 16 ISO-KF, long tube	14.5 cm ³
DN 16 CF-F	8 cm ³
DN 16 CF-R, long tube	14 cm ³
DN 25 ISO-KF	5.5 cm ³
4 VCR [®] female	5.5 cm ³
8 VCR [®] female	7 cm ³
1/8" NPT	5.2 cm ³
Flange 29×29 mm	4.9 cm ³
4 VCR [®] 90°, female	7.9 cm ³
7/16-20 UNF	5.2 cm ³

⁴⁾ Only versions DN 16 ISO-KF and DN 16 CF-F.


Permissible pressure (absolute)	≤5 bar
Bursting pressure (absolute)	10 bar
<hr/>	
Permissible temperatures	
Operation	+10 °C ... +50 °C
Vacuum connection ⁵⁾	≤80 °C
long tube ⁵⁾	≤250 °C
Filament	<160 °C
Storage	-20 °C ... +65 °C
Relative humidity	
Year's mean	≤65% (no condensation)
During 60 days	≤85% (no condensation)
Mounting orientation	any
Use	indoors only, altitude up to 2000 m NN
Pollution degree	2
Degree of protection	IP 40
<hr/>	
Weight	
without fieldbus interface	<130 g
with fieldbus interface	230 g ... 250 g
<hr/>	

⁵⁾ For horizontal mounting orientation only. During bakeout, measurement range, accuracy, and repeatability may deviate from specifications.


Dimensions [mm]

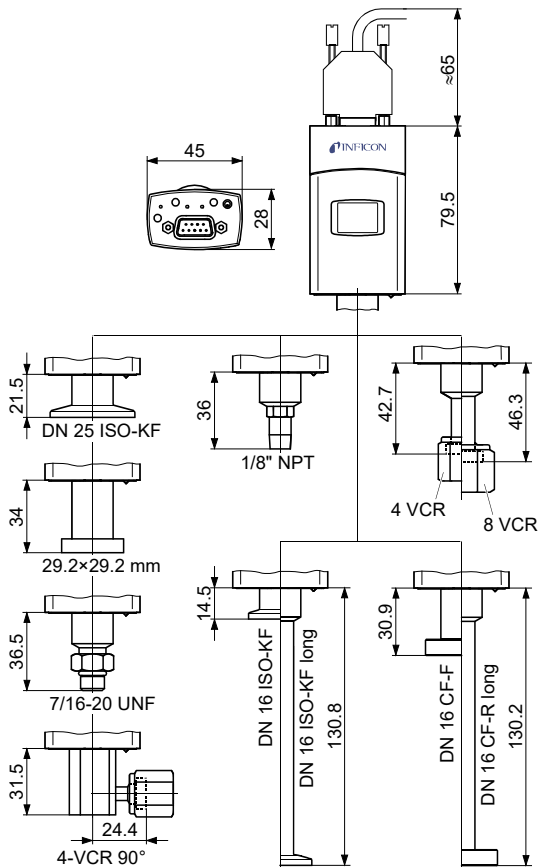


DeviceNet

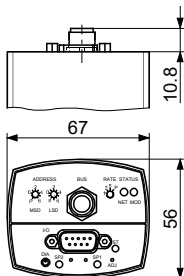


Profibus

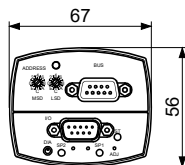


EtherCAT

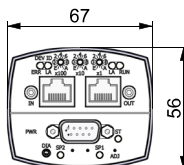

RS485

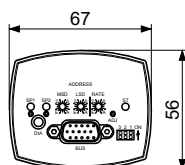


Profinet

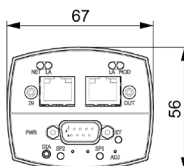

2.1 Output Signal vs. Pressure

Measurement range 0.61 ... 10 V

Pressure p

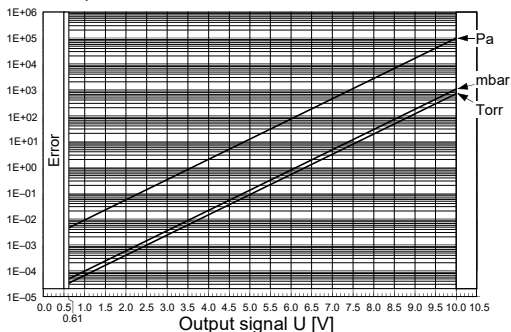

$$p = 10^{0.778(U-c)} \quad \Leftrightarrow \quad U = c + 1.286 \log_{10} p$$


valid in the range $5 \times 10^{-5} \text{ mbar} < p < 1000 \text{ mbar}$

U	p	c	U	p	c
[V]	[mbar]	6.143	[V]	[micron]	2.448
[V]	[μbar]	2.287	[V]	[Pa]	3.572
[V]	[Torr]	6.304	[V]	[kPa]	7.429
[V]	[mTorr]	2.448			

where p pressure
 U output signal
 c constant (pressure unit dependent)

Measurement range 1.2 ... 8.5 V

Pressure p

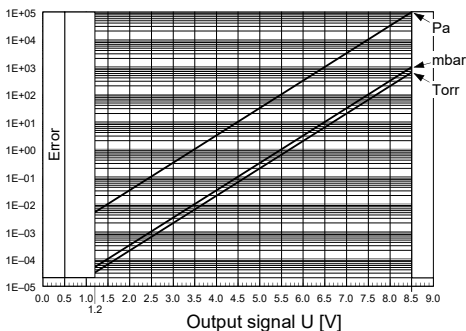

$$p = 10^{(U-c)} \quad \Leftrightarrow \quad U = c + \log_{10} p$$

valid in the range $5 \times 10^{-5} \text{ mbar} < p < 1000 \text{ mbar}$

U	p	c	U	p	c
[V]	[mbar]	5.5	[V]	[micron]	2.625
[V]	[μ bar]	2.5	[V]	[Pa]	3.5
[V]	[Torr]	5.625	[V]	[kPa]	6.5
[V]	[mTorr]	2.625			

where p pressure
 U output signal
 c constant (pressure unit dependent)

Measurement range 0.375 ... 5.529 V

Signal U [V]	Pressure p		
	[mbar]	[Pa]	[Torr]
0.375	$<5 \times 10^{-5}$	$<6.65 \times 10^{-3}$	$<5 \times 10^{-5}$
0.376	0.000133322	0.013332237	0.0001
0.377	0.000266645	0.026664474	0.0002
0.379	0.000666612	0.066661184	0.0005
0.384	0.001333224	0.133322368	0.0010
0.392	0.002666447	0.266644736	0.0020
0.417	0.006666118	0.66661184	0.0050
0.455	0.013332237	1.33322368	0.0100
0.523	0.026664474	2.66644736	0.0200
0.682	0.066661184	6.6661184	0.0500
0.876	0.133322368	13.3322368	0.1000
1.155	0.266644736	26.6644736	0.2000
1.683	0.66661184	66.661184	0.5000
2.217	1.33322368	133.322368	1.0000
2.842	2.66644736	266.644736	2.0000
3.675	6.6661184	666.61184	5.0000
4.206	13.3322368	1333.22368	10.0000
4.577	26.6644736	2666.44736	20.0000
4.846	66.661184	6666.1184	50.0000
4.945	133.322368	13332.2368	100.0000
5.019	266.644736	26664.4736	200.0000
5.111	399.967104	39996.7104	300.0000
5.224	533.289472	53328.9472	400.0000
5.329	666.61184	66661.184	500.0000
5.419	799.934208	79993.4208	600.0000
5.495	933.256576	93325.6576	700.0000
5.529	1000	100000	750.0637

Valid in the range 0.375 ... 2.842 V

$$p = a + bU + cU^2 + dU^3 + eU^4 + fU^5$$

a	-0.02585	c	0.04563	e	-0.04158
b	0.03767	d	0.1151	f	0.008737

where p pressure in Torr a, b, c, d, e, f constant
 U output signal

Valid in the range 2.842 ... 4.945 V

$$p = \frac{a + cU + eU^2}{1 + bU + dU^2 + fU^3}$$

a	0.1031	c	-0.02322	e	0.07229
b	-0.3986	d	0.07438	f	-0.006866

where p pressure in Torr a, b, c, d, e, f constant
 U output signal

Valid in the range 4.945... 5.529 V


$$p = \frac{a + cU}{1 + bU + dU^2}$$

a	100.624	c	-20.5623
b	-0.37679	d	0.0348656

where p pressure in Torr a, b, c, d constant
 U output signal

Measurement range 1.57 ... 8.875 V

Pressure p

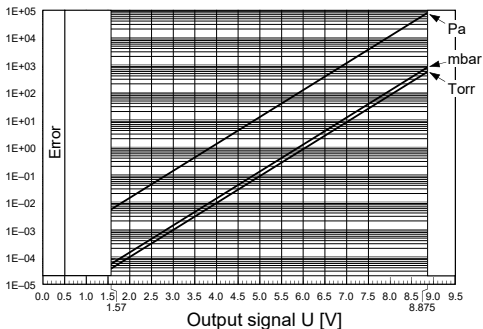

$$p = 10^{(U-c)} \quad \Leftrightarrow \quad U = c + \log_{10} p$$

valid in the range $5 \times 10^{-5} \text{ mbar} < p < 1000 \text{ mbar}$


U	p	c	U	p	c
[V]	[mbar]	5.8751	[V]	[micron]	3
[V]	[μ bar]	2.8751	[V]	[Pa]	3.8751
[V]	[Torr]	6	[V]	[kPa]	6.8751
[V]	[mTorr]	3			

where p pressure
 U output signal
 c constant (pressure unit dependent)

2.2 Gas Type Dependence

Indicated pressure (gauge calibrated for air)

p (mbar)

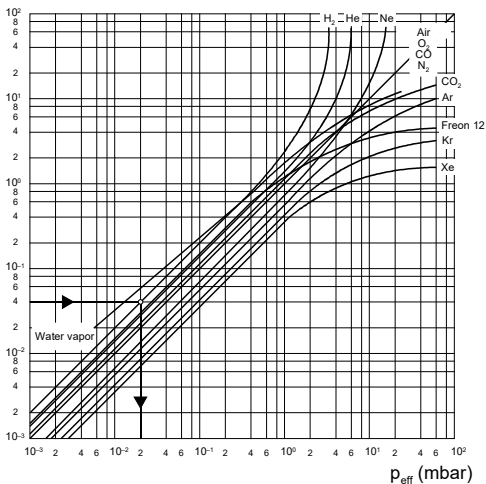

Calibration factors

valid for Pirani pressure range below 1 mbar

$$p_{\text{eff}} = C \times \text{indicated pressure}$$

Gas type	Calibration factor C	Gas type	Calibration factor C
He	0.8	H_2	0.5
Ne	1.4	air, O_2 , CO , N_2	1.0
Ar	1.7	CO_2	0.9
Kr	2.4	water vapor	0.5
Xe	3.0	Freon 12	0.7

3 Installation



 **DANGER**

Leaking process media

High-intensity mechanical, chemical or thermal impacts can cause leaks in the measuring sensor. Process media can thus leak and possibly cause hazards, if overpressure is in the vacuum system.

- Avoid high-intensity mechanical, chemical or thermal impacts and overpressure in the vacuum system.
- Take appropriate measures (e.g. shut off gas supply, extraction, leak test) to avoid hazards or damage due to leaking process media.

3.1 Vacuum Connection



 **DANGER**

Overpressure in the vacuum system >1 bar

Injury caused by released parts and harm caused by escaping process gases can result if clamps are opened while the vacuum system is pressurized.

Do not open any clamps while the vacuum system is pressurized. Use the type clamps which are suited to overpressure.



DANGER



Overpressure in the vacuum system >2.5 bar KF flange connections with elastomer seals (e.g. O-rings) cannot withstand such pressures. Process media can thus leak and possibly damage your health.

Use O-rings provided with an outer centering ring.



DANGER



Protective ground

Products that are not correctly connected to ground can be extremely hazardous in the event of a fault.

Electrically connect the gauge to the grounded vacuum chamber. This connection must conform to the requirements of a protective connection according to EN 61010:

- CF, NPT, UNF and VCR flanges fulfill this requirement.
- For gauges with a KF flange, use a conductive metallic clamping ring.
- For gauges with a $\frac{1}{2}$ " tube and a 29×29 mm flange, take appropriate measures to fulfill this requirement.



Caution



Vacuum component

Dirt and damages impair the function of the vacuum component.

When handling vacuum components, take appropriate measures to ensure cleanliness and prevent damages.



Caution



Dirt sensitive area


Touching the product or parts thereof with bare hands increases the desorption rate.

Always wear clean, lint-free gloves and use clean tools when working in this area.



Mount the gauge so that no vibrations occur. The gauge may be mounted in any orientation. To keep condensates and particles from getting into the measuring chamber preferably choose a horizontal to upright position and consider using a seal with centering ring and filter. If adjustment should be possible after the gauge has been installed, be sure to install it so that the buttons can be accessed with a pin.


Remove the protective lid and connect the product to the vacuum system.

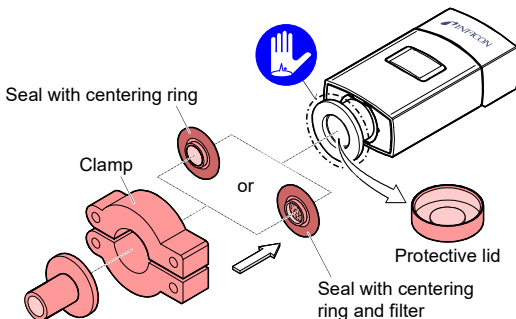


Keep the protective lid.


3.2 Power Connection



Make sure the vacuum connection is properly made (→  25).



DANGER



The gauge may only be connected to power supplies, instruments or control devices that conform to the requirements of a grounded protective extra-low voltage (PELV) and limited power source (LPS), Class 2. The connection to the gauge has to be fused. ⁶⁾




Ground loops, differences of potential, or EMC problems may affect the measurement signal. For optimum signal quality, please do observe the following notes:

- Connect the cable shield to ground on one side via the connector housing. Do not connect the other side of the shield.
- Connect the supply common with protective ground directly at the power supply.
- Use differential measurement input (signal common and supply common conducted separately).
- Potential difference between supply common and housing ≤ 18 V (overvoltage protection).

⁶⁾ INFICON controllers fulfill these requirements.


3.2.1 FCC 68, 8-pin Connector

If no sensor cable is available, make one according to the following diagram. Connect the sensor cable.

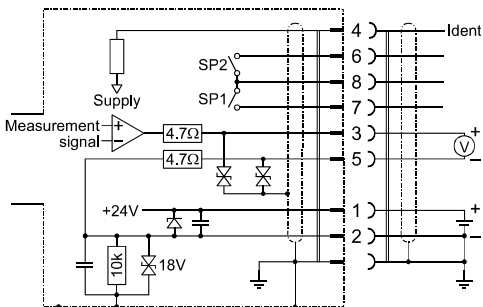

Electrical connection

 
- Pin 1 Supply
- Pin 2 Supply common, GND
- Pin 3 Measurement signal or thresholds SP1, SP2
- Pin 4 Gauge identification
- Pin 5 Signal common
- Pin 6, 8 Relay SP2
Common closing contact (com)
- Pin 7, 8 Relay SP1
Common closing contact (com)



FCC 68
8-pin
connector


3.2.2 D-sub, 9-pin Connector

If no sensor cable is available, make one according to the following diagram. Connect the sensor cable.

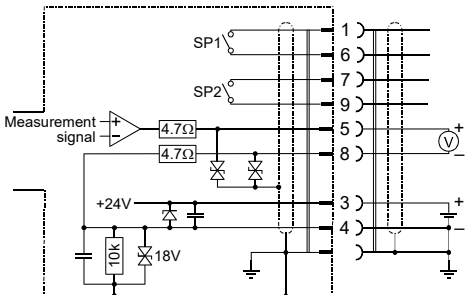

Electrical connection


- Pin 1 Relay SP1, closing contact
- Pin 2 n.c.
- Pin 3 Supply
- Pin 4 Supply common, GND
- Pin 5 Measurement signal or thresholds SP1, SP2
- Pin 6 Relay SP1
Common contact (com)
- Pin 7 Relay SP2
Common contact (com)
- Pin 8 Signal common
- Pin 9 Relay SP2, closing contact

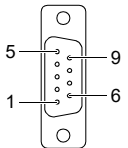

D-sub
9-pin
female
soldering side


3.2.3 D-sub HD, 15-pin Connector

If no sensor cable is available, make one according to the following diagram. Connect the sensor cable.

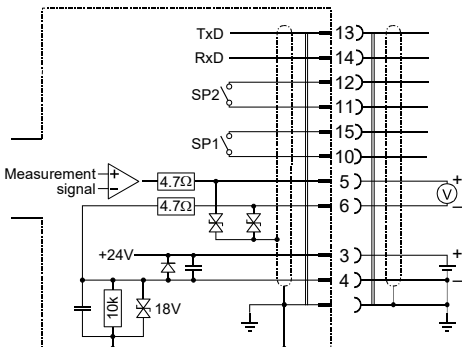

Electrical connection


Pin 1, 2	n.c.
Pin 3	Supply
Pin 4	Supply common, GND
Pin 5	Measurement signal
Pin 6	Signal common
Pin 7, 8, 9	n.c.
Pin 10	Relay SP1 (NO)
Pin 11	Relay SP2 (NO)
Pin 12	Relay SP2 Common contact (com)
Pin 13	RS232, TxD
Pin 14	RS232, RxD
Pin 15	Relay SP1 Common contact (com)

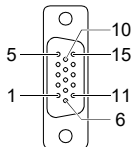

D-sub HD
15-pin
female
soldering side


3.2.4 D-sub HD, 15-pin, RS485 INF Connector

If no sensor cable is available, make one according to the following diagram. Connect the sensor cable.

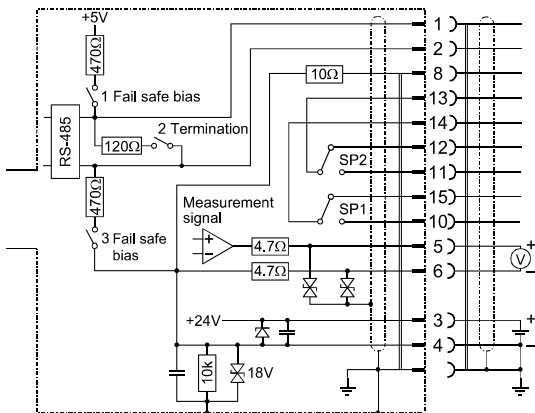

Electrical connection


Pin 1	RS485 B+
Pin 2	RS485 A-
Pin 3	Supply
Pin 4	Supply common, GND
Pin 5	Measurement signal
Pin 6	Signal common
Pin 7	Reserved
Pin 8	RS485. GND
Pin 9	Reserved
Pin 10	Relay SP1 (NO)
Pin 11	Relay SP2 (NO)
Pin 12	Relay SP2, common contact (com)
Pin 13	Relay SP2 (NC)
Pin 14	Relay SP1 (NC)
Pin 15	Relay SP1, common contact (com)

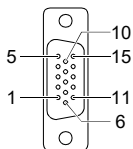

D-sub HD
15-pin
female
soldering side


3.2.5 DeviceNet Connector

If no DeviceNet cable is available, make one according to the following diagram. Connect the DeviceNet cable.

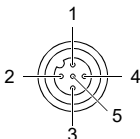


Micro-Style, 5-pin, (DeviceNet), female, soldering side

Pin 1	Drain	
Pin 2	Supply	+15 ... +30 V (dc)
Pin 3	Supply common	GND
Pin 4	CAN_H	
Pin 5	CAN_L	

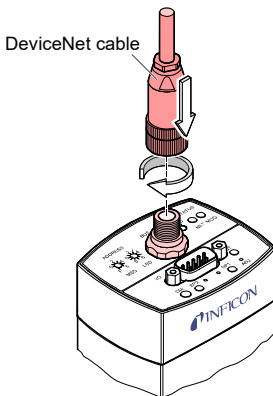

3.2.6 Profibus Connector


If no Profibus cable is available, make one according to the following diagram. Connect the Profibus cable.

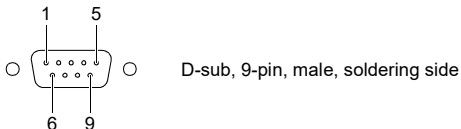

Pin 1, 2	Do not connect	Pin 6	VP ²⁾
Pin 3	RxD/TxD-P	Pin 7, 9	Not connected
Pin 4	CNTR-P ¹⁾	Pin 8	RxD/TxD-N
Pin 5	DGND ²⁾		

¹⁾ Only to be connected if an *optical link* module is used.

²⁾ Only required as line termination for devices at both ends of bus cable (→ [13]).

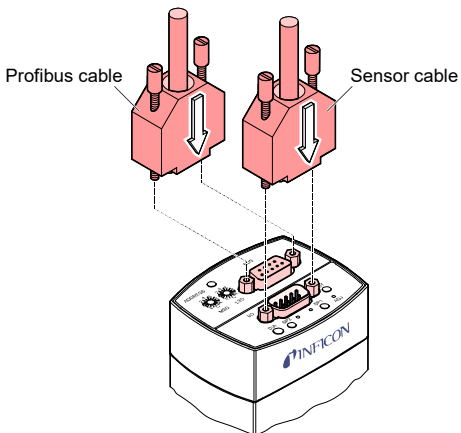


3.2.7 EtherCAT Connector

If no EtherCAT cables are available, make them according to the following diagram. Connect the EtherCAT cables.



FCC68, 8-pin, soldering side

Pin 1	TD+	Transmission data +
Pin 2	TD-	Transmission data -
Pin 3	RD+	Receive data +
Pin 6	RD-	Receive data -
Pin 4, 5, 7 and 8: Not connected		

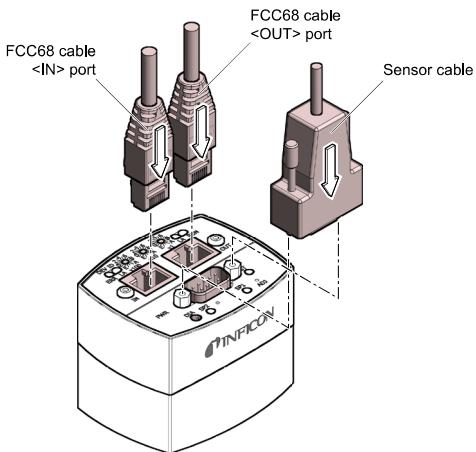


3.2.8 Profinet Connector

If no Profinet cables are available, make them according to the following diagram. Connect the Profinet cables.



FCC68, 8-pin, soldering side

Pin 1	TD+	Transmission data +
Pin 2	TD-	Transmission data -
Pin 3	RD+	Receive data +
Pin 6	RD-	Receive data -
Pin 4, 5, 7 and 8: Not connected		

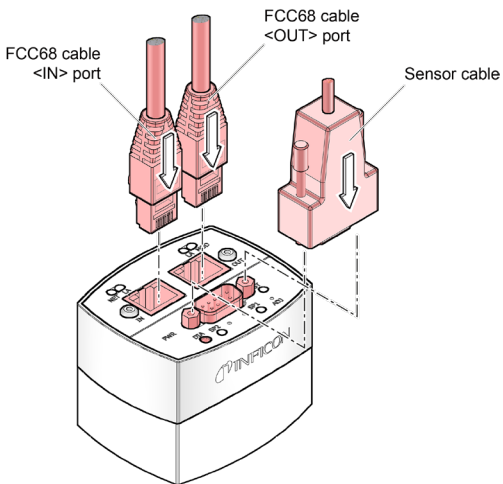

4 Operation


When the supply voltage is applied, the measurement signal is available at the connector (→ "Power Connection").

Allow a stabilization period of at least 10 minutes. It is advisable to operate the gauge continuously, irrespective of the pressure.

The gauge is factory calibrated. Due to long time operation or contamination, a zero drift could occur. Periodically check the zero and adjust it if necessary. In addition, we recommend performing a zero and ATM calibration after each reinstallation (adjusting the gauge → 56).


4.1 Status Indication and Displays

Light-emitting diodes (LEDs)

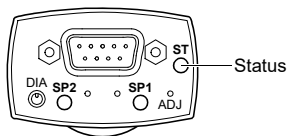

LED	State	Meaning
<ST>	off	no supply voltage
	lit green	measurement mode
	lit solid or is blinking red	error (→ 59)
<SP1>	lit green	Relay SP 1 closed
	off	Relay SP 1 open
<SP2>	lit green	Relay SP 2 closed
	off	Relay SP 2 open

Liquid crystal display (LCD)

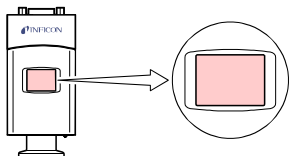


LCD	Meaning
off	no supply voltage
lit green	measurement / parameter mode
lit red	error




The display can be rotated by 180 ° via the diagnostic port.

Put the gauge into operation

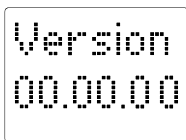


When the supply voltage is applied the software version is briefly displayed.

Measurement mode

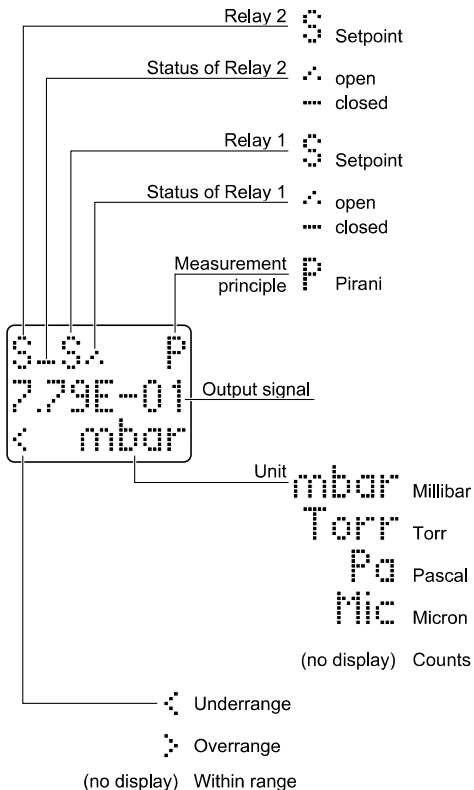

Parameter mode

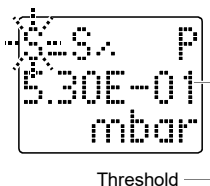

Switching functions <S>

When the <SP1> or <SP2> button is pushed, the corresponding threshold is displayed and the corresponding relay flashes.


Error display (trouble shooting → 59)



Pirani sensor error




EEPROM error

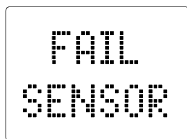

Sensor error

4.2 Gas Type Dependence

The measurement value is gas dependent. The pressure reading applies to dry air, O₂, CO and N₂. For other gases, it has to be corrected (→ "Technical Data").

If the gauge is operated with an INFICON controller, a calibration factor for correction of the actual reading can be applied (→  of the corresponding controller).


4.3 Switching Functions SP1, SP2

The two switching functions can be set to any pressure within the measurement range of the gauge. A solid state relay is provided for each switching function.

The current threshold setting

- can be read / written via the diagnostic port
- is output at the measurement signal output instead of the pressure signal, can be measured with a voltmeter, and is displayed on the LCD display after the <SP1> or <SP2> button is pressed
- can be read / written via the DeviceNet, Profibus, EtherCAT, Profinet and RS485 interface.

Switching characteristics and hysteresis


The switching characteristics and the hysteresis of each set point can be programmed (→  44).

Low Trip Point (default)

If the pressure in the vacuum system is lower than the setpoint, the corresponding LED (<SP1> or <SP2>) is lit solid and the corresponding relay is closed.

High & Low Trip Point

Both a High Trip Point and a Low Trip Point are assigned to each setpoint. If the pressure in the vacuum system is higher than the defined High Trip Point threshold, the corresponding LED (<SP1> or <SP2>) is lit and the corresponding relay is closed. If the pressure in the vacuum system is lower than the defined Low Trip Point threshold, the corresponding LED (<SP1> or <SP2>) is lit and the corresponding relay is closed.

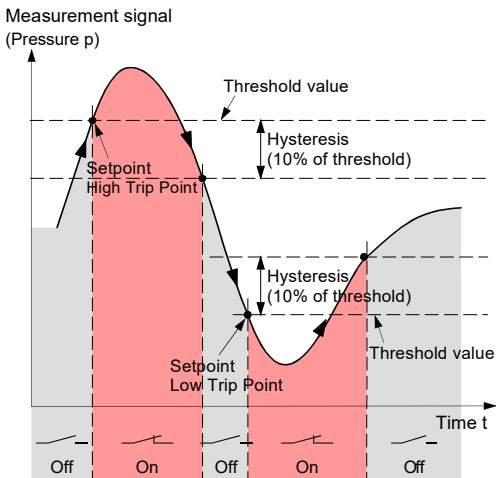



The setpoints can only be programmed via

- the diagnostic port (→ [4])
- the DeviceNet, Profibus, EtherCAT, Profinet and RS485 interface (→ [4], [5], [6], [7], [8], [9]).

4.3.1 Adjusting the Setpoints SP1, SP2





The switching characteristics and the hysteresis can only be programmed via

- the diagnostic port (→  [4])
- the DeviceNet, Profibus, EtherCAT, Profinet and RS485 interface (→  [4], [5], [6], [7], [8], [9]).



The thresholds of the setpoints can be adjusted via

- the buttons on the gauge
- the diagnostic port (→  [4])
- the DeviceNet, Profibus, EtherCAT, Profinet and RS485 interface (→  [4], [5], [6], [7], [8], [9]).



If both a High Trip Point and a Low Trip Point are assigned to a setpoint, Low Trip Point only can be adjusted via the corresponding button on the gauge.



DANGER



Malfunction


If processes are controlled via the signal output, keep in mind that by pushing an <SP> button the measurement signal is suppressed and the corresponding threshold value is output instead. This can cause malfunctions.

Push the <SP> button only if you are sure that no malfunctions will cause.

Adjusting setpoint SP1 with button on the gauge

- 1 Push the <SP1> button with a pin (max. $\varnothing 1.1$ mm) and keep it depressed. The gauge changes to the switching function mode and outputs the current threshold value at the measurement value output or on the LCD for about 5 s and the corresponding <S> on the display blinks.

The threshold setting is increased towards the upper limit until the button is released or the limit is reached.

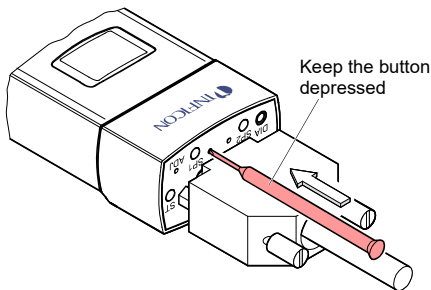

- 2 Push the <SP1> button again:

Fine adjustment within 0...1 s:	the threshold value changes by one unit
Change of direction within 2...3 s:	the threshold adjustment changes its direction

- 3 The <SP1> button is released for more than 5 s: the threshold value is saved and the gauge returns to the measurement mode.




The factory setting of the upper threshold is 10% above the Low Trip Point and 10% below the High Trip Point (hysteresis).



If after programming of the hysteresis the corresponding button <SP1> or <SP2> is pushed, the factory setting of the corresponding hysteresis (10%) is reactivated.


Programming setpoint SP1


Programmable parameters:	Low Trip Point
(→  [4], [5], [6], [7], [8], [9])	Low Trip Enable
	Low Trip Point Hysteresis
	High Trip Point
	High Trip Enable
	High Trip Point Hysteresis
	Setpoint Mode

Adjusting setpoint SP2


The adjustment procedure is the same as for setpoint SP1.


4.4 Diagnostic Port (RS232C Interface)

The diagnostic port <DIA> permits to output the pressure reading and all status information and to enter all settings at the same time (→  [4]).

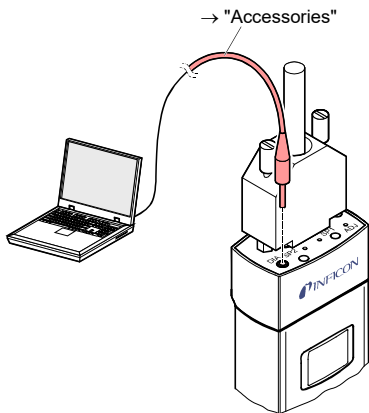

4.5 DeviceNet Operation


Caution



Data transmission errors


The attempt to operate the DeviceNet gauge with the RS232C interface causes data transmission errors.


This DeviceNet gauge must not be operated with the RS232C interface.


Before the gauge is put into operation, it has to be configured for the DeviceNet. A configuration tool and the device specific EDS file (Electronic Data Sheet) in integer or real format are required for this purpose. The appropriate EDS file can be downloaded from our website (www.inficon.com).

Product	Product - Code	EDS file
PSG55x	21	PSGX-PC21 Int.eds
		PSGX-PC21 Real.eds

 Node Address Setting



Set the node address (0 ... 63_{dec}) via the <ADDRESS>, <MSD>, and <LSD> switches (default 63_{dec}). The node address is polled by the firmware when the gauge is switched on. If the setting deviates from the stored value, the new value is taken over into the NVRAM. If a setting higher than 63 is made, the previous node address setting remains valid. If the <MSD> switch is in the <P> position, the node address is programmable via the DeviceNet (→  [5]).

 


Example: Node address = 63:

Data Rate Setting



By means of the <RATE> switch, the data rate can be set to 125 (<1>), 250 (<2>) or 500 kBaud (<5>) (default 500 kBaud).

If the switch is in the <P> position, the data rate is programmable via the DeviceNet (→  [5]).

RATE



Example: Data rate = 250 kBaud:

Transmitting measurement values

Depending on the Fieldbus standard used, the gauge can only transmit measurement values when it is authorized by the master.

When the gauge is put into operation, it is in the IDLE status (provided there is no error) and the value defined in the Safe State is transmitted instead of the measurement value.

Measurement values are transmitted in the EXECUTING status. For the gauge to change from the IDLE to the EXECUTING status, a start instruction must be executed or the I/O-Poll mode must be started in the IDLE status.

Status LED

Two LEDs on the gauge inform on the gauge status and the current DeviceNet status.

<STATUS MOD> (gauge status):

LED	Meaning
off	No supply
blinking green-red	Selftest
lit solid green	Normal operation
lit solid red	Non recoverable error
blinking red	Recoverable error (e.g. missing DeviceNet power supply)

<STATUS NET> (network status):

LED	Meaning
off	Gauge not online: <ul style="list-style-type: none"> • Selftest not yet concluded • No supply, → "STATUS MOD"
blinking green	Gauge online but no communication: <ul style="list-style-type: none"> • Selftest concluded but no communication to other nodes established • Gauge not assigned to any master
lit solid green	Gauge online; necessary connections established
blinking red	One or several input / output connections in "time out" status
lit solid red	Communication error. The gauge has detected an error that impedes communication via the network (e.g. two identical node addresses (MAC IC) or "Bus-off")

4.6 Profibus Operation

 
Caution

Data transmission errors
 The attempt to operate the gauge with the RS232C interface causes data transmission errors.
 This gauge must not be operated with the RS232C interface.

For operating the gauge via Profibus, prior installation of the device specific GSD file is required on the bus master side. This file can be downloaded from our website (www.inficon.com).


Node Address Setting

For unambiguous identification of the gauge in a Profibus environment, a node address is required.



Node address 0 ... 125_{dec}

 The node address is set in hexadecimal form (00 ... 7D_{hex}) via the <MSD> and <LSD> switches. It can not be defined via Profibus.



Example: Node address = 7D_{hex}:

Node address >7D_{hex} (>125_{dec})

The gauge starts with the node address 126_{dec}. The address can now be set via Profibus ("Set slave address", → [6]). Additionally, via the attribute "NO_ADD_CHG" can be defined, if further changes of the node address are permissible.

The values of the nude address and the attribute are stored non-volatile. To change these stored values, start the gauge with a node address $<126_{dec}$. The stored values of the nude address and the attribute are deleted.



Transmitting measurement values

Depending on the Fieldbus standard used, the gauge can only transmit measurement values when it is authorized by the master.

When the gauge is put into operation, it is in the IDLE status (provided there is no error) and the value defined in the Safe State is transmitted instead of the measurement value.

Measurement values are transmitted in the EXECUTING status. For the gauge to change from the IDLE to the EXECUTING status, a start instruction must be executed or the cyclic data exchange must be started in the IDLE status.


4.7 EtherCAT Operation

	<div style="background-color: yellow; padding: 5px; border: 1px solid black; margin-bottom: 10px;">  Caution </div> <p>Data transmission errors</p> <p>The attempt to operate the EtherCAT gauge with the RS232C interface causes data transmission errors.</p> <p>This gauge must not be operated with the RS232C interface.</p>
---	---

For operating the gauge via EtherCAT, prior installation of the device specific ESI file is required on the bus master side. This file can be downloaded from our website (www.inficon.com).

Explicit Device Address Setting (default 00_{hex})

 During device initialization, the device address switches are read by the device firmware. This device address is supported to the master as Explicit Device Identification.



The explicit device address is set in hexadecimal form (00 ... FFF_{hex}) via the <x100>, <x10> and <x1> switches.

Example: Device address = 0xDDD (dec 3549):
 $0x100 * 0xD$ (dec 3328) + $0x10 * 0xD$ (dec 208) + $0x1 * 0xD$ (dec 13)



Status LED

LEDs on the gauge inform on the gauge status and the current EtherCAT status (→ [7], [8]).

4.8 Profinet Operation



Caution




Data transmission errors

The attempt to operate the Profinet gauge with the RS232C interface causes data transmission errors.

This gauge must not be operated with the RS232C interface.

For operating the gauge via Profinet, prior installation of the device specific GSDML file is required on the bus master side. This file can be downloaded from our website (www.inficon.com).

Status LED

LEDs on the gauge inform on the gauge status and the current Profinet status (→  [9]).

Device name

In order to communicate with a Profinet device, the device must first be assigned a name.

5 Deinstallation

DANGER



Contaminated parts

Contaminated parts can be detrimental to health and environment.

Before beginning to work, find out whether any parts are contaminated. Adhere to the relevant regulations and take the necessary precautions when handling contaminated parts.

Caution



Vacuum component

Dirt and damages impair the function of the vacuum component.

When handling vacuum components, take appropriate measures to ensure cleanliness and prevent damages.



Caution




Dirt sensitive area

Touching the product or parts thereof with bare hands increases the desorption rate.

Always wear clean, lint-free gloves and use clean tools when working in this area.

- 1 Vent the vacuum system.
- 2 Put the gauge out of operation.
- 3 Untighten the fastening screw(s) and disconnect the sensor cable.
- 4 Remove gauge from the vacuum system and install the protective lid.

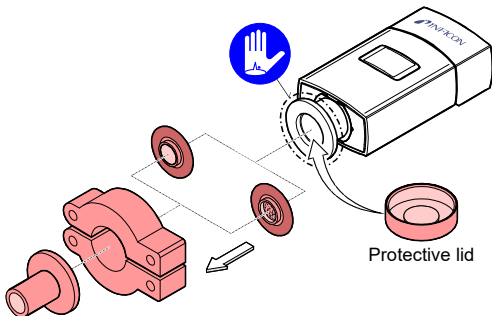

6 Maintenance, Repair



Gauge failures due to contamination and wear and tear, as well as expendable parts (e.g. filament), are not covered by the warranty.

INFICON assumes no liability and the warranty becomes null and void if any repair work is carried out by the end-user or third parties.

6.1 Adjusting the Gauge


The gauge is factory calibrated. Due to long time operation or contamination, a zero drift could occur. Periodically check the zero and adjust it if necessary. In addition, we recommend performing a zero and ATM calibration after each reinstallation.

For adjusting the zero, operate the gauge under the same constant ambient conditions and in the same mounting orientation as normally.

The gauge is adjusted to default values. However, it can also be adjusted to other pressure values, if the exact pressure value is known (reference measurement).

- 1** If you are using a seal with centering ring and filter, check that they are clean or replace them if necessary (→ "Deinstallation").
- 2** Put the gauge into operation and operate it at atmospheric pressure for at least 10 minutes.

- 3 Press the <ADJ> button with a pin (max. $\varnothing 1.1$ mm) and the ATM adjustment is carried out: The Pirani sensor is adjusted to 1000 mbar by default.

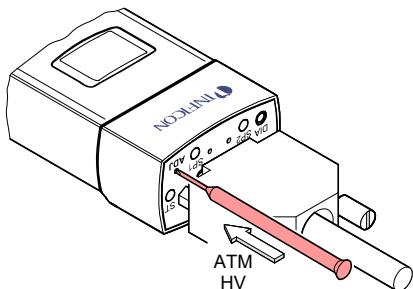

- 4 Evacuate the vacuum system to $p \ll 10^{-5}$ mbar and wait at least 2 minutes.
- 5 Press the <ADJ> button with a pin and the HV adjustment is carried out: The gauge is adjusted to 5×10^{-5} mbar (default).



HV adjustment to another pressure → [4].

- ✓ If the pressure value 4.99×10^{-5} mbar is output at the measurement value output or on the LCD display, the adjustment has been successful. Otherwise, repeat the adjustment procedure.


6.2 Replacing the Sensor

In case of severe contamination or a malfunction, the sensor can be replaced.

Precondition

Gauge deinstalled (→  54).

- 1 Unscrew the hexagon socket screws and remove the sensor without twisting it.

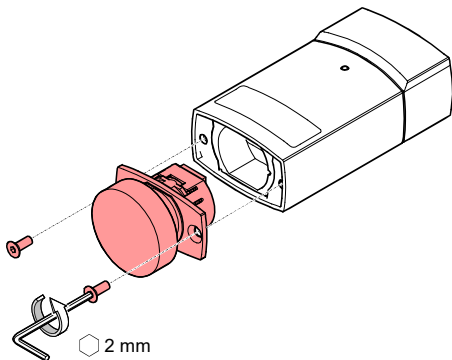



- 2 Place the new sensor without twisting it and lock it with the screws.

6.3 Troubleshooting



In case of an error, it may be helpful to just turn off the mains supply and turn it on again after 5 s.


Problem	Possible cause	Correction
Output signal permanently $\approx 0V$ <ST> lit solid red	Sensor cable defective or not correctly connected	Check the sensor cable
	No supply voltage	Turn on the power supply
	Error	Remedy the error
	Gauge in an undefined status	Turn the gauge off and on again after 5 s (reset)
FAIL PIR1 <ST> lit solid red	Pirani sensor defective	Replace the sensor (→  58)
	Electronics unit not correctly mounted on sensor	Check the connections (electronics – sensor)
FAIL EEPROM <ST> is blinking red	EEPROM error	Turn the gauge off and on again after 5 s (reset)
		Replace the gauge
FAIL SENSOR <ST> lit solid red	Electronics unit not compatible with the sensor	Replace the sensor (→  58)
		Replace the gauge

Troubleshooting sensor (Pirani filament)

If the cause of a fault is suspected to be in the sensor, the following checks can be made with an ohmmeter.

Separate the sensor from the electronics unit (→ 58).

Using an ohmmeter, make the following measurements on the contact pins.

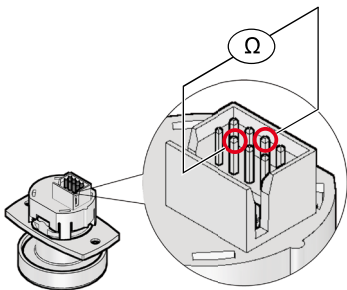

Sensor			Possible cause
PSG550 (W) PSG554 (W)	$40 \pm 1 [\Omega]$	$\geq 40 \Omega$	Contamination
		$\leq 40 \Omega$	Contamination
		∞	Filament broken
PSG552 (Ni)	$35 \pm 1 [\Omega]$	$\geq 35 \Omega$	Contamination
		$\leq 35 \Omega$	Contamination
		∞	Filament broken

Correction

All of the above faults can only be remedied by replacing the sensor (→ 58).

7 Returning the Product



WARNING

Forwarding contaminated products

Contaminated products (e.g. radioactive, toxic, caustic or microbiological hazard) can be detrimental to health and environment.

Products returned to INFICON should preferably be free of harmful substances. Adhere to the forwarding regulations of all involved countries and forwarding companies and enclose a duly completed declaration of contamination^{*)}.

^{*)} Form under www.inficon.com

Products that are not clearly declared as "free of harmful substances" are decontaminated at the expense of the customer. Products not accompanied by a duly completed declaration of contamination are returned to the sender at his own expense.

8 Disposal

DANGER



Contaminated parts

Contaminated parts can be detrimental to health and environment.

Before beginning to work, find out whether any parts are contaminated. Adhere to the relevant regulations and take the necessary precautions when handling contaminated parts.



WARNING



Substances detrimental to the environment

Products or parts thereof (mechanical and electric components, operating fluids etc.) can be detrimental to the environment.

Dispose of such substances in accordance with the relevant local regulations.

Separating the components

After disassembling the product, separate its components according to the following criteria:

- Contaminated components
Contaminated components (radioactive, toxic, caustic or biological hazard etc.) must be decontaminated in accordance with the relevant national regulations, separated according to their materials, and disposed of.
- Other components
Such components must be separated according to their materials and recycled.

9 Accessories

	Ordering No.
Centering ring with fine filter DN 16 ISO-KF	211-097
Communication adapter (2 m) ⁷⁾	303-333

⁷⁾ The diagnostic software (Windows NT, XP) can be downloaded from our website.

10 Spare Parts

When ordering spare parts, always indicate:








- all information on the product nameplate
- description and ordering number

Sensor for gauge with tungsten (W) filament		Ordering No.	
PCG550	3PI1-0x1-xxxx	DN 16 ISO-KF	355-925
	3PI6-0x1-xxxx		
	3PI1-0x2-xxxx	DN 16 ISO-KF, long tube	355-926
	3PI6-0x2-xxxx		
	3PI1-0x4-xxxx	DN 16 CF-F	355-927
	3PI6-0x4-xxxx		
	3PI1-0x5-xxxx	DN 16 CF-R, long tube	355-928
	3PI6-0x5-xxxx		
	3PI1-0x6-xxxx	DN 25 ISO-KF	355-929
	3PI6-0x6-xxxx		
	3PI1-0xD-xxxx	4 VCR female	355-932
	3PI6-0xD-xxxx		
	3PI1-0xE-xxxx	8 VCR female	355-931
	3PI6-0xE-xxxx		
	3PI1-0xF-xxxx	1/8" NPT	355-930
	3PI6-0xF-xxxx		
	3PI1-0xK-xxxx	29×29 mm	355-934
	3PI6-0xK-xxxx		
	3PI1-0xM-xxxx	4 VCR 90° female	355-935
	3PI6-0xM-xxxx		
3PI1-0xN-xxxx	7/16-20 UNF male	355-933	
3PI6-0xN-xxxx			

Sensor for gauge with nickel (Ni) filament		Ordering No.	
PCG552	3PI2-0x1-xxxx	DN 16 ISO-KF	355-936
	3PI7-0x1-xxxx		
	3PI2-0x2-xxxx	DN 16 ISO-KF, long tube	355-937
	3PI7-0x2-xxxx		
	3PI2-0x4-xxxx	DN 16 CF-F	355-938
	3PI7-0x4-xxxx		
	3PI2-0x5-xxxx	DN 16 CF-R, long tube	355-939
	3PI7-0x5-xxxx		
	3PI2-0x6-xxxx	DN 25 ISO-KF	355-940
	3PI7-0x6-xxxx		
	3PI2-0xD-xxxx	4 VCR female	355-943
	3PI7-0xD-xxxx		
	3PI2-0xE-xxxx	8 VCR female	355-942
	3PI7-0xE-xxxx		
	3PI2-0xF-xxxx	1/8" NPT	355-941
	3PI7-0xF-xxxx		
	3PI2-0xK-xxxx	29x29 mm	355-945
	3PI7-0xK-xxxx		
	3PI2-0xM-xxxx	4 VCR 90° female	355-946
	3PI7-0xM-xxxx		
3PI2-0xN-xxxx	7/16-20 UNF male	355-944	
3PI7-0xN-xxxx			

Sensor for gauge with Al ₂ O ₃ coated filament		Ordering No.	
PCG554	3PI3-0x1-xxxx	DN 16 ISO-KF	355-947
	3PI8-0x1-xxxx		
	3PI3-0x2-xxxx	DN 16 ISO-KF, long tube	355-948
	3PI8-0x2-xxxx		
	3PI3-0x4-xxxx	DN 16 CF-F	355-949
	3PI8-0x4-xxxx		
	3PI3-0x5-xxxx	DN 16 CF-R long tube	355-950
	3PI8-0x5-xxxx		
	3PI3-0x6-xxxx	DN 25 ISO-KF	355-951
	3PI8-0x6-xxxx		
	3PI3-0xD-xxxx	4 VCR female	355-954
	3PI8-0xD-xxxx		
	3PI3-0xE-xxxx	8 VCR female	355-953
	3PI8-0xE-xxxx		
	3PI3-0xF-xxxx	1/8" NPT	355-952
	3PI8-0xF-xxxx		
	3PI3-0xK-xxxx	29×29 mm	355-956
	3PI8-0xK-xxxx		
	3PI3-0xM-xxxx	4 VCR 90° female	355-957
	3PI8-0xM-xxxx		
3PI3-0xN-xxxx	7/16-20 UNF male	355-955	
3PI8-0xN-xxxx			

Further Information

-  [1] Operating Manual
Single-Channel Controller VGC401
tinb01d1 German
tinb01e1 English
INFICON AG, LI-9496 Balzers, Liechtenstein
-  [2] Operating Manual
Two and Three Channel Measurement and Control Unit
VGC402, VGC403
tinb07d1 German
tinb07e1 English
INFICON AG, LI-9496 Balzers, Liechtenstein
-  [3] Operating Manual
One, Two and Three Channel Measurement and Control
Unit VGC501, VGC502, VGC503
tina96d1 German
tina96e1 English
INFICON AG, LI-9496 Balzers, Liechtenstein
-  [4] Communication Protocol
Serial Interface RS232C, RS485C
PCG55x, PSG55x
tira59d1 German
tira59e1 English
INFICON AG, LI-9496 Balzers, Liechtenstein
-  [5] Communication Protocol
DeviceNet™ PCG55x, PSG55x
tira58e1 English
INFICON AG, LI-9496 Balzers, Liechtenstein
-  [6] Communication Protocol
Profibus PCG55x, PSG55x
tira56e1 englisch
INFICON AG, LI-9496 Balzers, Liechtenstein
-  [7] Communication Protocol
EtherCAT® PCG55x, PSG55x (ETG.5003.2080 S (R) V1.0.0)
tira85e1 English
INFICON AG, LI-9496 Balzers, Liechtenstein

- 📖 [8] Communication Protocol
 EtherCAT® PCG55x, PSG55x (ETG.5003.2080 S (R) V1.3.0)
 tirb51e1 English
 INFICON AG, LI-9496 Balzers, Liechtenstein
- 📖 [9] www.inficon.com
 Communication Protocol
 Profinet PCG55x, PSG55x
 tirb72e1 English
 INFICON AG, LI-9496 Balzers, Liechtenstein
- 📖 [10] Common Industrial Protocol (CIP™) Ed. 3.5 and
 DeviceNet™ Adaption of CIP Ed. 1.6 (Open DeviceNet
 Vendor Association)
- 📖 [11] www.odva.org
 Open DeviceNet Vendor Association, Inc. DeviceNet™
 Specifications
- 📖 [12] IEC 61158 Type 3 elements: Industrial communication
 networks – Fieldbus specifications
 IEC 61784: Industrial communication networks –
 Fieldbus profiles
- 📖 [13] www.profibus.com
 Profibus user organization
- 📖 [14] ETG.5003.1 S (R) V1.0.0: Semiconductor Device profile
 – Part 1: Common Device Profile (CDP)
- 📖 [15] ETG.5003.2080 S (R) V1.0.0: Semiconductor Device
 profile – Part 2080: Specific Device Profile (SDP):
 Vacuum Pressure Gauge
- 📖 [16] ETG.5003.1 S (R) V1.1.0: Semiconductor Device profile
 – Part 1: Common Device Profile (CDP)
- 📖 [17] ETG.5003.2080 S (R) V1.3.0: Semiconductor Device
 profile – Part 2080: Specific Device Profile (SDP):
 Vacuum Pressure Gauge

ETL Certification

RECOGNIZED
COMPONENT



Intertek
3103457

ETL LISTED

The products PSG550, PSG552 and PSG554

- conform to the UL Standard UL 61010-1
- are certified to the CAN/CSA Standard C22.2 No. 61010-1-12

EU Declaration of Conformity



We, INFICON, hereby declare, that the equipment mentioned below comply with the following directives:

- 2014/30/EU, OJ L 96/79, 29.3.2014
(EMC directive; Directive on electromagnetic compatibility)
- 2011/65/EU, OJ L 174/88, 1.7.2011
(RoHS directive; Directive on the restriction of the use of certain hazardous substances in electrical and electronic equipment)

Pirani Standard Gauge

PSG550, PSG552, PSG554

Standards

Harmonized and international / national standards and specifications:

- EN 61000-6-2:2005 (EMC: generic immunity standard)
- EN 61000-6-3:2007 + A1:2011 (EMC: generic emission standard)
- EN 61010-1:2010 + A1:2019 + A1:2019/AC2019
(Safety requirements for electrical equipment for measurement, control and laboratory use)
- EN 61326-1:2013; Group 1, Class B (EMC requirements for electrical equipment for measurement, control and laboratory use)

Manufacturer / Signatures

INFICON AG, Alte Landstraße 6, LI-9496 Balzers

18 January 2023

18 January 2023



Dr. Christian Riesch
Head of Development



Marco Kern
Product Manager

UKCA Declaration of Conformity



We, INFICON, hereby declare that the equipment mentioned below comply with the provisions of the following regulations:

- S.I. 2016/1091, 11.2016
(EMC Regulation; Regulation relating to electromagnetic compatibility)
- 2012/3032, 12.2012
(RoHS Regulation; Regulation on the restriction of the use of certain hazardous substances in electrical and electronic equipment)

Pirani Standard Gauge

PSG550, PSG552, PSG554

Standards

Harmonized and international / national standards and specifications:

- EN 61000-6-2:2005 (EMC: generic immunity standard)
- EN 61000-6-3:2007 + A1:2011 (EMC: generic emission standard)
- EN 61010-1:2010 + A1:2019 + A1:2019/AC2019
(Safety requirements for electrical equipment for measurement, control and laboratory use)
- EN 61326-1:2013; Group 1, Class B (EMC requirements for electrical equipment for measurement, control and laboratory use)

Manufacturer / Signatures

INFICON AG, Alte Landstraße 6, LI-9496 Balzers

18 January 2023

18 January 2023




Dr. Christian Riesch
Head of Development

Marco Kern
Product Manager

Original: German tina60d1-c (2023-01)



tina60e1-c



LI-9496 Balzers
Liechtenstein
Tel +423 / 388 3111
Fax +423 / 388 3700
reachus@inficon.com

www.inficon.com