

# QUICK START GUIDE

## How to set the PPM Adjustment Factor on the IRwin Methane Leak Detector

1

Press  followed by 

2

Use  to navigate to *General* and press 



3

Use  to navigate to *Misc* and press 



4

Use  to select *PPM Adjustment Factor*



5

If prompted, enter the Intermediate password code and repeat step 4. If not prompted, go ahead to the next step

6

Use  to navigate to wanted amount, press 



7

Press  followed by  and 