

# QUICK START GUIDE


How to set IR Ethane Analysis to ALWAYS on the IRwin Methane Leak Detector

1


Press  followed by 


2

Use  to navigate to *IR Ethane Analysis* and press 

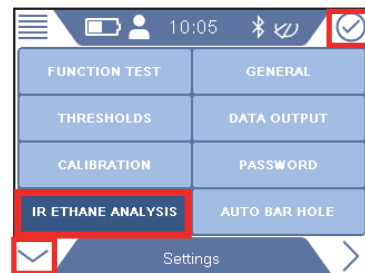




3

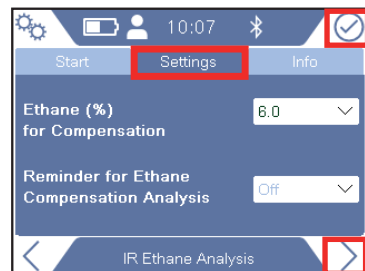Use  to navigate to *Settings* and press 




4

Use  to navigate to *Reminder for Ethane Compensation Analysis* and press 

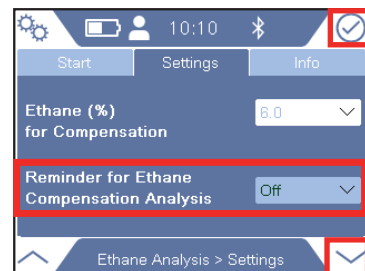



6

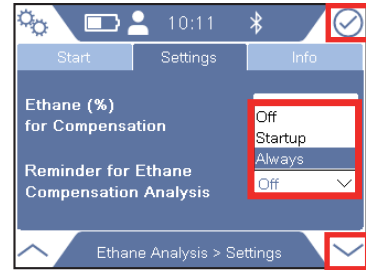Use  to navigate to *Always* and press 



7

Press  followed by  and 