

# QUICK START GUIDE

How to Disable the Auto Rotate Function on your IRwin Methane Leak Detector

1

Press  followed by 


2

Use  to navigate to *General* and press 




3

With *Display* selected, press 

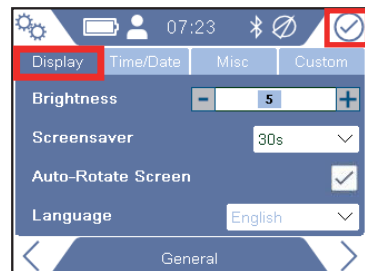


4

Use  to navigate to *Auto-Rotate Screen* and press 

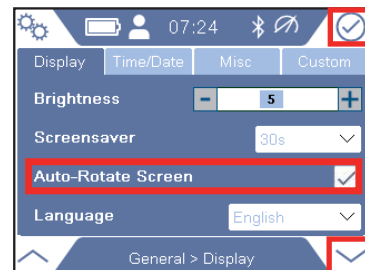



5

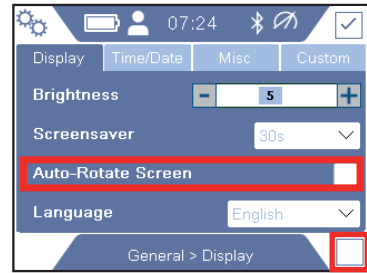Press  to uncheck *Auto-Rotate Screen*, followed by 



6

Press  followed by  and 