

Operating Manual

Quantus[®] HP100

Gas Analysis System



INFICON

Two Technology Place

East Syracuse, NY 13057-9714

Table of Contents

1	Warranty	6
2	Trademarks, Disclaimers, and Copyrights	7
3	Safety Information	8
3.1	Definition of Safety and Informational Messages	8
3.2	Liability and Warranty	9
3.3	Training	9
3.4	Safety Precautions When Using Instrument	9
3.4.1	Before You Begin	9
3.4.2	General Warnings and Cautions	10
4	Introduction	12
4.1	Overview and Purpose	12
4.2	Description of Quantus HP100	12
4.2.1	Quantus HP100 Sensor Overview	12
4.2.2	Quantus HP100 Microplasma Sensor Cell	13
4.2.3	Quantus HP100 Wetted Materials	13
4.2.4	Quantus HP100 Electronic Control Module	13
4.3	Computer System Requirements	14
4.4	AUX I/O Connector	14
4.4.1	AUX I/O Specifications	14
4.4.1.1	Digital I/O	14
4.4.1.2	Relay	14
4.4.1.3	Valve Driver	14
4.4.2	AUX I/O Pin Designations	15
4.5	Environmental Requirements	16
4.5.1	Use	16
4.5.2	Altitude Range	16
4.5.3	Maximum Humidity	16
4.5.4	Pollution Degree	16
4.5.5	Maximum Operating Temperature	16
4.5.6	Minimum Operating Temperature	16
4.5.7	Storage Temperature	16
4.5.8	Clean Room Requirements	16
4.5.9	Anti-Static Conditions	16
4.6	Physical Specifications	17
4.6.1	Physical Dimensions and Weight	17
4.6.2	Physical Properties	18
5	Installation	19

5.1	Quantus HP100 Precautions.....	19
5.2	Quantus HP100 Installation Requirements	21
5.3	Installing Quantus HP100	22
5.3.1	Connecting the Ethernet Interface	22
6	Connecting Quantus HP100.....	23
6.1	Introduction.....	23
6.2	General Networking Information	23
6.2.1	IP Addresses	23
6.2.2	Subnetworking.....	24
6.3	Quantus HP100 IP Address	24
6.3.1	Using the IMSSU to Change the IP Address.....	25
6.3.1.1	IMSSU Capabilities	26
6.3.1.2	Change the Computer IP Address.....	27
6.4	Connecting Quantus HP100	31
6.4.1	Connecting a Single Quantus HP100.....	31
6.4.1.1	Single Quantus HP100 Direct Connection Installation	31
6.4.1.2	Installing a Single Quantus HP100 on an Existing Local Network	31
6.4.2	Connecting Multiple Quantus HP100 Sensors.....	32
6.4.2.1	Installing Multiple Quantus HP100 Sensors Directly to a Host Computer	32
6.4.2.2	Installing Multiple Quantus HP100 Sensors on an Existing Local Network	32
7	Operation	33
7.1	Introduction.....	33
7.2	Sensor Status Indicators.....	33
7.3	Spread Spectrum (SS)	34
8	Maintenance	35
8.1	Introduction.....	35
8.2	Cleaning	35
8.3	Replacing the Microplasma Sensor Cell (MSC)	35
9	Accessories and Spare Parts	41
10	Service and Technical Support	42
10.1	How to Contact Customer Support	42
10.2	Returning an Instrument to INFICON	42
11	Appendix.....	43
11.1	Introduction to Optical Emission Spectroscopy	43
11.2	Origin of Optical Emission Theory	43
11.3	Complex Optical Emission Spectra	44
11.3.1	Increasing Numbers of Electrons	44
11.3.2	Molecular Combinations of Atoms	45
11.4	Quantus HP100 and Optical Emission Spectroscopy	45

12 Declaration of Conformity 47

1 Warranty

WARRANTY AND LIABILITY - LIMITATION: Seller warrants the products manufactured by it, or by an affiliated company and sold by it, and described on the reverse hereof, to be, for the period of warranty coverage specified below, free from defects of materials or workmanship under normal proper use and service. The period of warranty coverage is specified for the respective products in the respective Seller instruction manuals for those products but shall not be less than one (1) year from the date of shipment thereof by Seller. Seller's liability under this warranty is limited to such of the above products or parts thereof as are returned, transportation prepaid, to Seller's plant, not later than thirty (30) days after the expiration of the period of warranty coverage in respect thereof and are found by Seller's examination to have failed to function properly because of defective workmanship or materials and not because of improper installation or misuse and is limited to, at Seller's election, either (a) repairing and returning the product or part thereof, or (b) furnishing a replacement product or part thereof, transportation prepaid by Seller in either case. In the event Buyer discovers or learns that a product does not conform to warranty, Buyer shall immediately notify Seller in writing of such non-conformity, specifying in reasonable detail the nature of such non-conformity. If Seller is not provided with such written notification, Seller shall not be liable for any further damages which could have been avoided if Seller had been provided with immediate written notification.

THIS WARRANTY IS MADE AND ACCEPTED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, WHETHER OF MERCHANTABILITY OR OF FITNESS FOR A PARTICULAR PURPOSE OR OTHERWISE, AS BUYER'S EXCLUSIVE REMEDY FOR ANY DEFECTS IN THE PRODUCTS TO BE SOLD HEREUNDER. All other obligations and liabilities of Seller, whether in contract or tort (including negligence) or otherwise, are expressly EXCLUDED. In no event shall Seller be liable for any costs, expenses or damages, whether direct or indirect, special, incidental, consequential, or other, on any claim of any defective product, in excess of the price paid by Buyer for the product plus return transportation charges prepaid.

No warranty is made by Seller of any Seller product which has been installed, used or operated contrary to the Seller's written instruction manual or which has been subjected to misuse, negligence or accident or has been repaired or altered by anyone other than the Seller or which has been used in a manner or for a purpose for which the Seller product was not designed nor against any defects due to plans or instructions supplied to the Seller by or for Buyer.

This manual is intended for private use by INFICON Inc. and its customers. Contact INFICON before reproducing its contents.



These instructions do not provide for every contingency that may arise in connection with the installation, operation, or maintenance of this equipment. Should you require further assistance, please contact INFICON.

2 Trademarks, Disclaimers, and Copyrights

Trademarks

The trademarks of the products mentioned in this manual are held by the companies that produce them.

INFICON[®], FabGuard[®], and Quantus[®] are registered trademarks of INFICON Holding AG.

Windows[®] is a registered trademark of Microsoft Corporation.

All other brand and product names are trademarks or registered trademarks of their respective companies.

Software Copyrights

This product contains embedded software protected under the following copyrights:
Copyright INFICON Inc.

Disclaimer

The information contained in this operating manual is believed to be accurate and reliable. However, INFICON assumes no responsibility for its use and shall not be liable for any special, incidental, or consequential damages related to the use of this product.

Due to our continuing program of product improvements, specifications are subject to change without notice.

Copyright

©2025 All rights reserved.

Reproduction or adaptation of any part of this document without permission is unlawful.

3 Safety Information

All work described in this document may only be carried out by persons who have suitable technical training and the necessary experience or who have been instructed by the end user of the product.

3.1 Definition of Safety and Informational Messages

When using this document, please pay attention to the safety and informational messages found throughout. For the purposes of this manual they are defined as follows:



DANGER

This type of message indicates a hazardous situation that will result in death or serious injury if proper precautions are not taken.



WARNING

This type of message indicates a hazardous situation that could result in death or serious injury if proper precautions are not taken.



WARNING

This type of message indicates that dangerous electrical voltages are present that could result in personal injury if proper precautions are not taken.



WARNING

This type of message indicates that high temperatures are present that could result in personal injury if proper precautions are not taken.

WARNING

This type of message warns against actions that could cause extensive equipment and/or environmental damage.



CAUTION

This type of message indicates a hazardous situation that could result in minor or moderate injury if proper precautions are not taken.

⚠ CAUTION

This type of message cautions against actions that may cause an instrument malfunction, minor equipment damage, and/or the loss of data.

NOTICE

This type of message indicates information that is considered important but is not related to any type of hazard.



This type of message indicates information that is considered important but is not related to any type of hazard.

3.2 Liability and Warranty

INFICON assumes no liability and the warranty becomes null and void if the custodian or third parties: (1) disregard the information in this document, (2) use the product in a non-conforming manner, (3) make any kind of changes (modifications, alterations, etc.) to the product, or (4) use the product with accessories not listed in the corresponding product documentation.

The custodian assumes the responsibility in conjunction with the process media used.

3.3 Training

For the optimal use of this product, INFICON offers application, operation, and maintenance courses. Your INFICON partner would be glad to provide the information.

3.4 Safety Precautions When Using Instrument

Misuse of the instrument can damage the instrument and may cause bodily harm. The safety messages in this document are provided to protect the user, as well as to optimize instrument performance. Before operating the instrument, the user must read and understand all safety messages and take adequate precautions to mitigate hazards or equipment damage.

3.4.1 Before You Begin

1. Review the installation process thoroughly before beginning work.
2. Confirm that the sensor materials of construction and surfaces are compatible with the exposed process environment.
3. Confirm that the sensor is installed in an approved manner.

3.4.2 General Warnings and Cautions

Quantus HP100 generates high voltages, radio-frequency signals, and light (ultraviolet, visible, and infrared). Aside from a field-replaceable MSC, Quantus HP100 has no user-serviceable parts.



WARNING

To prevent injury, and to prevent voiding the factory warranty, repairs to Quantus HP100 should only be performed by factory-authorized personnel.



WARNING

Never operate the sensor without its protective enclosures. The sensor should only be powered when fully mounted using the KF vacuum flange interface to an appropriate system to be monitored.



WARNING

Never install or power the sensor in a position where a user can physically access or view directly the microplasma.



WARNING

Never touch the microplasma source or its assembly within its containment cavity.



WARNING

Never view directly the microplasma discharge.



CAUTION

Never operate the sensor when the interior of the microplasma sensor cell is exposed to ambient or other sources of light, such as another process. Exposure to external light sources will interfere with system performance.



CAUTION

Never power the sensor with an unapproved power supply.



CAUTION

When installing the product, make sure it is properly secured in case of a seismic event.

**⚠ CAUTION**

Do not replace the power cord with an inadequately rated cord. The cord must be rated 10 A or higher.

**⚠ CAUTION**

The product is part of the end user's application. Fire protection features should be provided by the end user.

⚠ CAUTION

Never prevent airflow by blocking the vent holes or the cooling fan on the sensor; doing so could cause damage to the sensor and unpredictable results or loss of data could occur.

4 Introduction

4.1 Overview and Purpose

The Quantus HP100 gas analysis system detects changes in gas characteristics such as composition, pressure, or concentration. Detecting such changes allows the user to perform critical tasks including, but not limited to, leak detection, endpoint detection, and process monitoring.

Quantus HP100 operates using the principal of optical emission spectroscopy. A gas sample, flow, or chamber of interest is presented to a proprietary Microplasma Sensor Cell (MSC) inside the sensor that excites the gas, causing it to produce a plasma. The light emitted by the plasma has a spectrum that provides information about the atoms and molecules present. The optical emission spectrum is acquired by a spectrometer in the sensor. The resulting spectra are analyzed by INFICON FabGuard® analysis software on a control computer. The acquisition and analysis are performed as a function of time and typically are coordinated in relation to tool communication and process information.

4.2 Description of Quantus HP100

The Quantus HP100 gas analysis system monitors changes in gas composition over the pressure range of 1 Torr to 450 Torr for argon and 1 Torr to 120 Torr for nitrogen; operating range varies for other gas species. Quantus HP100 also monitors changes in gas consumption in many corrosive gas environments. In some cases, Quantus HP100 may function beyond these pressure ranges. However, the ability to ignite plasma may be affected by the species of gas present. Therefore, the pressure range for plasma ignition, or for sustaining the plasma, may be greater or lesser depending on the application. For application-specific support, please contact INFICON.

4.2.1 Quantus HP100 Sensor Overview

Quantus HP100 is designed for applications that generally operate in a range of 1 Torr to 450 Torr, with the exact pressure range being gas composition dependent. The range of 1 Torr to 450 Torr is tested with argon. Quantus HP100 is designed and manufactured to withstand exposure to certain corrosive and aggressive gases, and it is recommended to review the use case with INFICON experts. Quantus HP100 has two main function blocks: an Electronic Control Module (ECM) and a Microplasma Sensor Cell (MSC). The ECM occupies the larger portion of the housing while the MSC occupies the smaller portion of the housing.

4.2.2 Quantus HP100 Microplasma Sensor Cell

Quantus HP100 creates a plasma by coupling energy into the gas utilizing a patented antenna in the MSC. The antenna is protected by a layer of alumina. This provides Quantus HP100 with its unique operating capabilities that allow the sensor to operate in certain corrosive and aggressive environments. The MSC can be replaced in the field.



4.2.3 Quantus HP100 Wetted Materials

The Quantus HP100 MSC materials that are exposed to the vacuum chamber are summarized in the table below.

Quantus HP100 MSC Component	Wetted Materials
Cell body	Stainless steel
Window	Sapphire
Antenna	Alumina
O-rings	Viton®
High-voltage pin	Stainless steel, alumina

4.2.4 Quantus HP100 Electronic Control Module

The Quantus HP100 ECM includes an optical spectrometer and control electronics. It is powered by a 24 V (DC) power supply and has two cooling fans and six status indicators. Primary communication is through an Ethernet port. Auxiliary I/O is available through a 15-pin D-sub connector.

4.3 Computer System Requirements

Quantus HP100 utilizes INFICON FabGuard analysis software with the following computer system requirements.

	Minimum Requirement	Recommended
Processor	Intel® Pentium 4, 3 GHz	Intel® Core 2 or greater
Memory	8 GB	16 GB or greater
Hard drive	80 GB	160 GB or greater
Resolution	15 in. (1024 × 768)	17 in. (1280 × 1024)
Operating system	Windows® 10	Windows® 10 or 11

Quantus HP100 requires the Java™ Runtime Environment (JRE), version 6 or higher. Many computers already have Java installed. If necessary, Java can be downloaded from www.java.com. Note that 32-bit operating systems require the 32-bit JRE, while 64-bit operating systems require the 64-bit JRE.

4.4 AUX I/O Connector

4.4.1 AUX I/O Specifications

The auxiliary (AUX) I/O connector on the ECM is a 15-pin D-sub male connector. A 15-pin D-sub female connector is required for connection.

4.4.1.1 Digital I/O

Signals I/O 0 to I/O 3 can be set or read by Quantus HP100. These four (input or output) bidirectional autosensing level shifters are TTL-compatible I/O connections rated for 0–5 V (DC) with 10 kΩ pull-up impedance. As digital output connections, each can source a maximum of 0.5 mA. As digital input connections, each can sink a maximum of 1.0 mA. The user is responsible for limiting the input current to the 1.0 mA maximum. Digital I/O are queried approximately every millisecond, and are set to input by default.


4.4.1.2 Relay

A contact-closure single-pole double-throw (SPDT) relay is included in the Quantus HP100 ECM. Maximum current is 0.5 A, and maximum voltage is 50 V (AC). The relay is controlled by FabGuard software. The normal (inactive) state is electrical continuity between pins 1 and 3, with pin 2 open. The active state switches to continuity between pins 2 and 3, with pin 1 open.

4.4.1.3 Valve Driver

The 24 V (DC) valve driver is powered by the ECM and is controlled by FabGuard analysis software. The valve is open when the circuit is active, which is when pin 8 is set to 24 V (DC) by the ECM. The valve driver can support up to 120 mA of current draw at 24 V (DC). If a sufficient overcurrent condition persists for more than 15 μs, the valve controller will turn off.

4.4.2 AUX I/O Pin Designations

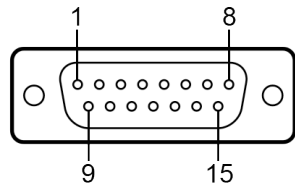

Pin #	Signal	Pin #	Signal
1	Relay NC	9	I/O 3
2	Relay NO	10	No connection
3	Relay common	11	No connection
4	I/O 2	12	GND
5	I/O 1	13	GND
6	I/O 0	14	GND
7	Valve control return	15	GND
8	Valve + 24 V (DC)		

4.5 Environmental Requirements

4.5.1 Use

The instrument is for indoor use only. IP rating is IPX0.

4.5.2 Altitude Range

The instrument can be used up to an altitude of 2000 m (6561 ft.).
Contact INFICON for operation instructions at higher altitudes.

4.5.3 Maximum Humidity

The instrument can be used up to 80% relative humidity (no condensation).

4.5.4 Pollution Degree

Pollution degree of 2 (per EN61010-1:2010).

4.5.5 Maximum Operating Temperature

The maximum ambient operating temperature is 50°C (122°F).

4.5.6 Minimum Operating Temperature

The minimum operating temperature is 0°C (32°F).

4.5.7 Storage Temperature

The storage temperature is -10° to 60°C (14° to 140°F).

4.5.8 Clean Room Requirements

The instrument is clean room compatible.

4.5.9 Anti-Static Conditions



The instrument passes standard EN 61326-1:2020.

4.6 Physical Specifications

4.6.1 Physical Dimensions and Weight

Dimensions (H × W × L): 162 mm × 153 mm × 210 mm (6.4 in. × 6.0 in. × 8.3 in.)

Approximate weight: 3.7 kg (8.2 lb.)

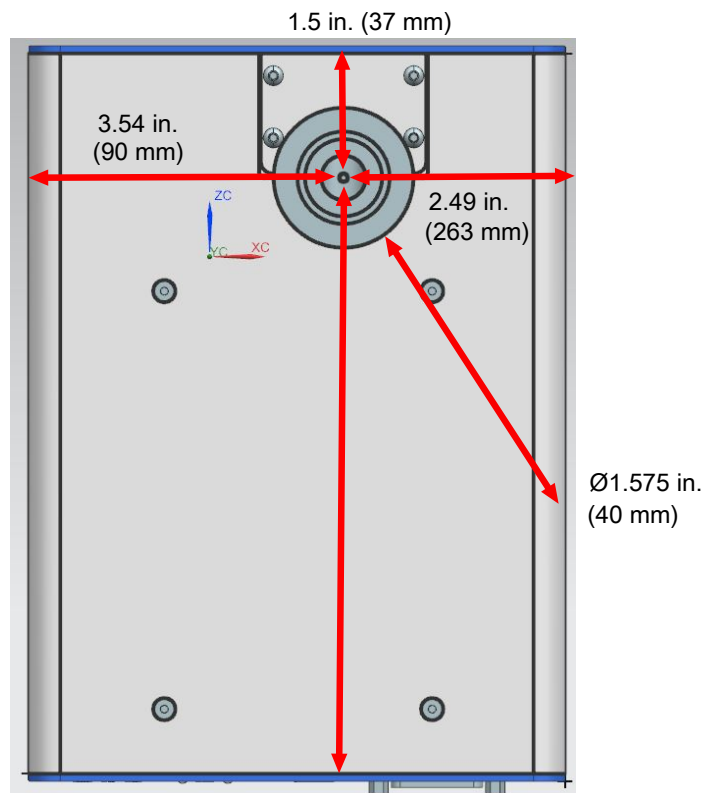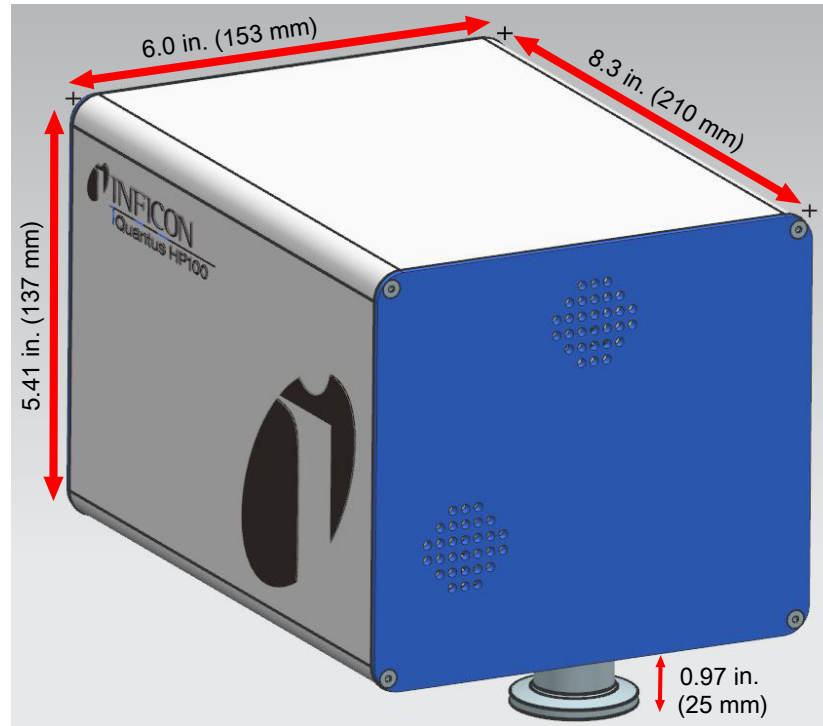

4.6.2 Physical Properties

Performance

Parameter	HP100
Technology	Optical emission spectroscopy with integrated microwave microplasma, spectrometer, and RF power supply
Spectrometer performance	200–850 nm wavelengths (UV-Vis) 16-bit full-scale resolution, 3648 pixels
Optical resolution	1.34 nm
Exposure time	Minimum of 1 ms
Sampling frequency	Maximum of 20 Hz
Detection limit	To low PPM levels (application dependent)

Gas Sampling Interface

Parameter	HP100
Sampling environment	1-450 Torr for argon, 1-120 Torr for nitrogen; operating range varies for other gas species
Vacuum fitting	KF25
Maximum flange temperature	80°C
Serviceability	Sensor cell is field replaceable

Facilities

Parameter	HP100
Operating temperature range	0–50°C (noncondensing, sensor cell 80°C)
Power requirements	24 V (DC) @ 2.5 A (AC/DC converter provided)
Power consumption	<30 W (typical, steady-state operation)
Carrier gases	None required
Mounting options	Direct mount via KF25 flange
Isolation valve	Optional

5 Installation

Before you begin:

- CONFIRM that use of a microplasma will not adversely affect the gases, processes, or equipment being monitored.
- FOLLOW all safety precautions.
- REVIEW the installation process thoroughly before beginning work.



⚠ WARNING

DO NOT operate the sensor without its protective enclosure.



⚠ WARNING

DO NOT touch the microplasma within the microplasma source cell's cavity.



⚠ WARNING

The Quantus HP100 system must be electrically grounded through the KF25 connection flange to the vacuum chamber or system to which it is installed. Failure to ensure proper electrical grounding could result in a shock hazard and/or personal injury.

⚠ CAUTION

DO NOT block the fan or vent holes on the Electronic Control Module.

5.1 Quantus HP100 Precautions



⚠ WARNING

The gas sensors utilize radio-frequency power supplies and high-voltage power supplies, and in their intended use may generate light emission from the ultraviolet to the infrared. High-voltage, radio-frequency, and ultraviolet exposure may be hazardous. It is the responsibility of the user to only operate the sensor when it is installed properly.

A proper installation meets the following criteria:

- Ensures that the environment is appropriate for operation of the sensors. The Quantus HP100 wetted materials are stainless steel, sapphire, Viton, and alumina. The user should evaluate if any chemicals, gases, or their byproducts to which the sensor may be exposed present the potential for corrosion of these materials and if such corrosion would present a safety hazard. Should such a hazard exist, the user should ensure that proper safety monitoring capabilities are installed at the process tool and/or facility level (for example, facility toxic or hazardous gas monitoring).

- Ensures that users cannot physically access the internal portions of the sensor in which the microplasma operates. Typically, the sensor is installed on a vacuum system whose containment vessel prevents access.
- Ensures that the user cannot directly view the microplasma, as UV emission may be present.
- Is protected from exposure of the interior of the microplasma sensor cell to other sources of light, including ambient light or light generated elsewhere in the process equipment. Any other light sources seen by the Quantus HP100 spectrometer will make data analysis difficult or impossible.



⚠ WARNING

Power **SHOULD NOT** be connected to the sensor unless the above conditions are met. It is the responsibility of the user to ensure that the above conditions are met, including thorough training.



⚠ CAUTION

Do not replace the power cord with an inadequately rated cord. The cord must be 10 A or higher.



⚠ CAUTION

The DC power connector is intended to be used to remove power from the system. Ensure there is enough room to disconnect the power cord when needed.

Quantus HP100 requires a Class 1, limited DC power supply with a minimum rating of 24 V @ 2.5 A. INFICON offers an 80–264 V (AC) to 24 V (DC) power converter that meets all power supply requirements. Should the user supply power independently, the user must ensure that the supply has at least the minimum capability and is short-circuit and overcurrent protected. At a minimum, the supply should be compliant with UL/CSA 60950-1.

Quantus HP100 sensors are intended to be used in clean, protected environments and are not to be used in outdoor or indoor installations where significant amounts of dust, oil, or other vapors are present, unless a separate provision is made to provide a suitable environmental enclosure. The sensors are intended to be used in clean room environments.



⚠ WARNING


There are no user-serviceable parts in either the ECM or MSC, and the user should not attempt to open, disassemble, or tamper with these components. Doing so will void the warranty and may either (1) render the product noncompliant with safety certifications and/or (2) expose the user to hazardous voltages or emissions.

5.2 Quantus HP100 Installation Requirements

Power ¹⁾	24 V (DC) @ 2.5 A; includes 80–264 V (AC) to 24 V (DC) converter with connector, 50/60 Hz compatible (provided)
Vacuum chamber interface	KF25 flange and clamp (provided)
Communications	Ethernet cable (provided) with a length up to 30 ft (9.1 m)
Approximate weight	3.7 kg (8.2 lb.)
Computer interface	PC with Microsoft Windows 10 or 11 and an Ethernet interface is required to run FabGuard
Auxiliary I/O	15-pin D-sub male interface

¹⁾ Connector pin designations:

Pin #	Connection
1	Ground
2	Ground
3	+24 V (DC)
4	+24 V (DC)

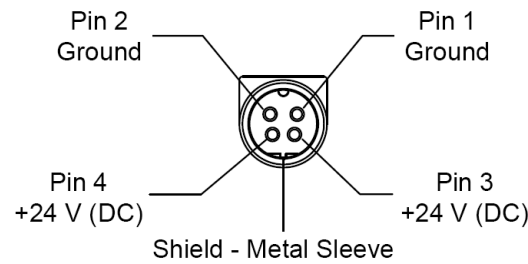

Connect 24 V (DC) to the power connector using the provided power supply or a user-supplied power supply with a minimum power rating of 24 V (DC) at 15 W.

If a user-supplied power supply is used, INFICON recommends the power connection to Quantus HP100 use a Kycon connector, part number KPPX-4P. Pins 3 and 4 carry +24 V (DC); pins 1 and 2 are ground. Whenever a user-supplied power supply is used, the connector shield on the 24 V cable must be connected to the mains protective earth ground terminal through the user-supplied power supply.



⚠ CAUTION

Never use a power source that does not meet the system's voltage and power requirements.


5.3 Installing Quantus HP100

Quantus HP100 installs quickly and easily. Listed below are the typical steps required to install Quantus HP100 and the sensor. Please note that your installation requirements may differ.


1. Remove the KF25 clamp and centering ring from the sensor cell flange.



2. Attach the sensor cell flange on the system using the KF25 centering ring and clamp.

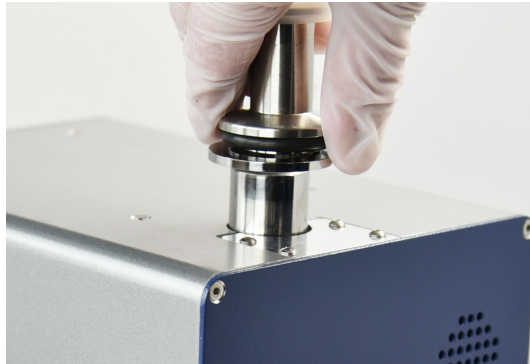

3. Attach 24 V (DC) power at the power connection point, and attach the Ethernet cable at the Ethernet connection point.

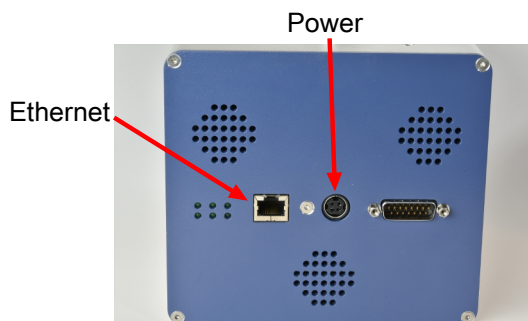

4. Quantus HP100 is electrically grounded through the KF25 connection flange to the vacuum chamber or to the system to which it is installed.

5.3.1 Connecting the Ethernet Interface

Ethernet communications between the controller and Quantus HP100 are established using the 30 ft. (9.1 m) Ethernet cable provided with the system.

6 Connecting Quantus HP100

6.1 Introduction

Quantus HP100 uses Ethernet as its default communications method.

Quantus HP100 has an IP address and a MAC address.

IP addresses are used as a means of identifying individual devices on a network. IP addresses are unique on a network but not universally, meaning that only one device on a network can have a specific IP address but two devices on separate networks can have the same IP address.

MAC addresses are another identifier that are unique for each device. MAC addresses are never duplicated. FabGuard uses IP addresses to locate and identify sensors on a network.

6.2 General Networking Information

This section discusses some of the general networking variables that can affect the connection of Quantus HP100.

6.2.1 IP Addresses

IP addresses can be set either manually or automatically.

- Static (manual) IP addresses are set by the user and are manually changeable by the user.
- Dynamic (automatic) IP addresses are automatically set by a host.

INFICON recommends using static IP addresses for Quantus HP100, but allows for dynamic IP addresses set through Dynamic Host Communication Protocol (DHCP).



When using static IP addresses, a block of addresses should be reserved for static use and prohibited from being assigned by the DHCP server (host). This avoids duplicate IP address conflicts.

CAUTION

Since FabGuard uses the IP address to identify each connected Quantus HP100, the IP address must not change during operation of Quantus HP100.

Using DHCP, the host may generate a new IP address every time Quantus HP100 is taken offline and then returns online.

DHCP may also change the IP address automatically if there is an IP address conflict on the network.

If the Quantus HP100 IP address is randomly changed during data acquisition, FabGuard will not automatically reconnect to the Quantus HP100 sensor because it does not know the newly assigned IP address. This will lead to loss of communication and loss of data.

Static IP addresses do not change unless the IP address is manually changed. Static IP addresses help protect Quantus HP100 from losing communication and data.

Quantus HP100 uses IPv4 IP addresses. IPv4 IP addresses consist of 32 bits that are traditionally displayed in dot-decimal notation, which consists of four decimal numbers each ranging from 0 to 255, separated by dots. An example of an IP address in dot-decimal notation would be 192.168.1.100. Each part represents an octet. Normally, the IP address consists of a network prefix and a host protocol.

6.2.2 Subnetworking

A subnetwork (or subnet) is a logically visible subdivision of an IP network. Splitting an IP network into multiple subnets is referred to as subnetting. Subnetting sets the region of the IP address that will be used as a network prefix for all IP addresses inside of a subnet. This is accomplished through a subnet mask. Different types of subnet masks and their implications to IP addresses are shown below.

	Example 1	Example 2	Example 3
IP address	192.168.1.104	192.168.1.105	192.168.1.150
Subnet mask	255.255.255.0	255.255.0.0	255.255.255.192
Network profile	192.168.1.0	192.168.0.0	192.168.1.128
Host protocol	0.0.0.104	0.0.1.105	0.0.0.22

As seen in the table above, the subnet masks determine which octets of the IP address are used as the network prefix.

In order for two network devices to communicate, they must be on the same subnet. This means that they must not only be connected to the same internet network, but must also have the same network prefix. If two devices have two different network prefixes, this means that the two devices are on different subnets.

6.3 Quantus HP100 IP Address


By default, Quantus HP100 ships with an IP address of 192.168.100.11 with a subnet mask of 255.255.255.0.

NOTICE

When connecting Quantus HP100 to an existing local network, there must be a static IP address for each Quantus HP100 being installed. Contact the network administrator for IP address assignments.

6.3.1 Using the IMSSU to Change the IP Address

The method of changing the Quantus HP100 IP address employs the INFICON Mass Spectrometer Search Utility (IMSSU), a standalone executable found on the software installation disk and on the INFICON website. To use the IMSSU, locate and double-click **INFICONMassSpecSearch.exe**. The program does not need to be installed to work. Upon double-clicking, the IMSSU will display as shown below.

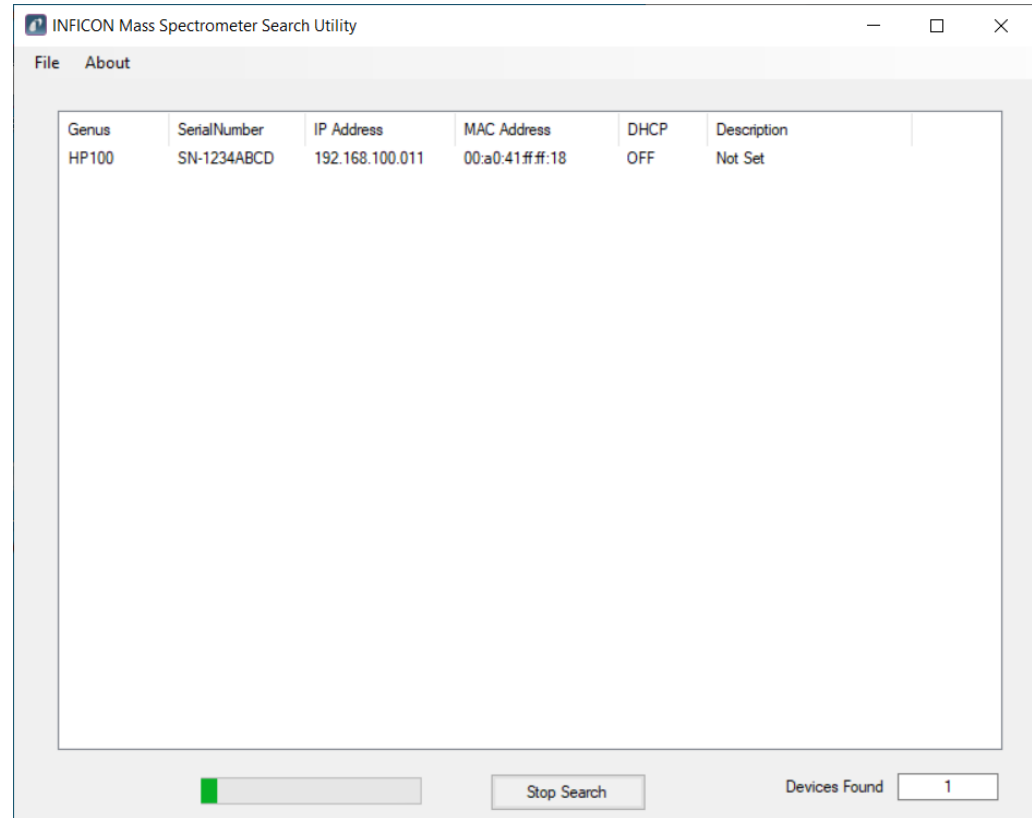


When the IMSSU first opens, nothing will be displayed. The IMSSU detects all instruments installed on the network regardless of IP address. The IMSSU will start automatically, or it can be manually started by clicking **Search (Clears List)**. The IMSSU will then display:

- Genus (which will display HP100 for Quantus HP100 sensors)
- Quantus HP100 serial number
- Current IP address of Quantus HP100
- MAC address of Quantus HP100
- DHCP status of Quantus HP100 (on or off)
- Description (which is user editable)


6.3.1.1 IMSSU Capabilities

The IMSSU has multiple built-in functions. All of these functions are available by right-clicking on the sensor inside of the IMSSU. The right-click menu can be seen below, and the different functions are described in the following sections.

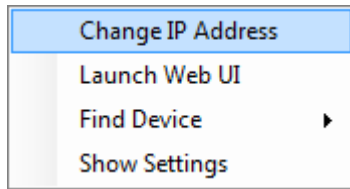

6.3.1.1.1 Changing HP100 IP Address

To change the IP address, right-click on the sensor and select **Change IP Address**. The **TCP/IP Properties** window will display.

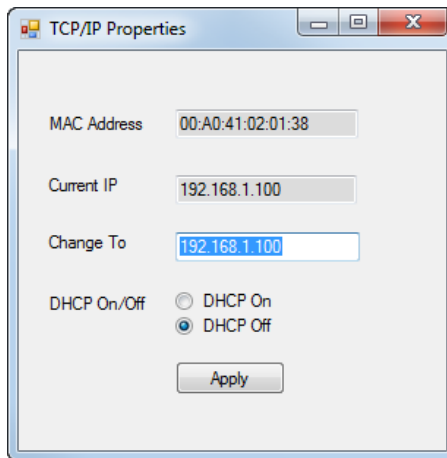

The **TCP/IP Properties** window will display:

- Quantus HP100 MAC Address
- Current Quantus HP100 IP address
- **Change To** text box, to enter the new Quantus HP100 IP address
- Selection of either **DHCP On** or **DHCP Off**

To change the IP address, type the new IP address in the **Change To** box and click **Apply**. Quantus HP100 will automatically reboot and will return online with the new IP address.

Alternatively, the IP address can be automatically assigned to Quantus HP100 by selecting **DHCP On** (*this is not recommended*).

6.3.1.1.2 Find Device

Find Device On will flash the power indicator so that the device can be located. The indicator will flash for up to 60 seconds and then return to the fully on state.

Find Device Off will stop the flashing within 60 seconds of activating **Find Device On**.

6.3.1.1.3 Show Settings

Click **Show Settings** to open a display on the right-side of the IMSSU that will display multiple settings of Quantus HP100. This is an excellent tool for troubleshooting. The following settings are displayed:


- Serial number
- Gateway
- IP address
- DHCP status
- MAC address
- Description
- Subnet mask
- Name
- Description
- Structure version
- Name
- Box type
- Port
- Firmware version
- TCP/IP source

6.3.1.2 Change the Computer IP Address


An alternative to changing the Quantus HP100 IP address is to change the host computer's IP address to allow communication between the host computer and Quantus HP100.

To change the computer's IP address in Windows 10 or Windows 11, follow the steps below:


- ✓ Changing the IP address of the host computer requires administrator rights.
 - 1 Use the Windows search bar (located either in the main toolbar next to the Start icon or available by clicking the Start icon) to search for the Control Panel application. Open the Control Panel application.

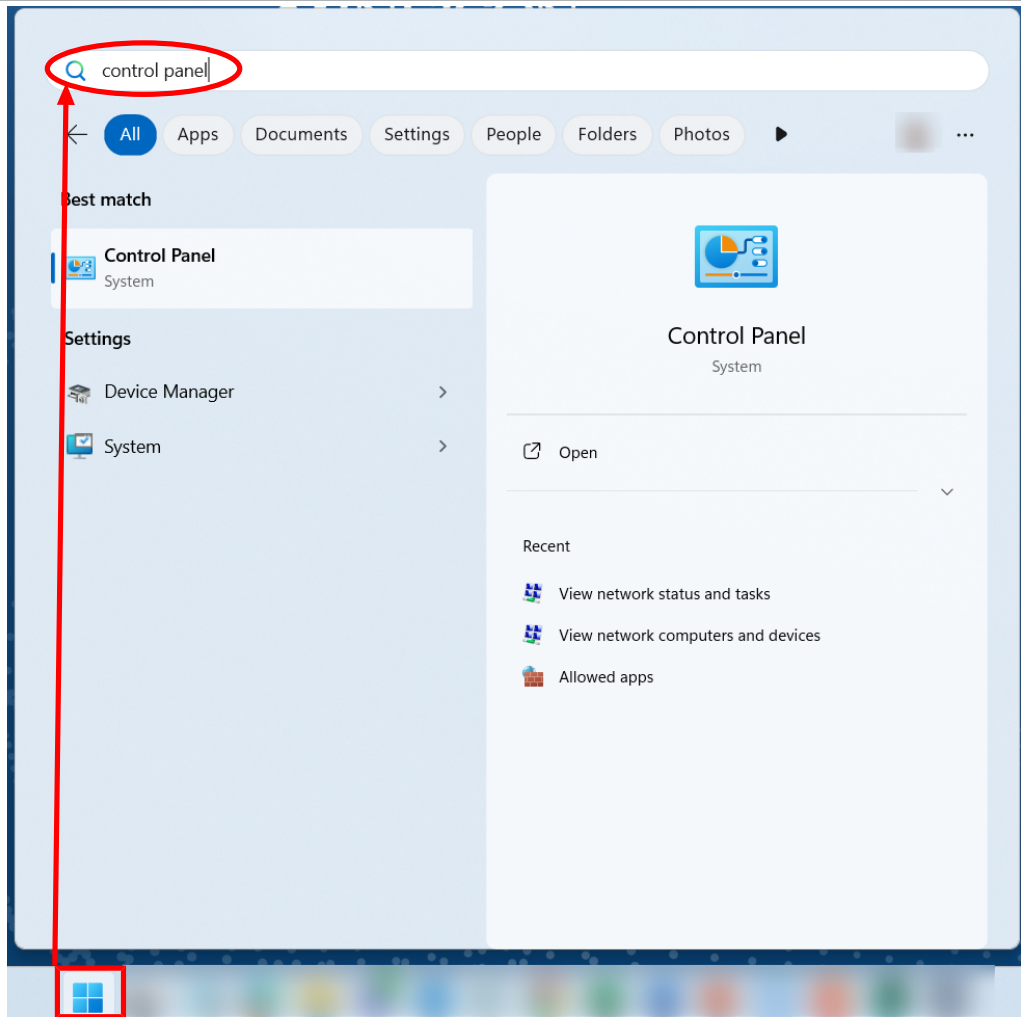


2 Under "Network and Internet," click **View network status and tasks** to open the Network and Sharing Center.

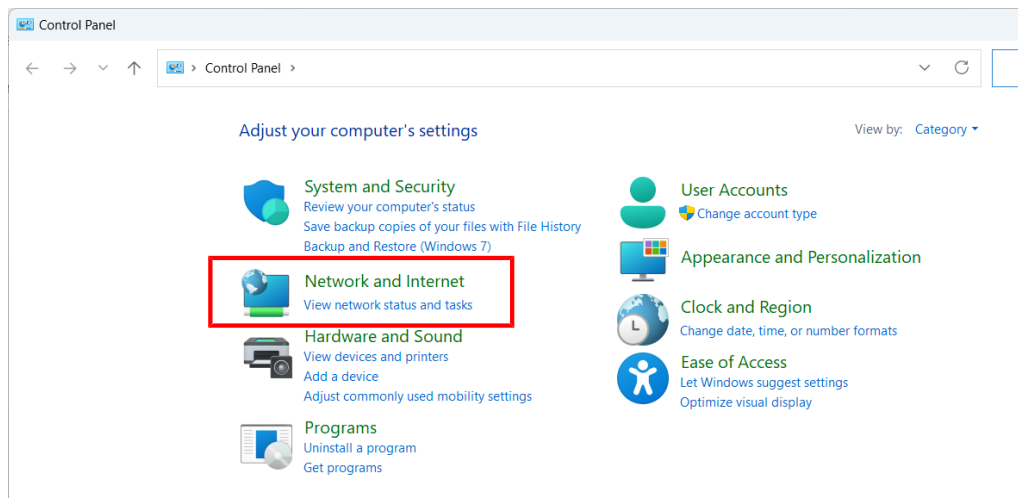


3 In the left-hand menu, click **Change adapter settings**.

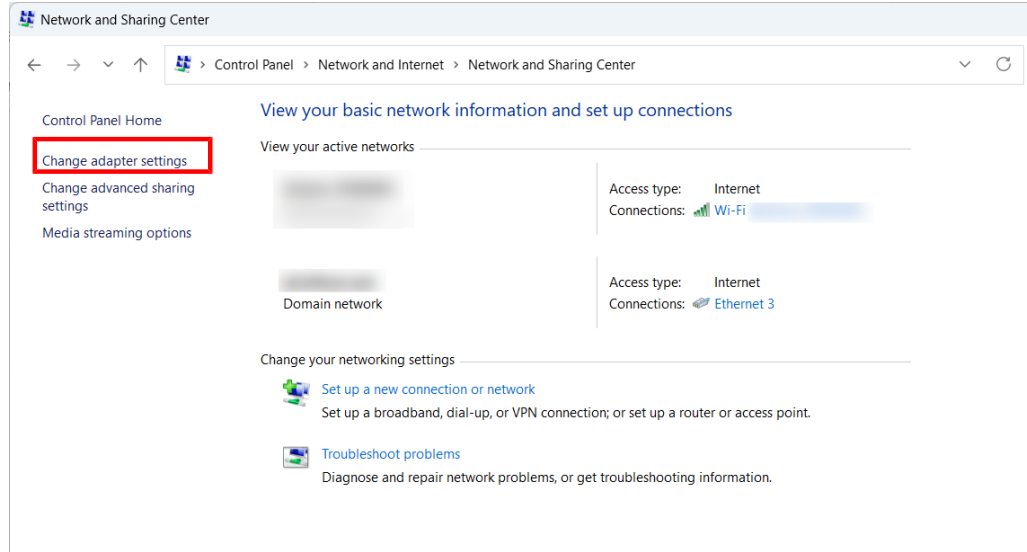

4 Right-click on the Ethernet connection for Quantus HP100 and select **Properties**.

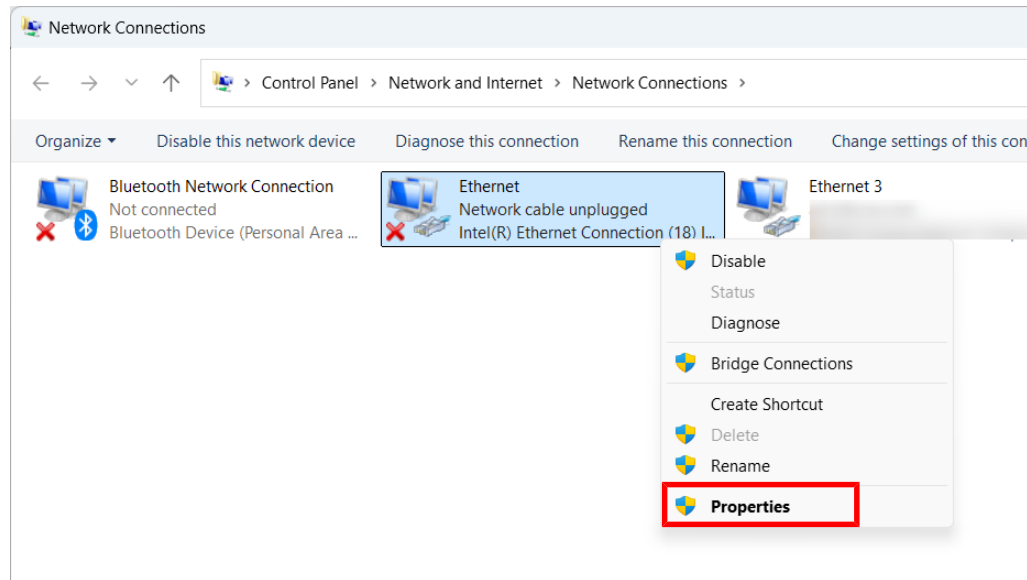


5 Select **Internet Protocol Version 4 (TCP/IPv4)** and click **Properties**.

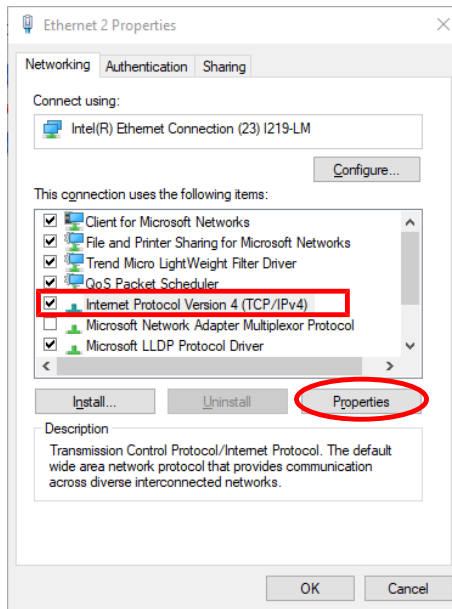

6 In the Internet Protocol Version 4 (TCP/IPv4) Properties window, select **Use the following IP address** input the chosen IP address.

⇒ INFICON recommends using the IP address format **192.168.1.XXX**, where XXX can be any octet as long as it is unique to the network and is not the same as the Quantus HP100 IP address.

7 Enter **255.255.0.0** in the Subnet mask field and click **OK**.

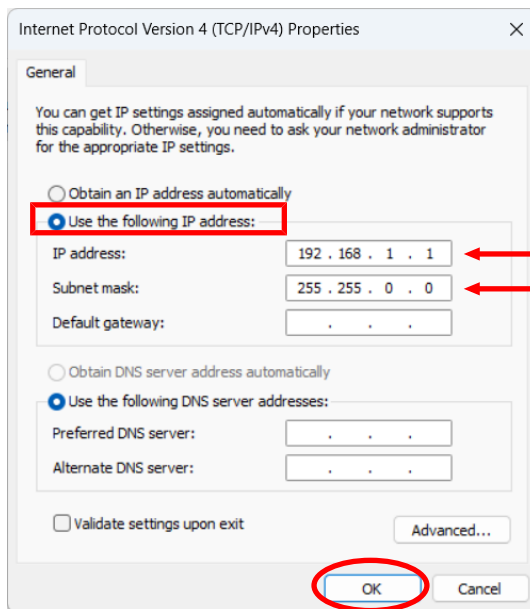

8 Exit from all of the windows and connect Quantus HP100 (refer to Connecting Quantus HP100 [▶ 31]).

To change the IP address back to the default settings, follow steps 1–6 and reset the properties to their original settings.

6.4 Connecting Quantus HP100

Before connecting Quantus HP100, decide:

1. Is Quantus HP100 going to be set up on:
 - a private network (installed directly onto either a computer or a router that is not hooked up to the internet), or
 - an internal network where multiple computers are connected with access to the internet?
2. Is more than one Quantus HP100 sensor being installed at the same time?

6.4.1 Connecting a Single Quantus HP100

6.4.1.1 Single Quantus HP100 Direct Connection Installation

When installing a single Quantus HP100 on a private network or directly connected to a computer, changing the IP address of Quantus HP100 is only necessary if the computer being used to connect to Quantus HP100 has a different network prefix than Quantus HP100.

The network prefix of Quantus HP100 is **192.168.x.x**. The IP address of the host computer used to control Quantus HP100 must have a subnet mask of **255.255.0.0** and a network prefix of **192.168.x.x**.

If this is not the case, change the computer IP address to match the network prefix of Quantus HP100. For example, giving the computer an IP address of **192.168.1.101** will allow Quantus HP100 to communicate directly with the computer. Refer to [Change the Computer IP Address \[▶ 27\]](#).

6.4.1.2 Installing a Single Quantus HP100 on an Existing Local Network

When installing a single Quantus HP100 on an existing local network, the default IP address of Quantus HP100 may not be compatible with the network.

Quantus HP100 can have either a static IP address (*recommended*) or a dynamic IP address set by DHCP (*not recommended*).

Contact your network administrator for information regarding valid IP addresses and have them assign an IP address for Quantus HP100. Refer to [Using the IMSSU to Change the IP Address \[▶ 25\]](#).

6.4.2 Connecting Multiple Quantus HP100 Sensors

Since each Quantus HP100 is shipped with the same default IP address, the IP address of each Quantus HP100 must be changed one at a time so that each sensor has a unique IP address. Refer to Using the IMSSU to Change the IP Address [▶ 25].

NOTICE

Do not connect multiple Quantus HP100 sensors to a network at the same time without first changing the IP addresses.

Since the IP addresses are not unique, connecting multiple units at the same time will cause IP address conflicts on the network.

6.4.2.1 Installing Multiple Quantus HP100 Sensors Directly to a Host Computer

If multiple Quantus HP100 sensors are to be connected to a single host computer and not to an existing local area network, a private local network must be created. Quantus HP100 will have to be installed on either a router or Ethernet switch. The router or switch is then connected to the host computer through the LAN port of the router/switch.

6.4.2.2 Installing Multiple Quantus HP100 Sensors on an Existing Local Network

If multiple Quantus HP100 sensors are to be connected to an existing local network, use an Ethernet switch instead of a router.

NOTICE

Routers can cause conflicts with local networks because the router will attempt to set IP addresses for all network connected devices.

Since Quantus HP100 sensors will be network connected devices, each sensor must have an IP address assigned to it by a network administrator. After changing each IP address manually, connect all of the sensors to the Ethernet switch and connect the switch to the local network.

7 Operation

7.1 Introduction


Operation of Quantus HP100 is controlled by FabGuard analysis software. Refer to FabGuard Help for user documentation or contact INFICON applications support for more information regarding sensor setup and operation.

Quantus HP100 is designed to ignite its plasma over a pressure range from 10 mTorr to 1 Torr. However, the ability to ignite plasma can be affected by the species of gas present. Therefore, the pressure range for plasma ignition, or for sustaining the plasma, may be greater or lesser depending on the application.

Optical spectra acquired by the Quantus HP100 are analyzed by FabGuard analysis software.

7.2 Sensor Status Indicators

Quantus HP100 is equipped with six green indicator lights to indicate sensor status. When 24 V (DC) power is applied to the sensor, the 24 V and 5 V indicators illuminate. During initial power-up, the other four indicators will flash several times to indicate that they are functioning.

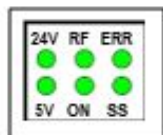

Indicator Label	Description
24 V	24 V (DC) power present
5 V	5 V (DC) power present
RF	RF amplifier enabled: RF power being delivered to the antenna to start, or sustain, the microplasma
ON	Microplasma on: light is being detected from the microplasma
ERR	Hardware error
SS	Spread spectrum (dithering): Frequency modulation, as described in Spread Spectrum (SS) [▶ 34]

NOTICE

If no indicators illuminate after power is applied, then a fault in the sensor is likely to have occurred. Contact INFICON for assistance.

7.3 Spread Spectrum (SS)

The indicator labeled SS indicates, when lit, that the instrument is operating in spread-spectrum mode, a form of frequency modulation also known as dithering. Spread spectrum is the default mode of operation for Quantus HP100. In this mode, the sensor modulates the RF drive frequency about the nominal frequency for a given MSC. While SS is the default mode of operation, it can be disabled through the FabGuard software. With SS disabled, the sensor will operate over a wider pressure range and produce higher signal values. However, with SS disabled, Quantus HP100 may not operate entirely within conformity of all standards listed in the Declaration of Conformity [▶ 47].

8 Maintenance

8.1 Introduction

The Microplasma Sensor Cell (MSC) contains components for igniting and sustaining the microplasma. The MSC can be replaced when necessary. In order to replace the MSC, vacuum must be broken. The frequency of the new MSC, if different from the previous MSC, must be updated at the Sensor Configuration Screen for this sensor, using FabGuard software. The MSC can be returned to INFICON for refurbishment for subsequent re-use on either the same Quantus HP100 or another Quantus HP100.

8.2 Cleaning

Should cleaning be required, clean the enclosure exterior with mild detergents or alcohol applied with a towel or cloth. Cleaning of the interior portions of the MSC cannot be performed and the user should instead install a new MSC assembly.

8.3 Replacing the Microplasma Sensor Cell (MSC)

The MSC contains components for igniting and sustaining the microplasma. The MSC can be replaced when necessary. In order to replace the MSC, vacuum must be broken. The frequency of the new MSC, if different from the previous MSC, must be updated at the Sensor Configuration Screen for this sensor using FabGuard software. The MSC can be returned to INFICON for refurbishment for subsequent reuse on either the same Quantus HP100 or another Quantus HP100.

CAUTION


Keep the inside of the MSC clean. Do not contaminate the inside of the MSC because it will be exposed to the process chamber or pump line to which it is connected.

Required Tools and Equipment


- 2 mm hex driver
 - 2.5 mm hex driver
 - 5/16 in. wrench
 - Spare Quantus HP100 MSC (962-259-G1S)
1. To remove Quantus HP100 from the chamber or system it is installed upon, turn the wingnut on the clamp counterclockwise to loosen, then remove the KF25 clamp and centering ring. Keep the clamp and centering ring for reinstallation of Quantus HP100. Keep the centering ring clean.




2. Using a 2 mm hex driver, remove the front end plate by removing the four screws. Keep the front end plate and screws for reassembly at the end of this procedure.

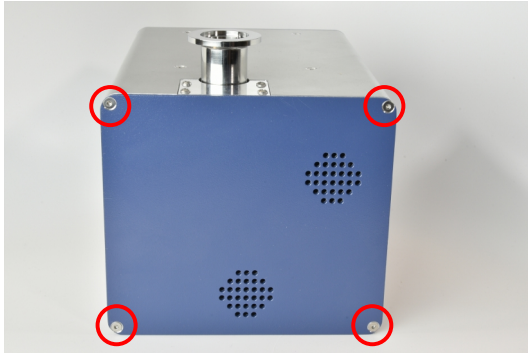



3. Using a 2 mm hex driver, remove the flange plate by removing the four screws. Keep the flange plate and screws for reassembly at the end of this procedure.

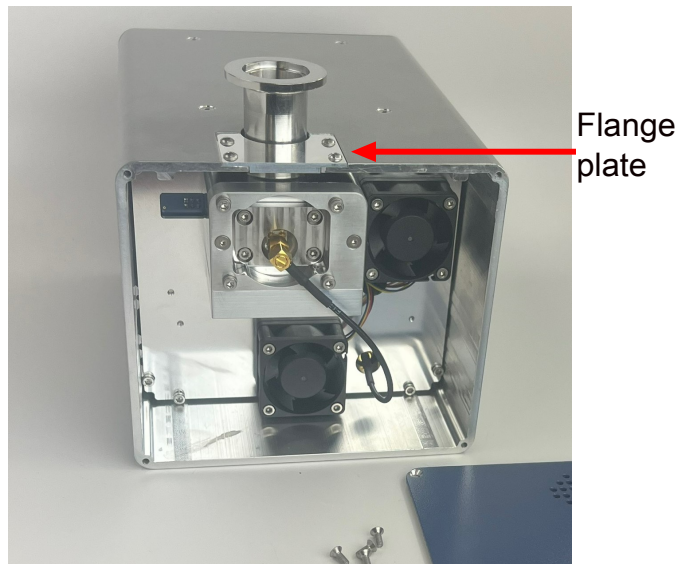


- Using a 5/16 in. wrench, disconnect the RF cable from the MSC.

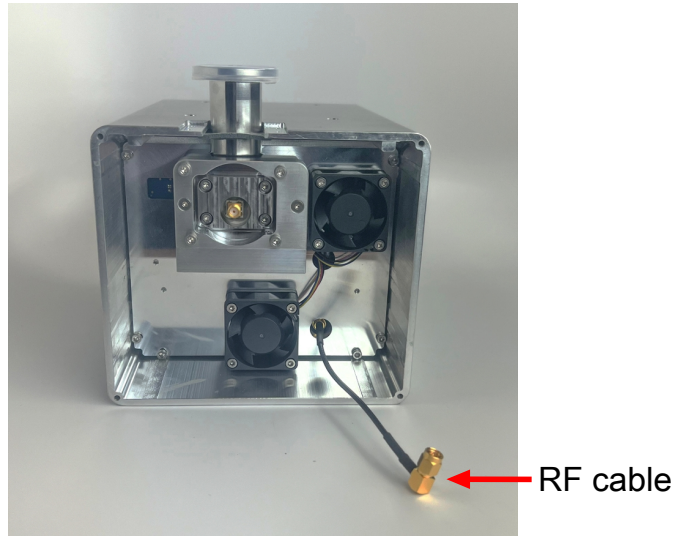


- Using a 2.5 mm hex driver, loosen the four screws at the face of the MSC and then remove the MSC from the system.

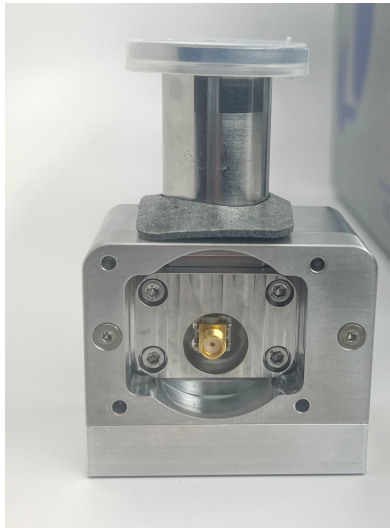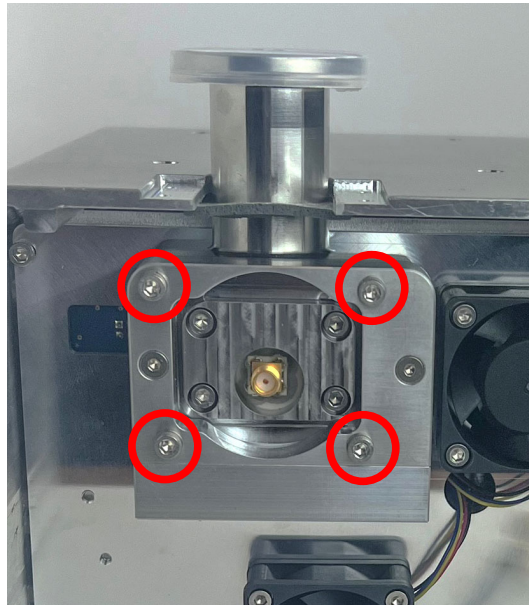


6. Leave Quantus HP100 in its current orientation. Remove and discard the EMI gasket around the flange.

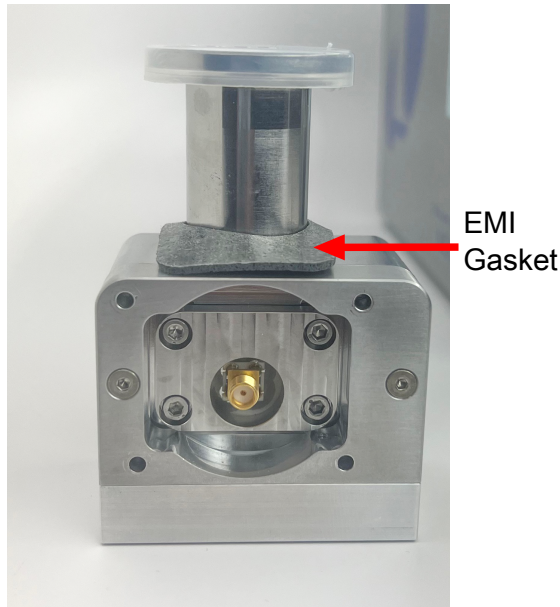


7. Remove the adhesive tape on the back of the new EMI gasket. Stretch the EMI gasket around the flange of the new MSC, with the adhesive side down and the cutout facing the spectrometer side. The cutout on the EMI gasket should align with the screw on the flange.
8. Place the gasket over the flange in the orientation, shown below.

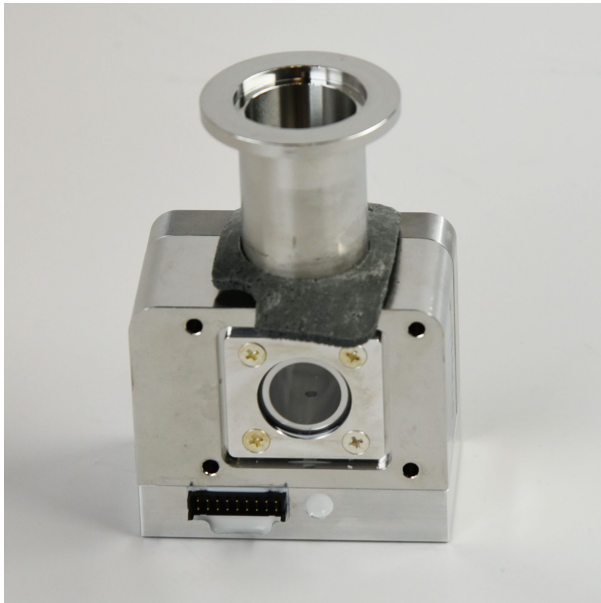


- Carefully install the new MSC by slowly sliding it into the housing. Be careful to do this slowly, without too much force, to ensure the connectors are not damaged and are properly mated. Use the holes on the MSC and line them up with the corresponding holes within the sensor. Install the corresponding screws using a 2.5 mm hex driver.

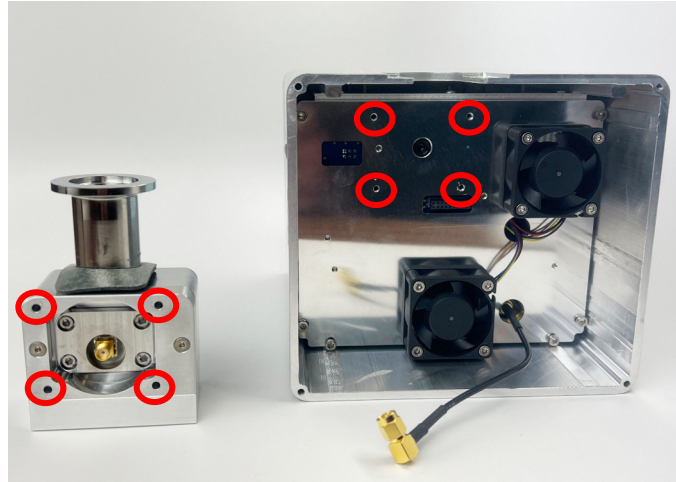


- Note the cell frequency, in units of MHz, on the label of the new MSC. The cell frequency will be needed for sensor configuration.
- Using a 2 mm hex driver, reinstall the flange plate with the four screws. Ensure the front face of the flange plate is flush with the surface on the enclosure.

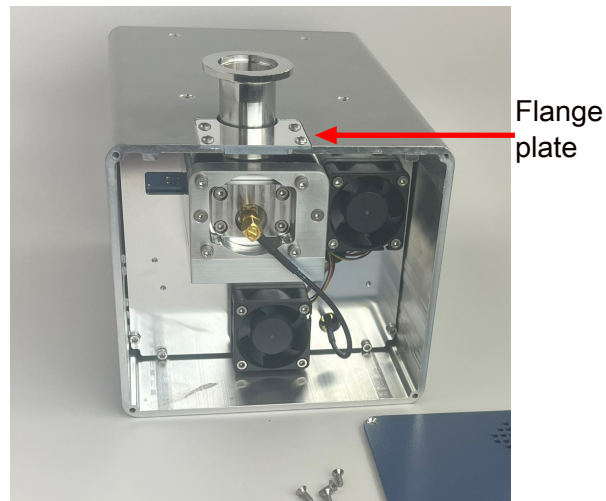


12. Stick the adhesive EMI gasket to the flange plate and the enclosure surrounding the flange of the MSC.

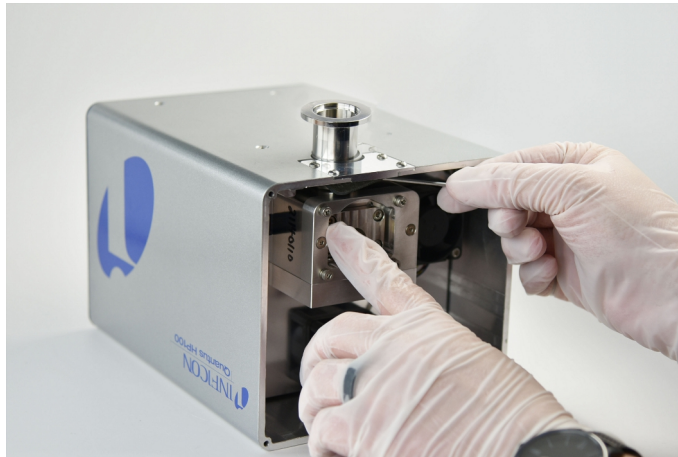

13. Using the 5/16 in. wrench, reconnect the RF cable to the MSC. Be sure not to overtighten the cable or damage could occur to the MSC.

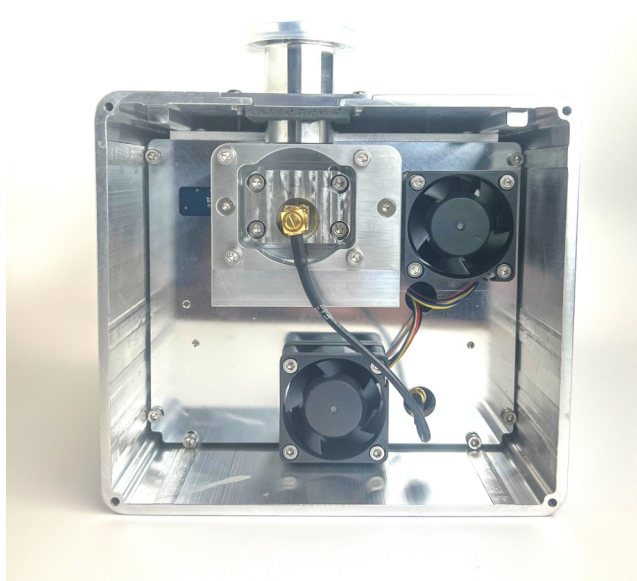

14. Using a 2 mm hex driver, install the front end plate with the four screws.

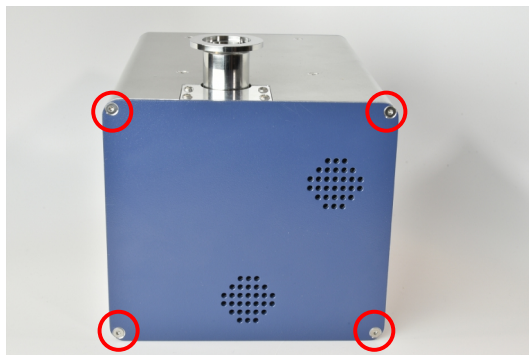

15. Update the MSC frequency on the sensor configuration screen in the FabGuard software. Refer to FabGuard Help for user documentation or contact INFICON applications support for more information regarding sensor configuration.

9 Accessories and Spare Parts

The isolation valve kit includes a pneumatic right-angle or in-line valve and a control cable to interface the valve directly to the Quantus HP100 Electronic Control Module.

Part Number	Description
962-468-G1	Quantus HP100 standard and corrosive environment gas analysis cell
962-259-G1S	Quantus HP100 microplasma sensor cell
962-275-G1	Power supply: 80-264 V (AC) @ 50/60 Hz to 24 V (DC)
962-020-G1	KF25 right-angle isolation valve kit
962-020-G2	KF25 right-angle isolation valve kit with Kalrez O-ring
962-437-G1	KF25 in-line isolation valve kit
962-437-G2	KF25 in-line isolation valve kit with Kalrez O-ring

10 Service and Technical Support

10.1 How to Contact Customer Support

Worldwide customer support information is available under **Contact** at www.inficon.com:

- Sales and Customer Service
- Technical Support
- Repair Service

When reporting an issue with your instrument, please have the following information readily available:

- the instrument part number(s) and serial number(s)
- a description of the problem
- an explanation of any corrective action already attempted
- the exact wording of any error messages

For technical support, visit www.inficon.com and select **Contact >> Service & Support**. Select your region and product to obtain support contact information. To submit a repair request in North America, fill out a Service Request form at <https://service.inficon.com/>.

10.2 Returning an Instrument to INFICON

Do not return any component of your instrument to INFICON without first obtaining a Return Material Authorization (RMA) number from a Customer Support Representative. To obtain an RMA, fill out and submit a Service Request form (refer to How to Contact Customer Support [▶ 42]). Service Request forms must be approved by INFICON before an RMA number is issued.

If you deliver a package to INFICON without an RMA number, your package will be held and you will be contacted. This will result in delays in servicing your instrument.

Prior to being given an RMA number, you may be required to complete a Declaration of Contamination (DOC) form if your instrument has been exposed to certain materials. DOC forms must be approved by INFICON before an RMA number is issued. INFICON may require that the instrument be sent to a designated decontamination facility, not to the factory.


11 Appendix

11.1 Introduction to Optical Emission Spectroscopy

Quantus HP100 gas analysis system utilizes optical emission spectroscopy to monitor gases present in a chamber, delivery line or pump line. This chapter will discuss the theory behind optical emission spectroscopy and then briefly discuss how Quantus HP100 utilizes these phenomena for detecting leaks, contaminants, process changes, or process endpoints.

11.2 Origin of Optical Emission Theory

In the early 1900s, Neils Bohr redefined atomic physics with the Bohr model of the atom. His theory stated that atoms had discrete, quantized energy levels where electrons can exist. He also noted that the electrons can excite to higher energy levels if they absorb an energy equivalent to the difference in energy between the two levels. The electron then can exist inside of the "excited" energy level, but will eventually relax to the unexcited state. When the electron drops from the excited energy level to the unexcited level, the energy that was absorbed for the excitation must be released. This energy is released in the form of a single photon that has energy equivalent to the difference between the excited and unexcited energy states. A visual depiction of the different quantum energy levels is illustrated below.

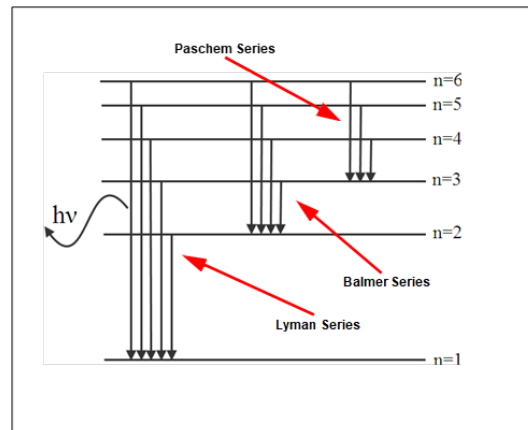

There are three basic series that are defined for the hydrogen atom: the Lyman Series, the Balmer Series, and the Paschen Series. The Lyman Series includes all of the photons generated when electrons go from an excited state back to the most unexcited state, $n = 1$. The photons generated in the Lyman Series are 94 nm, 95 nm, 97 nm, 103 nm, and 122 nm, which are all in the UV range of the electromagnetic spectrum. The Balmer Series is the more easily measured series and includes all of the photons generated when electrons go from an excited state down to a less excited state, $n = 2$. The photons generated in the Balmer Series are 410 nm, 434 nm, 486 nm, and 656 nm, which are all in the visible range. A visual representation of the Balmer Series is presented below.



The third series, the Paschen Series, includes all of the photons generated from relaxation from an excited energy state to the $n = 3$ energy state. This produces photons with wavelengths of 1084 nm, 1282 nm, and 1875 nm, which are all in the infrared (IR) range of the electromagnetic spectrum.

The energy of the photon emitted by the gas can be determined by the following equations:

$$E = h\nu \quad [1]$$

$$\nu = \frac{c}{\lambda} \quad [2]$$

$$E = \frac{hc}{\lambda} \quad [3]$$

Where E = energy, ν = frequency, c = the speed of light (3.00E8 m/s), λ = wavelength, and h = Planck's constant (6.626E-34 J·s).

Since the energy is quantized, only a single wavelength of light is emitted for each relaxation. This produces a line in the optical spectrum. Since each element or molecule has a specific set of energy levels, each element or molecule has a unique line spectrum. Also, because each element or molecule produces photons independently, the number of photons of a certain wavelength is related to the concentration of a specific element or molecule.


11.3 Complex Optical Emission Spectra

Thus far, the only optical emission spectrum discussed has been that of monatomic hydrogen. Monatomic hydrogen, of course, has a very simple atomic structure including only one electron. As elements increase in complexity or combine with other elements to form molecules, more electrons are given the opportunity to exist in more energy states, producing complex spectra. This section will discuss the two different reasons for complex spectra.

11.3.1 Increasing Numbers of Electrons

Multi-electron systems baffled Neils Bohr during his lifetime, and unfortunately, such is still the case today. Due to this, the underlying physics, mathematics, and chemistry that define emission spectra of multi-electron elements include a multitude of assumptions and estimations. However, that is on the theoretical side of science. For our needs, only one rule is important: as elemental complexity increases, so does the complexity of an element's emission spectrum, or as the atomic number increases, so does the complexity of the atomic emission spectrum.

This can be seen below, which shows emission spectra of both oxygen and argon. When you compare these spectra to the hydrogen spectrum (refer to Origin of Optical Emission Theory [▶ 43]), it is easy to see how the complexity increases.

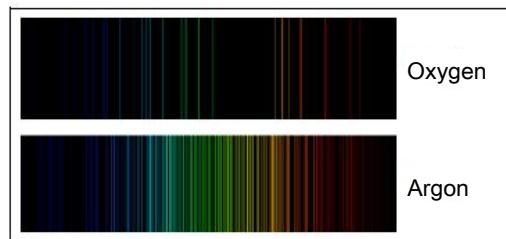

Remember that each electron can exist in each energy state. Because the electrons have different energy based on spin and ground state configuration, a multitude of different energy photons are released when the electrons relax to a non-excited state.

The other thing to note is that many of these different atomic emission lines have very similar wavelengths (that is, oxygen has lines at 394.729 nm, 394.748 nm, and 394.759 nm). Depending on the resolution of an instrument, these could appear as three distinct lines or just as one line at 394.7 nm, with the intensity of all three lines added together.

Additionally, although each spectrum is unique for a given atom, that does not mean that two elements cannot have overlapping lines. For instance, argon has lines at 394.6097 nm and 394.8979 nm. Again, depending on the instrument, an argon-oxygen mix could show five distinct lines at 394.6097 nm, 394.729 nm, 394.748 nm, 394.759 nm, and 394.8979 nm, or it could show one line at 395 nm that includes the intensity of all five lines.

11.3.2 Molecular Combinations of Atoms

When atoms combine to form molecules, their orbitals combine to form new bonding orbitals. These bonding orbitals create more energy states that electrons can exist in. Since there are more energy states, there are more chances for electrons to excite and relax and then release photons. This can create very complex optical emission spectra. The discussion of the theory is outside of the scope of this manual, but it is worth noting that molecules have more complex spectra than elements.

11.4 Quantus HP100 and Optical Emission Spectroscopy

Due to each element or molecule producing its own unique spectrum and the amount of photons being related to the concentration of a specific element or molecule, optical emission spectroscopy can be used to detect changes in the relative concentration of gases present in a chamber, gas line, or process. In order to utilize optical emission spectroscopy, the electrons in the gas have to be excited to higher energy states. This is accomplished by the proprietary MSC of Quantus HP100. Inside the MSC, the gas molecules are energized to excite the electrons to higher energy levels. When the electrons relax, photons of light are emitted as described above. These photons are then divided according to their wavelength and detected by a spectrometer in the Quantus HP100 system. This allows INFICON

FabGuard analysis software to monitor, as a function of time, the intensity versus wavelength optical emission spectra generated in the MSC. Analysis of the optical spectra versus time provides for the detection of leaks, contaminants, process changes, or process endpoints. Note that quantitative determination of concentration is not generally possible because the intensity of different wavelengths in the optical emission spectrum depends on the concentration and energy distribution of electrons in the plasma as well as the concentration of the species of interest.

12 Declaration of Conformity



**DECLARATION
OF
CONFORMITY**

This declaration is issued under the sole responsibility of the manufacturer INFICON. The object of the declaration is to certify that this equipment, designed and manufactured by:

INFICON Inc.
Two Technology Place
East Syracuse, NY 13057
USA

is in conformity with the relevant Community harmonization legislation. It has been constructed in accordance with good engineering practice in safety matters in force in the Community and does not endanger the safety of persons, domestic animals or property when properly installed and maintained and used in applications for which it was made.

Equipment Description: Quantus HP100

Applicable Directives:	2014/35/EU (LVD)	Electrical Equipment (Safety) Regulations 2016 (UK)
	2014/30/EU (EMC)	Electromagnetic Compatibility Regulations 2016 (UK)
	2015/863/EU (RoHS)	Substances in Electrical and Electronic Equipment Regulations 2012 (AS AMENDED)

Applicable Standards:

Safety:	IEC 61010-1:2010/AMD1:2016 3 rd Edition: Listing # E115486
Emissions:	EN 61326-1:2020 (Radiated & Conducted Emissions) (EMC – Measurement, Control & Laboratory Equipment) CISPR 11:2015/AMD2:2019 EN 55011:2016/A11:2020 Emission Standard for Industrial, Scientific and Medical (ISM) radio RF equipment FCC Title 47 CFR Part 18 Class A emission requirements (USA)
Immunity:	EN 61326:2020 (Industrial EMC Environments) (EMC – Measurement, Control & Laboratory Equipment) Immunity per Table 2
SEMI:	SEMI S2-0821 Compliant

CE and UKCA Implementation Date: October 18, 2022

Authorized Representatives:	Andrew Klamm	Digitally signed by Andrew Klamm Date: 2023.08.09 14:24:15 -04'00'	Samuel Carroll	Digitally signed by Samuel Carroll Date: 2023.08.09 14:11:45 -04'00'
	Andrew Klamm Quality Manager, ISS		Samuel Carroll Vice President of Engineering	

ANY QUESTIONS RELATIVE TO THIS DECLARATION OR TO THE SAFETY OF INFICON'S PRODUCTS SHOULD BE DIRECTED, IN WRITING, TO THE AUTHORIZED REPRESENTATIVE AT THE ABOVE ADDRESS.



www.inficon.com reachus@inficon.com

Due to our continuing program of product improvements, specifications are subject to change without notice.
The trademarks mentioned in this document are held by the companies that produce them.

074-780-P1-B

©2025