

# QUICK START GUIDE

How to Set your IRwin Methane Leak Detector for  
1 Point Calibration 500ppm (Universal Mode)  
(for a factory set unit)

1

Make sure your IRwin is set in Universal Mode (see the *How to set your IRwin for Universal Mode* quick start guide)

2

Press  followed by 

3

Use  to navigate to *General* and press 



4

Use  to navigate to *Custom* and press 



5

Use  to navigate to *AbG Cal Setup* and press 



6




Use  to select *Generic* and press 




7

Press 


8

Use  and  to navigate to *Calibration* and press 

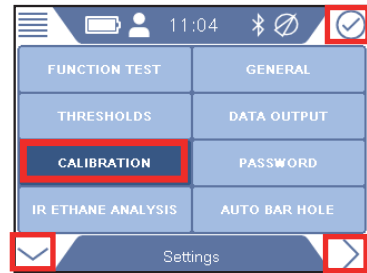

9


Use  to navigate to *Settings* and press 

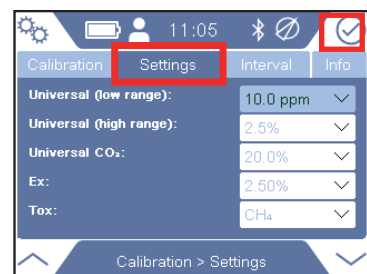


10


If prompted, enter the (min) Intermediate password code and press .  
If not prompted, go ahead to next step


11

Press  to get to the drop-down menu

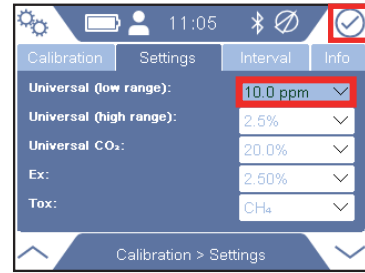


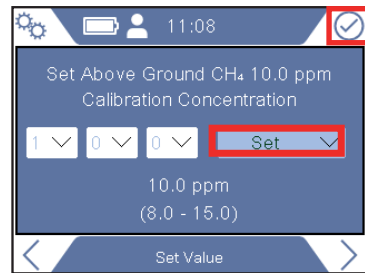
12

Press  on the first choice of the drop-down menu

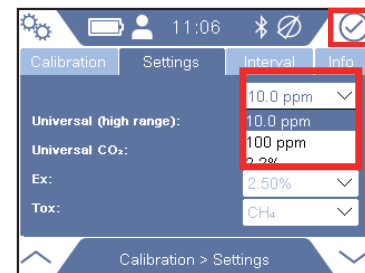


13

Navigate to far right drop-down menu and press 




14

Use  to select *Disabled* and press 

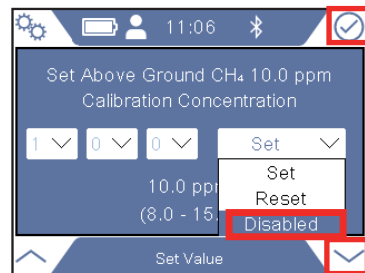


15

Press  again to view drop-down menu

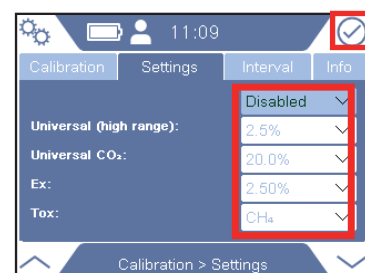

16

Navigate to the second choice in the drop-down menu and press ✓

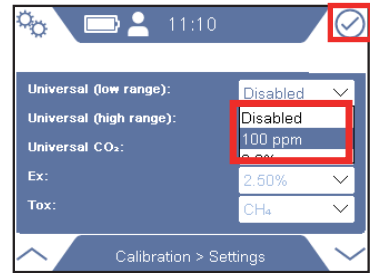


17

Use > to navigate the drop-down menus.


Enter:

- 5 and press ✓
- 0 and press ✓
- 0 and press ✓

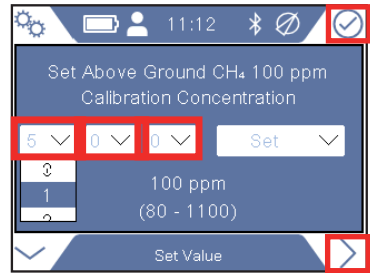


18

Navigate to far right drop-down menu and press ✓

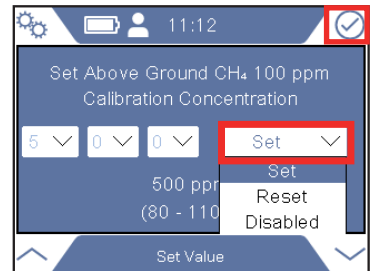

19

Select *Set* and press ✓

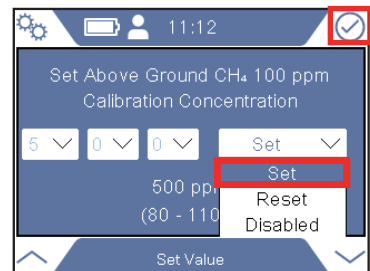


20

Press ✓ again to view the drop-down menu


21

Select the third choice in the drop-down menu and press

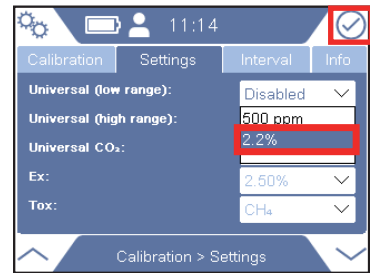

22

Navigate to far right drop-down menu and press

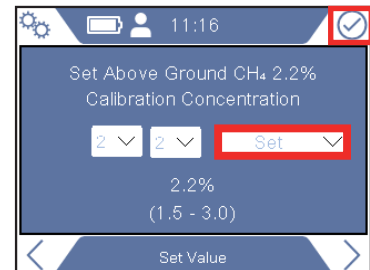

23

Select *Disabled* and press

