


IRWIN HARNESS GUIDE

– HOW TO ATTACH YOUR HARNESS

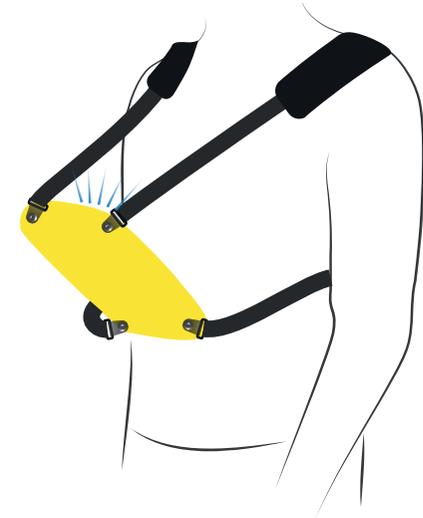


FASTEN IRWIN IN THE HARNESS

Use the self-fastening straps on the back of the harness to secure IRwin.
The top strap is fastened around the handle.



SNAP LOCK


Pull the button to open the locking mechanism.

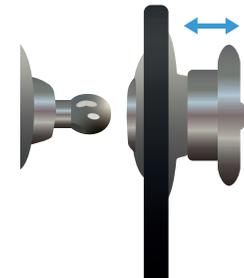

HOW TO ATTACH THE HARNESS



1) Attach the straps at the top and place the shoulderpads close to IRwin.

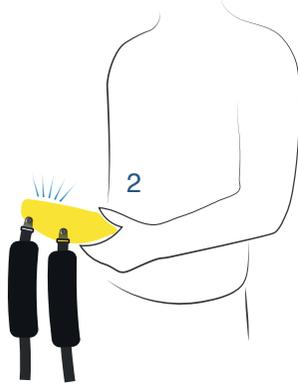


2) Hold IRwin in front of you with the display facing upwards.



3) Take the left strap and place over your left shoulder.


4) Grasp the strap with your right hand behind your back and attach it on the lower right side.

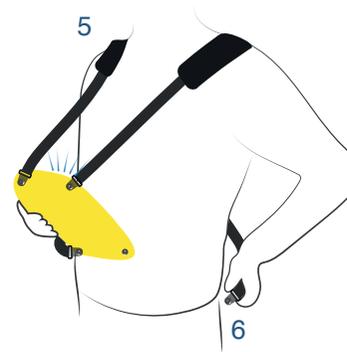

5, 6) Repeat this procedure with the other strap.



Ready to go!

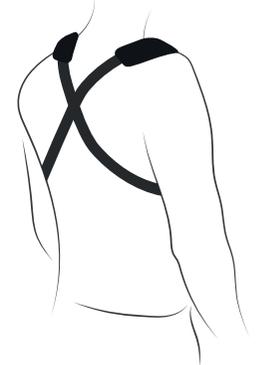


The straps should cross on the back.

ADJUSTMENTS


Stability:

If IRwin tends to fall into a vertical position while walking, connect the bottom right strap to the extra snap lock on the back to stabilize the instrument.

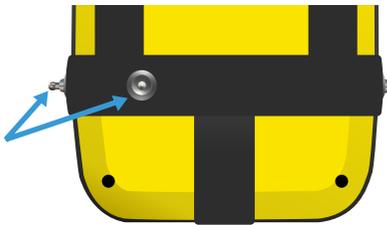

Comfort:

Adjust the straps for best comfort.

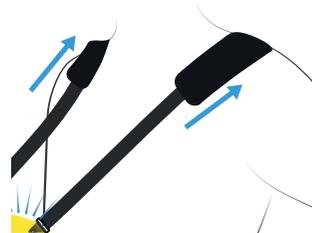

Adjust length:

Adjust the length of the straps for best comfort.



OPTIONAL METHOD

Optional method for attaching the harness when the straps are already connected.

