

# QUICK START GUIDE

How to Change the Gas in *Ex/Ex Tox Mode* to  $C_3H_8$  on the IRwin Methane Leak Detector

1



Press  followed by 

2

Use  to navigate to *General* and press 




3

Use  to navigate to *Misc* and press 



4

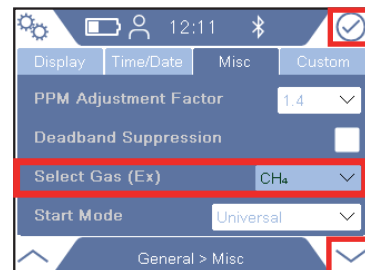

Use  to navigate to *Select Gas (Ex)* and press 




5



If prompted, enter the Intermediate password code and repeat step 4. If not prompted, go ahead to the next step

6

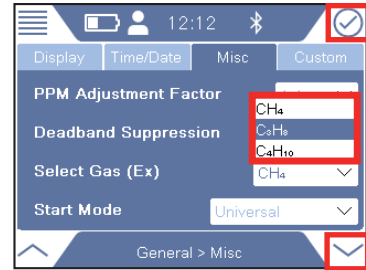Use  to select C<sub>3</sub>H<sub>8</sub> in the drop down menu, press 



7

Press  followed by  and 