

Service Tools for HVAC/R

Catalog 28





Table Of Contents

D-TEK Stratus REFRIGERANT LEAK DETECTOR AND PORTABLE MONITOR	. 2
D-TEK 3 REFRIGERANT LEAK DETECTOR	4
Compass REFRIGERANT LEAK DETECTOR	. 6
TEK-Mate REFRIGERANT LEAK DETECTOR	. 7
GAS-Mate COMBUSTIBLE GAS LEAK DETECTOR	. 8
Whisper Ultrasonic leak detector	10
CO Check CARBON MONOXIDE METER	12
Wey-TEK REFRIGERANT CHARGING SCALE	13
Wey-TEK HD Wireless REFRIGERANT CHARGING SCALE	14
Vortex Dual REFRIGERANT RECOVERY MACHINE	16
QS5 VACUUM PUMP	
Pilot Plus VACUUM GAGE	19
Leak Detector Selection Guide WHICH LEAK DETECTOR IS RIGHT FOR YOU?	20



D-TEK Stratus®

REFRIGERANT LEAK DETECTOR AND PORTABLE MONITOR



SPECIFICATIONS D-TEK Stratus Infrared sensor Lithium ion battery Spare filters AC wall charger DC car charger Extra-long probe Carrying case Earbuds Compatible refrigerants Refrigerant sensor R22, R32, R134a, R404a, R407c, R410a, R422b, R448a, R449a, R452a, R452b, R507 (AZ50), R1234yf and more CO₂ sensor CO₂ (R744) Flammable refrigerant sensor R290, R600a, R441a Sensitivity (tested to EN14624 standard) 0.04 oz./yr (1g/yr) R1234yf 0.2 oz./yr (5g/yr) R290 0.2 oz./yr (5g/yr) R744 (CO₂) 0.07 oz./yr (2g/yr) Ammonia 0.1 oz./yr (3g/yr) Sensor life Up to 2,000 hours Power source Lithium ion battery (rechargeable) USB (can operate while charging)

Battery life

Patents (pending)

Probe length (standard probe)

Weight Certifications

Warranty

~8 hours (Cloud Hunting Mode)

Application #10 2018 206 877.1

Application #18171080.7 Application #10 2018 208 826.8

Two-year over-the-counter

~10 hours (Pinpoint Mode)

1.10 lb (500g)

EN14624:2020

~17 in. (43cm)

A2L certified

ORDERING INFORMATION	
D-TEK Stratus	
(includes refrigerant sensor only)	724-202-G1
D-TEK Stratus	
(includes CO ₂ sensor only)	724-204-G1
Accessories and Replacement Parts	S
Earbuds	721-607-G1
TEK-Check R134a reference leak	703-080-G10
TEK-Check R1234yf reference leak	703-080-G12
Wall charger (US and international)	721-606-G1
12 V (dc) car charger	721-605-G1
Lithium ion battery	721-702-G1
Battery charging cradle	721-610-G1
Battery/cradle combo	721-604-G1
Extra-long probe (69 cm)	721-611-G1
Needle probe extension	721-612-G1
Refrigerant sensor (Detects CFCs, HFCFs, HFCs, and HFOs)	721-701-G1
CO ₂ sensor	724-701-G2
Flammable refrigerant sensor	724-701-G3
Filter cap	712-705-G1
Filter cartridges	712-707-G1
Carrying case	724-700-G1





DUAL MODES HELP FIND THE LEAK FASTER

Use the new Cloud Hunting mode (left) to find the area highest in concentration, then switch to classic Pinpoint Mode (right) to pinpoint the leak

DETECT REFRIGERANT, CO₂, AND EVEN FLAMMABLES

D-TEK 3 and D-TEK Stratus are designed with versatility in mind. Quickly and easily switch sensors to look for refrigerant, CO_2 , or even flammable leaks.

724-701-G1

724-202-G1 D-TEK Stratus with standard refrigerant sensor D-TEK Stratus with CO₂ sensor only

724-701-G2 724-701-G3



From left to right: refrigerant sensor 724-701-G1, CO2 sensor

D-TEK® 3

REFRIGERANT LEAK DETECTOR



SPECIFICATIONS	
Includes	D-TEK 3 Infrared sensor Lithium ion battery Spare filters AC wall charger Carrying case
Compatible refrigerants	
Refrigerant sensor	R22, R32, R134a, R404a, R407c, R410a, R422b R448a, R449a, R452a, R452b, R507 (AZ50), R1234yf and more
CO ₂ sensor	CO ₂ (R744)
Flammable refrigerant sensor	R290, R600a, R441a
Sensitivity (tested to EN14624 standa	ard)
R134a	0.04 oz./yr (1g/yr)
R1234yf	0.02 oz./yr (0.5g/yr)
R290	0.2 oz./yr (5g/yr)
R744 (CO ₂)	0.07 oz./yr (2g/yr)
Ammonia	0.1 oz./yr (3g/yr)
Sensor life	Up to 2,000 hours
Power source	Lithium ion battery (rechargeable) Micro USB (can operate while charging)
Battery life	~10 hours
Weight	0.97 lb. (440g)
Certifications	CE EN14624:2020 A2L certified
Patents (pending)	Application #10 2018 208 826.8
Probe length (standard probe)	~17 in. (43cm)
Warranty	Two-year over-the-counter
ORDERING INFORMATION	
D-TEK 3 (includes refrigerant sensor only)	721-202-G1
D-TEK 3 (includes CO ₂ sensor only)	721-204-G1
Accessories and Replacement Parts	
Earbuds	721-607-G1
TEK-Check R134a reference leak	703-080-G10
TEK-Check R1234yf reference leak	703-080-G12
Wall charger (US and international)	721-606-G1
12 V (dc) car charger	721-605-G1
Lithium ion battery	721-702-G1
Battery charging cradle	721-610-G1
Battery/cradle combo	721-604-G1
Extra-long probe (69 cm)	721-611-G1
Needle probe extension	721-612-G1
Refrigerant sensor (Detects CFCs, HFCFs, HFCs, and HFOs)	721-701-G1
CO ₂ sensor	724-701-G2
Flammable refrigerant sensor	724-701-G3
Filter cap	712-705-G1
Filter cartridges	712-707-G1
Carrying case	724-700-G1

ADVANTAGES

- Detects traditional refrigerants, blends, CO₂*, and even flammables*
- All new, redesigned infrared sensor
- Longest sensor life in the industry
- Easy field replacement
- New lithium ion battery
- Quick charge capability
- Easy field replacement
- Automatic and manual zero modes
- Sensitivity will not degrade over time
- Rugged carrying case included

*Requires optional sensor

DETECT REFRIGERANT, CO₂, AND EVEN FLAMMABLES

D-TEK 3 and D-TEK Stratus are designed with versatility in mind. Quickly and easily switch sensors to look for refrigerant, CO₂, or even flammable leaks.

724-202-G1 D-TEK 3 with standard refrigerant sensor 724-204-G1 D-TEK 3 with CO₂ sensor only

724-701-G1 Refrigerant sensor

724-701-G2 CO₂ sensor

724-701-G3



From left to right: refrigerant sensor 724-701-G1, CO2 sensor 724-701-G2, and flammable refrigerant sensor 724-701-G3.



Compass®

REFRIGERANT LEAK DETECTOR

Locate the leak with proven sensor technology.

Compass takes the proven heated diode sensor of TEK-Mate and adds premium features like a rubber hand grip and rechargeable battery. Get improved sensitivity from the probe tip-mounted sensor. Compass can even be operated while charging with the included car and wall chargers.



ADVANTAGES

- Sensitivity of 0.15 oz./year (4 g/year)
- Detects all CFCs, HCFCs, HFCs, and HFOs
- Proven heated diode sensor for reliable leak checking
- No false alarms from soap solutions
- Runs on rechargeable battery or AC adapter
- Advanced filter keeps out water, dirt, and oil
- Rugged carrying case included

SPECIFICATIONS	5
Includes	Compass Heated diode sensor NiMH rechargeable battery Spare filters AC wall charger DC car charger Carrying case
Compatible refrigerants	R22, R32, R134a, R404a, R407c, R410a, R422b, R448a, R449a, R452a, R452b, R507 (AZ50), R1234yf and more
Minimum sensitivity	0.15 oz./yr. (4 g/a)
Power source	NiMH battery (rechargeable) Wall/car charger (can operate while charging)
Battery life	5.5 hours
Weight	1.15 lb. (522 g)
Certifications	CE
Probe length	15 in. (38 cm)
Warranty	Two-year over-the-counter

ORDERING INFORMATION	
Compass (115 V)	717-202-G1
Accessories and R	eplacement Parts
Headphones	032-0430
Premium headphones	032-0427
TEK-Check R134a reference leak	703-080-G10
115 V (ac) wall charger	033-0 <mark>019-G1</mark>
12 V (dc) car charger	703-055-P1
NiMH battery	712-700-G1
Sensor	703-020-G1
Filters	717-701-G1
Carrying case	717-700-G1

TEK-Mate®

REFRIGERANT LEAK DETECTOR

Find leaks fast.

Affordable price, simple operation, and reliable performance make TEK-Mate the refrigerant leak detector of choice for thousands of technicians. See for yourself why TEK-Mate is the #1 refrigerant leak detector for many HVAC/R technicians.





2 x D



ADVANTAGES

- Sensitivity of 0.25 oz. (7 g)/year
- Detects all CFCs, HCFCs, HFCs, and HFOs
- Proven heated diode sensor for reliable leak checking
- No false alarms from soap solutions
- Runs on two D-cell batteries
- Rugged carrying case included

SPECIFICATIONS

Includes	TEK-Mate Heated diode sensor Two D-size alkaline batteries Spare filters Carrying case
Compatible refrigerants	R22, R32, R134a, R404a, R407

R452a, R452b, R507 (AZ50), R1234yf and more

Minimum sensitivity 0.25 oz./yr. (7 g/yr.)
Sensitivity per EN14624 2 g/yr.

Power source Two D-size alkaline batteries

 Battery life
 16 hours

 Weight
 700 g

 Certifications
 CE EN14624:2020 A2L certified

 Probe length
 15 in. (38 cm)

Warranty Two-year over-the-counter

705-700-G1

ORDERING INFORMATION

Carrying case

TEK-Mate	705-202-G1
Accessories and	Replacement Parts
TEK-Check R134a	
reference leak	703-080-G10
Sensor	703-020-G1
Filters	705-600-G1



GAS-Mate®

COMBUSTIBLE GAS LEAK DETECTOR

Safely detect combustible gas and flammable refrigerant leaks.


GAS-Mate is an intrinsically safe combustible gas leak detector that can safely and reliably detect leaks of combustible gases, flammable refrigerants, and hydrogen forming gas. It is a versatile tool for use in heating, air conditioning, refrigeration, and automotive applications. You can leak check with confidence knowing GAS-Mate is backed by an industry-best three-year warranty.









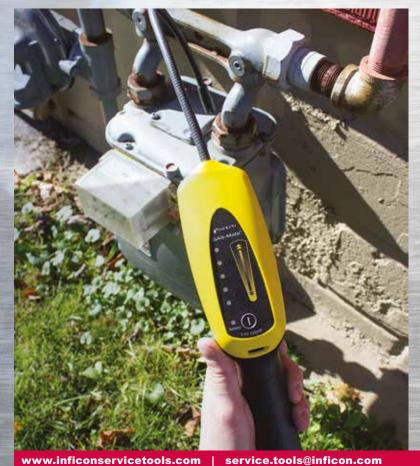


SPECIFICATIONS	•
Includes	GAS-Mate Combustible gas sensor Two D-size alkaline batteries Carrying case
Compatible refrigerants	Propane (R290), isobutane (R600a), R441a, hydrogen forming gas (95/5), natural gas, methane, ammonia, and more
Sensitivity	5 ppm for methane, propane (R290), isobutane (R600a), and hydrogen 1 ppm for gasoline
Power source	Two D-size alkaline batteries (use Duracell® MN1300 to main- tain intrinsically safe approval)
Battery life	25 hours
Weight	1.54 lb. (700g)
Certifications	CE Intrinsically safe for Class I, Division I, Groups A - D, T4 and II 3G Ex nA nL IIC T4 X as per MET Laboratories Listing #E112145
Probe length	15 in. (38 cm)
Warranty	Three-year over-the-counter

ORDERING IN	FORMATION	
GAS-Mate	718-202-G1	
Accessories and	Replacement Parts	
Sensor	706-700-G1	
Carrying case	718-701-G1	

ADVANTAGES

- Detects natural gas, propane, isobutane, ammonia, hydrogen forming gas (95/5), and more
- Ultimate sensitivity of 5 ppm for methane, R290 (propane), and R600a (isobutane)
- Intrinsically safe for use in combustive/ explosive environments
- Great for flammable refrigerants like R290, R600a, and R441a
- Runs on two D-cell batteries

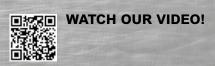

Whisper®

ULTRASONIC LEAK DETECTOR

Can you hear the leak? We can.

Whisper uses ultrasonic technology to listen for the sound of a gas moving through a leak site, making it a super versatile tool for leak checking ANY gas in pressurized or vacuum systems. The optional accessory kit adds even more functionality, allowing for leak checking of door seals, ducts, steam traps, and mechanical parts like bearings. With its wide range of applications, Whisper is a great tool to have on hand.







Whisper includes	Whisper Headphones Rubber extension probe Two D-size alkaline batteries Carrying case
Whisper with accessory kit includes	Whisper Premium headphones Metal contact probe Whisper Transmitter (with battery) Rubber extension probe Two D-size alkaline batteries Carrying case
Power source	Two D-size alkaline batteries
Battery life	165 hours (laser pointer off) 115 hours (laser pointer on)
Weight	1.06 lb. (482g)
Certifications	CE

ORDERING INFORMATION		
Whisper	711-202-G1	
Whisper with accessory kit includes	711-203-G1	
Accessories and Replacement Par	ts	
Headphones	032-0430	
Premium headphones	032-0427	
Whisper Transmitter	711-600-G1	
Contact probe	711-703-G1	
Corming coop	711 701 01	

Two-year over-the-counter



Accessory kit includes:

- Hard metal probe for checking mechanical parts like worn bearings
- Whisper Transmitter for checking door and window seals

ADVANTAGES

- Detects pressure and vacuum leaks for all gases
- Works even in noisy environments
- Laser pointer makes it easier to pinpoint the leak
- Applications include pressure/vacuum leaks, electrical arcing, malfunctioning steam traps and more!
- Only technology to detect pressurized nitrogen leaks
- Rugged carrying case included



NOW WITH LASER POINTER!

CO Check®

CARBON MONOXIDE METER

Superior accuracy for peace of mind.

CO Check is a reliable and affordable tool to measure the carbon monoxide (CO) level in your immediate environment. A large display indicates the ppm level of CO in the environment and audible alarms and colored indicators alert if dangerous levels of CO are present. CO Check is a great companion for any technician's toolbox.



SPECIFICATIONS	
Includes	CO Check 9V alkaline battery Holster case
Battery life	200+ hours
Power source	9 V alkaline battery
Range	1 to 999 ppm
Display resolution	1 ppm
Accuracy	3% of reading ±1 ppm
Auto shut-off	20 min.
Alarm indicators	Variable speed audio alarm, colored LEDs, ppm display
Dimensions (with holster)	6.3 × 3.8 × 2.0 in. (16.0 × 9.7 × 5.1 cm)
Weight (with holster)	0.56 lb. (250 g)
Warranty	Two-year over-the-counter

ORDERING IN	NFORMATION	
CO Check	715-202-G1	
Accessories and	Replacement Parts	
Holster case	715-400-P1	

ADVANTAGES

- Best-in-class accuracy for peace of mind
- Simple operation for ease of use
- Bright, colored indicators and audible alarm for quick hazard recognition
- Large, easy-to-read display
- Runs on one 9 V battery
- MAX feature retains the highest reading for easy multitasking
- Padded holster with belt clip for hands-free use

CARBON MONOXIDE:

- is generated by poorly maintained fuel-burning appliances
- kills over 200 people each year*
- is colorless, odorless and tasteless
- can cause poisoning, which mimics the symptoms of the flu but can be fatal with high CO exposure levels (such as above 100 PPM)
- can be harmful even at low exposure levels even single digit PPM readings

*from the Consumer Product Safety Commission

Wey-TEK™

REFRIGERANT CHARGING SCALE

Accurate and reliable readings for years to come.

The Wey-TEK Refrigerant Charging Scale truly is a tool you can rely on. Simple operation, outstanding durability, and great accuracy make Wey-TEK a great choice for any technician. A large weighing platform, 100 kg capacity, and competitive price make Wey-TEK a great value. See why Wey-TEK is the most requested refrigerant scale on the market.







760 Ag / 320 lb

ADVANTAGES

- 220 lb. (100 kg) capacity
- Large, all-metal platform for durability and versatility
- High accuracy load cell will not drift
- Easy-to-use handpiece with detachable communications cable
- Displays measurements in kg, decimal lb., or lb./oz.
- Rugged carrying case included

SPECIFICATIONS

	Includes	Wey-TEK weighing platform witl wired control handpiece 9 V alkaline battery Carrying case
	Weighing capacity	220 lb. (100kg)
ı	Accuracy	±0.3% of reading ±10 g
ı	Display resolution	10 g
i	Display type	LCD
í	Display units	kg, lb., or lb./oz.
i	Power source	9 V alkaline battery
ı	Battery life	60 hours
ı	Weight (in case)	9 lb. (4,080 g)
ŀ	Weighing platform dimensions (W x L)	12.3 × 10.8 in. (31.1 × 27.3 cm
	Warranty	Two-year over-the-counter

ORDERING INFORMATION

Wey-TEK	713-202-G1
Accessories and Replacement Parts	
Replacement weighing platform	713-700-G1
Replacement control handpiece	713-701-G1
Replacement cable	600-1274-P1
Carrying case	713-703-G1

12

Wey-TEK HD Wireless[™]

REFRIGERANT CHARGING SCALE

Wireless freedom meets superior durability.

Wey-TEK HD Wireless takes the rugged performance of Wey-TEK and goes a step further. With a large, rubberized weighing platform, capacity of 115 kg, and Bluetooth® wireless technology for use with an optional handpiece or free smartphone app, Wey-TEK HD Wireless will help you save time and money by getting you to the next job quickly.



Apple, the Apple logo, and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc. Google Play is a trademark of Google Inc. Android is a trademark of Google Inc.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by INFICON is under license. Other trademarks and trade names are those of their respective owners.



ADVANTAGES

- 250 lb. (115 kg) capacity
- Real-time measurements from your smartphone or tablet*
- High accuracy load cell will not drift
- 10 m Bluetooth® range
- Displays measurements in kg, decimal lb., or lb./oz., or oz.
- Alarm mode allows you to multitask on the job
- Save and e-mail job logs for refrigerant tracking**
- * Compatible with iPhone[®] 4s and above. Compatible with Android[™] 2.2 and above.
- ** Job logs and email only available using smartphone or tablet



	202 model	203 model
Includes	Wey-TEK HD Wireless Four AA-size alkaline batteries Carrying case	Wey-TEK HD Wireless Bluetooth handpiece Eight AA-size alkaline batteries Carrying case
Weighing capacity	250 lb. (115 kg)	
Accuracy	±0.06% of reading ±10 g	
Display resolution	0.25 oz. (10 g)	
Display type	User provided smartphone/tablet	Full color LCD or user provided smartphone/tablet
Display units	kg, lb., lb./oz., or oz.	
Power source	Four AA-size alkaline batteries (base)	Four AA-size alkaline batteries (base Four AA-size alkaline batteries (handpiece)
Battery life	80 hours (base)	80 hours (base) 100 hours (handpiece)
Weight (in case)	8 lb. (3,620 g)	9 lb. (4,080 g)
Weighing platform dimensions (W x L)	12.3 × 10.8 in. (31.1 × 27.3 cm)	

CE, IPx4 water resistant

Two-year over-the-counter

ORDERING INFORMATION

Certifications Warranty

Wey-TEK HD Wireless 719-202-G1
Wey-TEK HD Wireless
with Handpiece 719-203-G1
Accessories and Replacement Parts
Handpiece only 719-715-G1
Carrying case 719-701-G1



Vortex Dual®

REFRIGERANT RECOVERY MACHINE

The most powerful unit available with the best warranty in the industry.

Vortex Dual is INFICON's best refrigerant recovery machine yet! Complete your job with confidence knowing Vortex Dual will perform with industry-leading recovery rates and an unsurpassed three-year warranty. Vortex Dual is truly a tool you can rely on.







ADVANTAGES

- Achieve industry-leading recovery rates with a powerful 1 HP dual piston compressor
- Microchannel condenser provides exceptional heat exchange in high temperatures
- Two valve operation with self-purge for ease of use
- Large, easy to read gages
- Heavy duty blow molded case
- Fully serviceable
- Shoulder strap included for easy transport




WATCH OUR VIDEO!

Shoulder strap included (not shown) Easy-to-read gages Durable metal knobs Easy two-knob operation 1 HP dual piston compressor (not shown) Filter-dryer included Micro-channel condenser (not shown) Heavy duty blow molded case



HIGH TEMP VAPOR RECOVERY RATES

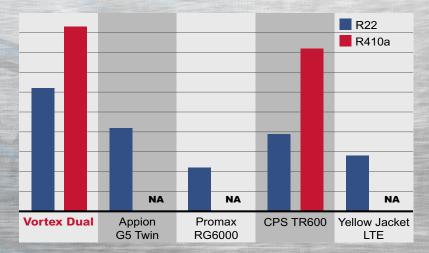

SPECIFICATIONS	
Includes	Vortex Dual Shoulder strap Filter/dryer Detachable power cord
Compatible refrigerants	Commonly used CFCs, HCFCs, HFCs, and HFOs including R410a, R12, R22, R32, R134a, R404, R407c, R500, R502, R1234yf, Not recommended for use with flammable (HC) refrigerants
Weight	29.75 lb. (13.5 kg)
Dimensions (L x W x H)	16.7 × 9.2 × 14.2 in. (42.4 × 23.4 × 36.1 cm)
Compressor	1 HP oil-less, dual piston, AC motor drive
High pressure shut-off	550 psi
Power source	115 V (ac), 60 Hz, 15 A or 230 V (ac) 50/60 Hz, 10 A (depending on model)
Certifications	CSA (714-202-G1 model) CE (714-202-G11 model) A2L certified
Warranty	Three-year

CERTIFICATIONS

Vortex Dual is an EPA-certified machine in accordance with Section 608 of the Clean Air Act. It has been independently tested and certified to be in conformance with AHRI standard 740-1998.

Representative of category	R134a	R22	R410a
Representative of category	III	IV	V
High temp vapor rate	N/A	0.62 (0.28)	0.93 (0.42)
Vapor rate	0.47	0.55	0.55
	(0.21)	(0.25)	(0.25)
Liquid rate	5.1	8.0	10.60
	(2.29)	(3.60)	(4.77)
Push-pull rate	11.64	15.01	17.39
	(5.24)	(6.75)	(7.82)

Rates are in lb./min. (kg/min.) and are independently tested

ORDERING INFORMATION

Vortex Dual, 115 V (ac) 714-202-G1
Vortex Dual, 230 V (ac) 714-202-G11

Accessories and Replacement Parts
Shoulder strap 722-408-P1
Filter/dryer 722-409-P1
Power cord (115 V) 068-0684
Power cord (230 V) 068-0685

16

QS5

VACUUM PUMP

An affordable pump that lasts.

QS5 is a 142 l/min (5 CFM) pump with premium features without the premium price. Dual voltage operation, brass fittings, and an exhaust demister make QS5 a versatile and durable pump for everyday use. A two-year warranty ensures QS5 will stand up to daily punishment for years.

ADVANTAGES

- 142 l/min (5 CFM) displacement for vacuum down to 0,02 mbar
- Inlet check valve prevents oil from flowing back into the system
- Durable metal fittings and base
- Oil demister helps reduce oil in exhaust
- Versatile dual voltage operation

SPECIFICATION	S
Includes	QS5 Detachable power cord Vacuum pump oil
Free air displacement	5 cfm (142 l/min 8.52 m³/h)
Motor	1/2 HP AC
Oil capacity	12.5 oz. (370 ml)
Weight	24 lb. (10.89 kg)
Power source	115/230 V (ac) dual voltage operation
Warranty	Two-year over-the-counter

ORDERING INFORMATION QS5 pump, 115 V (ac) 700-100-P1 QS5 pump, 230 V (ac) 700-100-P10 Accessories and Replacement Parts Power cord (115 V) 068-0684 Power cord (230 V) 068-0685



Pilot® Plus

VACUUM GAGE

Measure vacuum like a pro.

Pilot Plus is an affordable and reliable vacuum gage that can measure your entire vacuum process, from atmosphere down to 0,01 mbar. A Pirani sensor with a protective filter and other premium features give you great performance. A two-year warranty ensures it will perform for years to come.









SPECIFICATIONS	5
Includes	Pilot Plus 9 V alkaline battery Replacement filters Storage case
Battery life	45 hours
Power source	9 V alkaline battery
Fitting type	1/4 in. male flare (710-202-G1 model) KF16 flange (710-202-G27 model)
Fitting thread	7/16-20 UNF (710-202-G1 model)
Display units	Microns, Pascal, millibar, Torr
Display range	atm (760,000 microns) to 1 micror
Auto shut-off	60 min.
Accuracy	0 to 200 microns: ±10 microns >200 microns: ±10% of reading
Display resolution	1 micron 1 Pa 0.01 mbar 0.001 Torr
Maximum overpressure	150 psi (7.76 × 10 ⁶ microns)
Dimensions	3.2 × 1.1 × 7.1 in. (8.2 × 2.9 × 18.0 cm)
Weight	0.52 lb. (240 g)
Warranty	Two-year over-the-counter

ORDERING INFOR	MATION
Pilot Plus	710-202-G1
Pilot Plus with KF16 flange	710-202-G27

Accessories and Replacement Parts

Holster case	715-400-P1
Carrying case	710-600-G1
Spare filters	710-701-G1
	HART COUNTY OF THE COUNTY OF T

ADVANTAGES

- Full range measurement from atmosphere to 1 micron
- Unique filter design protects sensor from contamination
- Runs on one 9 V battery
- Pirani sensor for superior accuracy
- Displays units in micron, Pascal, Torr, or millibar
- Rugged carrying case included




Leak Detector Selection Guide

WHICH LEAK DETECTOR IS RIGHT FOR YOU?

Choosing the right leak detector can be hard. Luckily, INFICON offers a full line of leak detectors to meet all of your needs, whether it's residential, commercial, industrial, or automotive AC or refrigeration. We are proud to stand behind our products by offering an outstanding over-the-counter warranty, so you can purchase with confidence.

If you need more help, please call us at 1-800-344-3304 and we'll help you pick the right instrument for your needs.

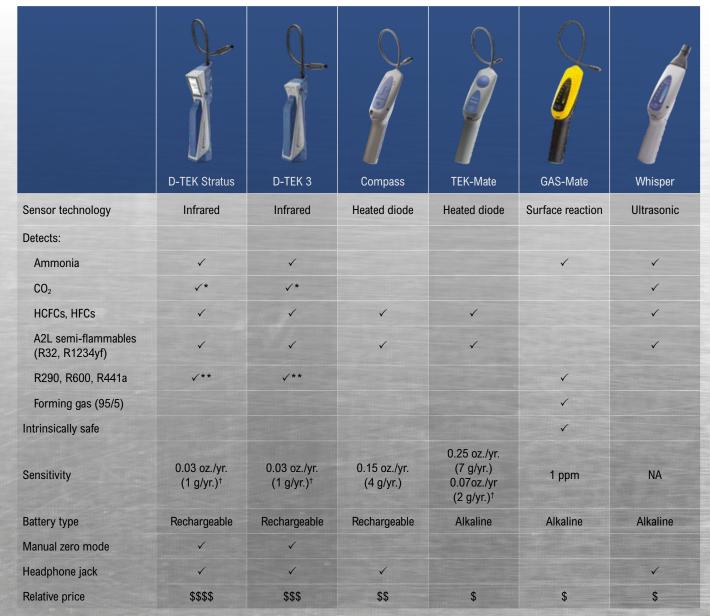

- † Tested per EN14624

About INFICON

INFICON provides technology leadership and application expertise in areas such as gas analysis, leak detection, vacuum measurement and control, as well as the chemical analysis of air, soil, and water. Our products are used in a variety of applications and markets.

Production leak detectors from INFICON ensure quality in air conditioning, refrigeration and automotive manufacturing worldwide, and technicians rely on INFICON Service Tools to ensure that these products will remain free of leaks for years to come. For more information about INFICON, its products and its global sales and service network, go to www.inficon.com.

We provide a global network of experts who offer fast and local applications and product support.





