

# D-TEK Stratus®

## REFRIGERANT LEAK DETECTOR AND PORTABLE MONITOR

**Find profit-crushing leaks in no time.**

D-TEK Stratus combines the excellent leak detection of D-TEK Select and the cloud hunting capability of a large portable monitor all in one hand-held unit. Quickly locate the area containing the leak using the large, easy-to-read LCD display, and then pinpoint the leak with one instrument! D-TEK Stratus is the next big thing in refrigerant leak detection.



**A2L**  
CERTIFIED



EN14624

Li-Ion



**3 IN 1!**



**WATCH OUR VIDEO!**

### ADVANTAGES

- Detects traditional refrigerants, blends, CO<sub>2</sub>\*, and even flammables\*
- Innovative cloud hunting mode with ppm helps locate leaks faster than ever
- Cloud hunting and pinpoint modes is like having two leak detectors in one
- All new, redesigned infrared sensor
  - Longest sensor life in the industry
  - Easy field replacement
- New lithium ion battery
  - Quick charge capability
  - Easy field replacement
- Automatic and manual zero modes
- Sensitivity will not degrade over time
- Rugged carrying case included

\*Requires optional sensor

\*Compatible to detect A3 refrigerants in small charge systems only. For larger systems, use an intrinsically safe leak detector.




## SPECIFICATIONS

Includes	D-TEK Stratus Infrared refrigerant sensor Lithium ion battery Spare filters AC wall charger with USB C cable Extra-long probe Carrying case Earbuds
<b>Compatible refrigerants</b>	
Refrigerant sensor	R22, R32, R134a, R404a, R407c, R410a, R422b, R448a, R449a, R452a/b, R454a/b, R507 (AZ50), R1234yf/ze and more including A2Ls
CO <sub>2</sub> sensor	CO <sub>2</sub> (R744)
Flammable refrigerant sensor	R290, R600a, R441a
<b>Sensitivity (tested to EN14624 standard)</b>	
R134a	0.03 oz./yr (1 g/yr)
R1234yf	0.02 oz./yr (0.5 g/yr)
R290	0.2 oz./yr (5 g/yr)
R744 (CO <sub>2</sub> )	0.07 oz./yr (2 g/yr)
Ammonia	0.1 oz./yr (3 g/yr)
Sensor life	Up to 2,000 hours
Power source	Lithium ion battery (rechargeable) USB (can operate while charging)
Battery life	~8 hours (Cloud Hunting Mode) ~10 hours (Pinpoint Mode)
Weight	1.31lb (0.59 kg)
Certifications	EN14624:2020 A2L certified CE, UKCA
Patents	Pat. US 11441969B2 Pat. US 11262296B2 Application #18171080.7
Probe length (standard probe)	~17 in. (43 cm)
Warranty	Two-year over-the-counter

## ORDERING INFORMATION

D-TEK Stratus (includes refrigerant sensor only)	724-202-G1
<b>Accessories and Replacement Parts</b>	
Earbuds	721-607-G1
TEK-Check R134a reference leak	703-080-G10
TEK-Check R600a reference leak	703-080-G29
TEK-Check R1234yf reference leak	703-080-G12
Wall charger (US and international)	721-606-G1
12 V (dc) car charger	721-605-G1
Lithium ion battery	721-702-G1
Battery charging cradle	721-610-G1
Battery/cradle combo	721-604-G1
Extra-long probe (~27 in. (69 cm))	721-611-G1
Needle probe extension	721-612-G1
Refrigerant sensor (Detects CFCs, HFCFs, HFCs, and HFOs)	724-701-G1
CO <sub>2</sub> sensor	724-701-G2
Flammable refrigerant sensor	724-701-G3
Filter cap	712-705-G1
Filter cartridges	712-707-G1
Leak Detection Pro Kit	724-712-G1
Carrying case	724-700-G1

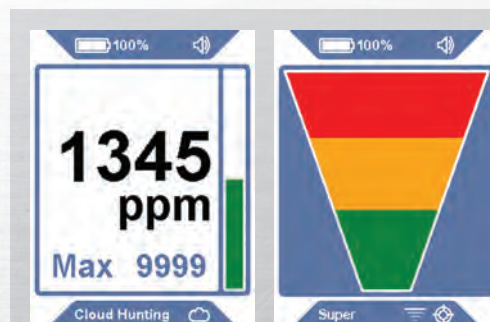

### DUAL MODES HELP FIND THE LEAK FASTER

Use the new Cloud Hunting mode (left) to find the area highest in concentration, then switch to classic Pinpoint Mode (right) to pinpoint the leak.

### DETECT REFRIGERANT, CO<sub>2</sub>, AND EVEN FLAMMABLES

D-TEK 3 and D-TEK Stratus are designed with versatility in mind. Quickly and easily switch sensors to look for refrigerant, CO<sub>2</sub>, or even flammable leaks.

724-202-G1	D-TEK Stratus with standard refrigerant sensor
724-701-G1	Refrigerant sensor
724-701-G2	CO <sub>2</sub> sensor
724-701-G3	Flammable refrigerant sensor



From left to right: refrigerant sensor 724-701-G1, CO<sub>2</sub> sensor 724-701-G2, and flammable refrigerant sensor 724-701-G3.