

### **Ambient Capacitance Diaphragm Gauge**

The INFICON SKY CDG025D Capacitance Diaphragm Gauge line of highly accurate temperature compensated manometers is designed for stable performance in harsh manufacturing tool environments. Advanced digital electronics improve gauge performance and offer easy handling features such as one push button zero function and setpoint adjustment. The corrosion resistant ultra pure ceramic sensor provides excellent zero stability with a long life expectancy of several million pressure cycles, including atmospheric bursts. A unique sensor shielding (patent pending) protects the gauge from process contamination. A robust mechanical design and digital electronics improve EMC compatibility, long term stability and temperature compensation. The CDG025D sets new standards for fast stability after power on and fast recovery from atmospheric pressure exposure.

### **ADVANTAGES**

- Full scale (FS) ranges from 100 mTorr ... 1000 Torr
- · Fast stability after power on
- Fast recovery from atmospheric pressure
- · Corrosion resistant ceramic sensor
- Excellent long term signal stability
- Temperature compensated
- · Sensor double protected from contamination
- One push button zero function
- Wide range power supply
- Two setpoints
- RS232 interface
- Clean room compliant

### **APPLICATIONS**

Accurate and fast pressure measurement for demanding applications:

- Semiconductor manufacturing equipment for Etch, CVD, PVD, ALD
- Data storage and display manufacturing equipment
- · Industrial vacuum equipment
- · General high accuracy pressure measurement




SKY<sup>®</sup> CDG025D-X3

**NFICON** 



#### **ORDERING INFORMATION**

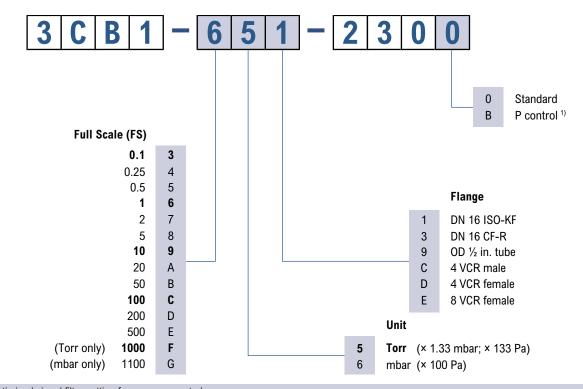

<sup>1)</sup> Optimized signal filter setting for pressure control

**bold** = standard products

Other flange types on request.

2



### SPECIFICATIONS

Full scale (FS)	1000 Torr, 1100 mbar	500 1 Torr / mbar	0.5 0.05Torr / mbar
Accuracy <sup>1)</sup>	0.2 % of reading	0.2 % of reading	0.5 % of reading
Temperature effect			
on zero	0.005 % FS / °C	0.005 % FS / °C	0.02 % FS / °C
on span	0.01 % of reading / °C	0.01 % of reading / °C	0.03 % of reading / °C
Resolution		0.003 % FS	
Pressure, max. (absolute)	400 kPa	260 kPa	130 kPa
Response time <sup>2)</sup>	30 ms	30 ms	130 / 30 ms <sup>3)</sup>
Lowest reading		0.01 % FS	
Lowest suggested reading		0.05 % FS	
Lowest suggested control pressure		0.5 % FS	
Temperature			
Operation (ambient)		+5 +50 °C	
Bakeout at flange4)		≤110 °C	
Storage	−20 +65 °C		
Supply voltage	+14 +30 V (dc)		
Power consumption	≤1 W		
Output signal (analog)	0 +10 V (dc)		
Degree of protection		IP 30	
Standards			
CE conformity	EN 61000-6-2, EN 61000-6-3, EN 61010, RoHS		
ETL certification	UL 61010-1, CSA 22.2 No.61010-1		
Electrical connection	D-Sub, 15-pin, male		
Setpoint			
Number of setpoints	2 (SP1, SP2)		
Relay contact	30 V (dc) / ≤0.5 A (dc)		
Hysteresis	1 % FS		
Materials exposed to vacuum	ceramics (Al <sub>2</sub> O <sub>3</sub> ), stainless steel (AISI 316L)		
Internal Volume	≤5.1 cm <sup>3</sup>		
Weight		285 342 g	

<sup>1)</sup> Non-linearity, hysteresis, repeatability at 25°C ambient operating temperature without temperature effects after two hours operation

<sup>2)</sup> Increase 10 ... 90% FS

<sup>3)</sup> For pressure control type only


4) Non-operation

SKY<sup>®</sup> CDG025D-X3



DIMENSIONS

mm (inch)

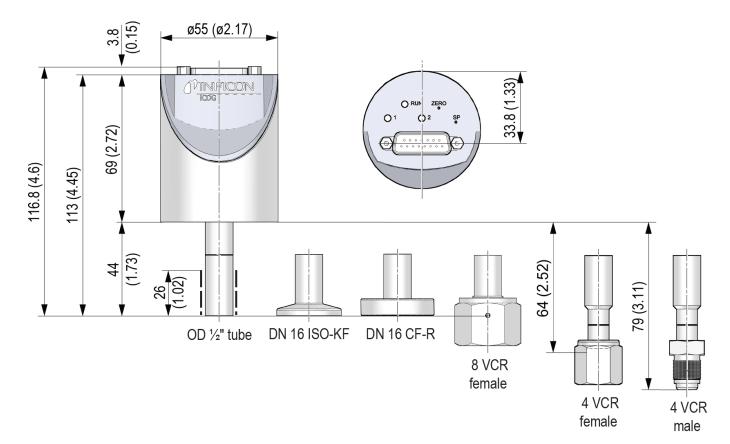



Due to our continuing program of product improvements, specifications are subject to change without notice. The trademarks mentioned in this document are held by the companies that produce them.

tiba39e1-d