




# Multigas-Sniffer-Leak Detector Ecotec E3000

---

## QMS Technology

### Setting New Standards for Sniffer Leak Detection

THE INFICON Ecotec E3000 multi-gas leak detector is bringing new levels of productivity and reliability to the final testing of refrigerators, freezers, automotive air conditioners and similar products. Leaks that are not found increase your warranty costs. False alarms increase your rework costs. Therefore, improving the accuracy and reliability of your testing operation will provide immediate cost savings.

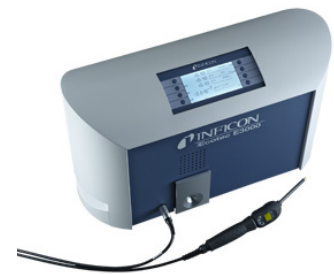

The Ecotec E3000 is specifically designed for demanding production environments. Numerous features make it easy and comfortable to use while making it more immune to careless operation and minimizing operator errors. It is also fast, to make the best use of your available cycle time. Innovative design and robustness keep the cost of ownership down and ensure very high up-time.

## ZH-CN:FEATURES

---

- Improved system design compensates for poor sniffing operation reducing the potential for missed leaks
- IGS (Interfering Gas Suppression) ensures only leaks are detected.
- Built-in ECO-Check reference leak allows for easy and fast calibration at the production line at any time
- Multiple alarms make sure leaks can not be overlooked
- I-Guide (operator-guiding mode) ensures your operator tests the right locations with the right technique
- Unit can be operated via the probe display and probe buttons without access to the main unit
- Built-in illumination source on the probe helps precisely position the sniffer tip
- Ergonomic probe design allows for easy and comfortable use
- Operating software is available in many languages

### zh-cn:Type

### Ecotec E3000

---

	530-001
Ecotec E3000A, 115V, Aviation package	530-102
Ecotec E3000A, 230V, Aviation package	530-101

## ZH-CN:SPECIFICATIONS

zh-cn:Type	Ecotec E3000
Helium	1E-6 mbarl/s
R134a	0.05 g/a (0.002 oz/yr)
R600a	0.05 g/a (0.002 oz/yr)
Measuring scale	0.05 – 999.99 g/a (0.015 – 99.999 oz/yr)
Response time incl. sniffer line	0.8s
Max No. of gases detected simultaneously	4
Leak rate units	g/a, oz/y, mbar l/s, ppm, Pa m3/s
Gas flow	160 sccm
Start-up time	< 2 min
Ambient temperature range	10 – 45 °C (50 – 113 °F)
Dimensions (W x H x D)	610 x 370 x 265 mm (24 x 14.6 x 10.4 in)
Weight	34 kg (75 lbs)

## ZH-CN:ACCESSORIES

	Ecotec E3000
120毫米刚性吸枪探尖	12213
120毫米柔性吸枪探尖	12214
385毫米柔性吸枪探尖	12216
3米吸枪	525-001
5米吸枪	525-002
刚性吸枪探尖	12215
支撑架	525-006
防水探尖	12246

## ZH-CN:CONSUMABLES

	Ecotec E3000
R410a 漏孔 (2-5 克/年)	12229
R600a 漏孔 (2-5 克/年)	12221
标准漏孔	12222
漏孔	12220



[www.inficon.com](http://www.inficon.com)    [reachus@inficon.com](mailto:reachus@inficon.com)

zh-cn:Due to our continuing program of product improvements, specifications are subject to change without notice.  
zh-cn:RateWatcher is a trademark of INFICON. All other trademarks are the property of their respective owners.

(2013-03)    © 2012 INFICON