


## PSG55x 大气压至中真空真空计

INFICON 皮拉尼标准真空计 (PSG55x) 与其兄弟产品 PCG55x 和 PSG50x 相似，采用最先进的数字皮拉尼技术。坚固的传感器设计结合紧凑的外形和众多功能，使其成为从低真空度到高真空度范围测量的正确产品。



### 好处

- 可配备钨丝 (PSG550)、镍丝 (PSG552) 或全陶瓷涂层 (PSG554) 传感器装置用于高腐蚀性应用
- 可选显示屏、设定点和数字接口
- Latest EtherCAT protocol Standard ETG.5003.2080 S (R) V1.3.0
- 易于更换的即插即用式传感元件与板载校准数据 - 保证了高度再现性和低拥有成本
- 可选输出信号和各种插孔型号，便于集成
- 可安装在任何方向 - 为工具设计工程师提供了充分的自由发挥空间
- 所有型号均提供诊断端口
- 合规和标准：CE、EN、UL、CSA、RoHS

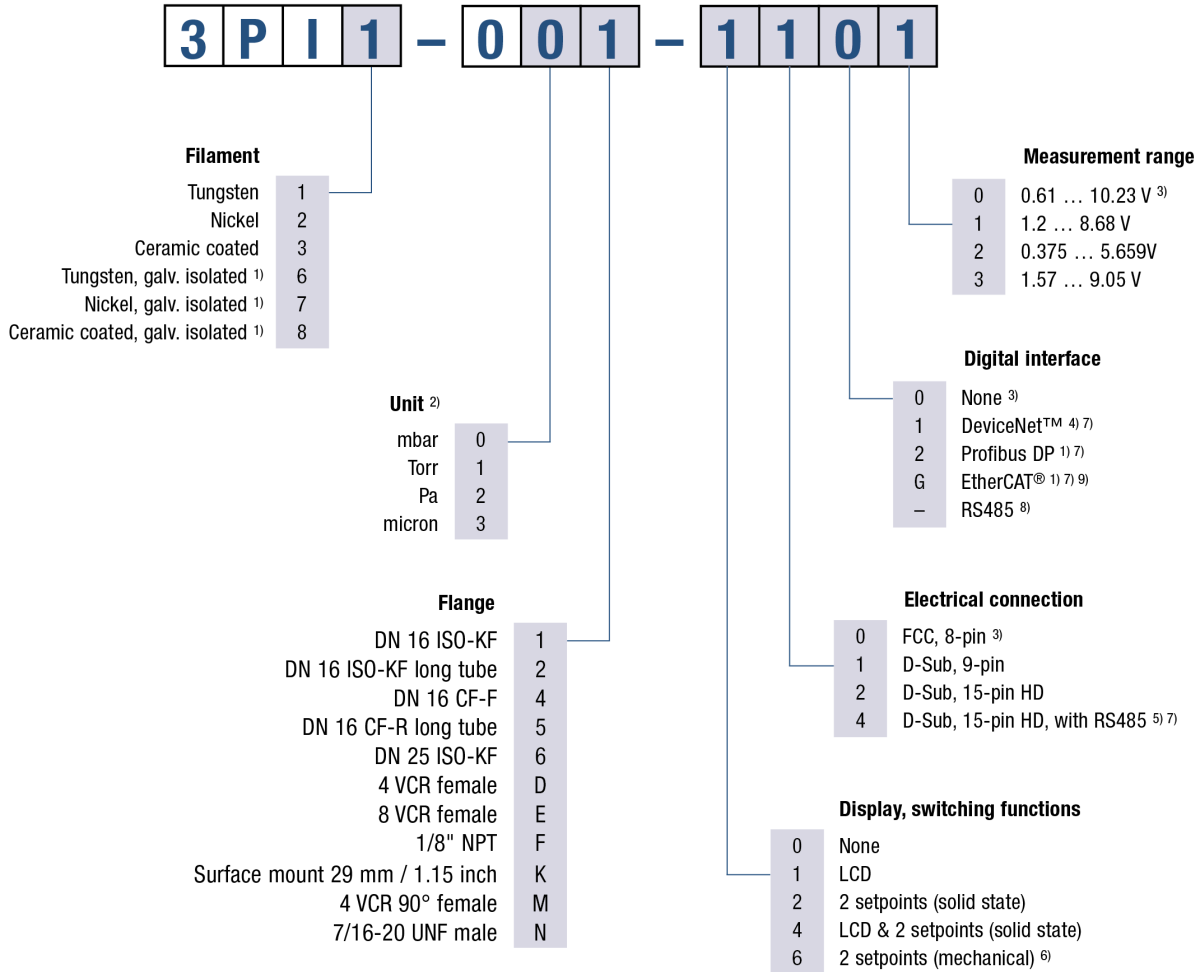

1) Only with D-Sub 9-pin connector available  
 2) When selecting LCD (liquid crystal display) choose desired pressure unit  
 3) Choose these settings when using an INFICON VGC50x or PGD400 / PGD500 controller or when choosing "4" under "Electrical connection"  
 4) Only with D-Sub 9-pin connector and galvanically isolated available  
 5) Only without additional digital interface available  
 6) Only with D-Sub 9-pin connector without LCD available  
 7) Fieldbus options only available together with switching functions (select number "2" or "4" from table "Display, switching functions")  
 8) Just selectable via number "4" from table "Electrical connection"  
 9) Communication standard ETG.5003.2080 S (R) V1.3.0; old version V1.0.0 still available on request

## 规格

类型		PSG550 Tungsten	PSG552 Nickel	PSG554 ceramic coated
测量范围	mbar	5×10 <sup>-5</sup> ... 1000	5×10 <sup>-5</sup> ... 1000	5×10 <sup>-5</sup> ... 1000
测量范围	Torr	3.8×10 <sup>-5</sup> ... 750	3.8×10 <sup>-5</sup> ... 750	3.8×10 <sup>-5</sup> ... 750
精度 (N <sub>2</sub> )				
5×10 <sup>-4</sup> ... 1×10 <sup>-3</sup> 毫巴	% of reading	±50	±50	±50
1×10 <sup>-3</sup> ... 100 毫巴	% of reading	±15	±15	±15
100 ... 1000 毫巴	% of reading	±50	±50	±50
可重复性 (N <sub>2</sub> )				
1×10 <sup>-3</sup> ... 100 毫巴	% of reading	±2	±2	±2
容许压力	bar (absolute)	≤5	≤5	≤5
压力, 最大	bar (absolute)	10	10	10
容许温度				
运行 (环境)	°C	+10 ... +50	+10 ... +50	+10 ... +50
贮存	°C	-20 ... +65	-20 ... +65	-20 ... +65
在法兰处烘烤	°C	≤80	≤80	≤80
在长管法兰处烘烤	°C	≤250	≤250	≤250
电源电压	V (dc)	+15 ... +30	+15 ... +30	+15 ... +30
功耗				
无现场总线	W	≤2.5	≤2.5	≤2.5
DeviceNet™	W	≤3	≤3	≤3
Profibus	W	≤3	≤3	≤3
输出信号模拟 3PIx-0xx-xxx0	V	0 ... +10	0 ... +10	0 ... +10
输出信号模拟 3PIx-0xx-xxx1	V	0 ... +8.5	0 ... +8.5	0 ... +8.5
输出信号模拟 3PIx-0xx-xxx2	V	0 ... +5.529	0 ... +5.529	0 ... +5.529
输出信号模拟 3PIx-0xx-xxx3	V	0 ... +8.875	0 ... +8.875	0 ... +8.875
测量范围 3PIx-0xx-xxx0	V	+0.61 ... +10	+0.61 ... +10	+0.61 ... +10
测量范围 3PIx-0xx-xxx1	V	+1.2 ... +8.5	+1.2 ... +8.5	+1.2 ... +8.5
测量范围 3PIx-0xx-xxx2	V	+0.375 ... +5.529	+0.375 ... +5.529	+0.375 ... +5.529
测量范围 3PIx-0xx-xxx3	V	+1.57 ... +8.875	+1.57 ... +8.875	+1.57 ... +8.875
电压与压强				
3PIx-0xx-xxx0	volts per decade	1.286	1.286	1.286
3PIx-0xx-xxx1 / -xxx2 / -xxx3	volts per decade	1	1	1
负载电阻	kΩ	>10	>10	>10

## 规格

类型		PSG550 Tungsten	PSG552 Nickel	PSG554 ceramic coated
设定点继电器				
设定点数量		2	2	2
继电器触点		n.o., potential free	n.o., potential free	n.o., potential free
设定点继电器				
范围 (N <sub>2</sub> )	mbar	5×10 <sup>-5</sup> ... 1000	5×10 <sup>-5</sup> ... 1000	5×10 <sup>-5</sup> ... 1000
设定点继电器				
滞后	% of threshold	10	10	10
设定点继电器				
触点额定固态继电器	V (dc)	≤30	≤30	≤30
触点额定机械继电器	V (dc)	≤30	≤30	≤30
设定点继电器				
触点额定固态继电器	A (dc)	≤0.3	≤0.3	≤0.3
触点额定机械继电器	A (dc)	≤1	≤1	≤1
设定点继电器				
转换时间	ms	≤30	≤30	≤30
接口 ( 数字 )		RS232C	RS232C	RS232C
电气连接				
3PIx-0xx-x0xx		FCC, 8-pin	FCC, 8-pin	FCC, 8-pin
3PIx-0xx-x1xx		D-Sub, 9-pin, male	D-Sub, 9-pin, male	D-Sub, 9-pin, male
3PIx-0xx-x2xx		D-Sub, 15-pin HD, male	D-Sub, 15-pin HD, male	D-Sub, 15-pin HD, male
3PIx-0xx-x4xx		D-Sub, 15-pin HD, with RS485, male	D-Sub, 15-pin HD, with RS485, male	D-Sub, 15-pin HD, with RS485, male
电缆长度	m (ft.)	≤100 (≤330)	≤100 (≤330)	≤100 (≤330)
RS232C 运行	m (ft.)	≤30 (≤100)	≤30 (≤100)	≤30 (≤100)
暴露于真空的材料		W, Ni, NiFe, glass, SnAg, stainless steel	Ni, NiFe, glass, SnAg, stainless steel	Al <sub>2</sub> O <sub>3</sub> , stainless steel
内部容积				
DN 16 ISO-KF	cm <sup>3</sup>	4.7	4.7	4.7
DN 16 ISO-KF 长管	cm <sup>3</sup>	14.5	14.5	14.5
DN 16 CF-F	cm <sup>3</sup>	8	8	8
DN 16 CF-R 长管	cm <sup>3</sup>	14	14	14
DN 25 ISO-KF , 4 VCR	cm <sup>3</sup>	5.5	5.5	5.5
8 VCR	cm <sup>3</sup>	7	7	7

## 规格

类型		PSG550 Tungsten	PSG552 Nickel	PSG554 ceramic coated
1/8" NPT , 7/16-20 UNF	cm <sup>3</sup>	5.2	5.2	5.2
表面贴装 29 毫米/1.15 英寸	cm <sup>3</sup>	4.9	4.9	4.9
4 VCR 90°	cm <sup>3</sup>	7.9	7.9	7.9
<b>重量</b>				
无现场总线接口	g	115 ... 130	115 ... 130	115 ... 130
带现场总线接口	g	230 ... 250	230 ... 250	230 ... 250
保护等级		IP 40	IP 40	IP 40
<b>标准</b>				
CE 合规		EN 61000-6-2/-6-3, EN 61010	EN 61000-6-2/-6-3, EN 61010	EN 61000-6-2/-6-3, EN 61010
ETL 认证		UL 61010-1, CSA 22.2 No.61010-1	UL 61010-1, CSA 22.2 No.61010-1	UL 61010-1, CSA 22.2 No.61010-1
<b>DeviceNet™</b>				
协议		DeviceNet™, group 2 slave only	DeviceNet™, group 2 slave only	DeviceNet™, group 2 slave only
MAC ID		2 switches (address 00 - 63) or network programmable	2 switches (address 00 - 63) or network programmable	2 switches (address 00 - 63) or network programmable
数字功能		read pressure, select units: Torr, mbar, Pa, micron, counts; monitor gauge status, detailed alarm and warning information, safe state allows definition of behavior in case of error	read pressure, select units: Torr, mbar, Pa, micron, counts; monitor gauge status, detailed alarm and warning information, safe state allows definition of behavior in case of error	read pressure, select units: Torr, mbar, Pa, micron, counts; monitor gauge status, detailed alarm and warning information, safe state allows definition of behavior in case of error
技术规格		DeviceNet™ "Vacuum Gauge Device Profile"	DeviceNet™ "Vacuum Gauge Device Profile"	DeviceNet™ "Vacuum Gauge Device Profile"
设备类型		"CG" for combination gauge	"CG" for combination gauge	"CG" for combination gauge
I/O 从属传讯		polling only	polling only	polling only
DeviceNet 连接器		Micro-Style, 5-pin, male	Micro-Style, 5-pin, male	Micro-Style, 5-pin, male
<b>DeviceNet™</b>				
数据率开关	kBaud	125, 250, 500 or network programmable	125, 250, 500 or network programmable	125, 250, 500 or network programmable
<b>DeviceNet™</b>				
电缆长度 125 kbps	m (ft.)	500 (1650)	500 (1650)	500 (1650)

## 规格

类型		PSG550 Tungsten	PSG552 Nickel	PSG554 ceramic coated
电缆长度 250 kbps	m (ft.)	250 (825)	250 (825)	250 (825)
电缆长度 500 kbps	m (ft.)	100 (330)	100 (330)	100 (330)
DeviceNet™				
DeviceNet™ 的电源电压 3PI6- / 3PI7- / 3PI8-0xx- xxxx	V (dc)	+15 ... +30	+15 ... +30	+15 ... +30
DeviceNet™				
功耗 3PI6- / 3PI7- / 3PI8- 0xx-xxxx	W	≤3	≤3	≤3
Profibus DP				
波特率	kBaud	9.6 / 19.2 / 93.75 / 187.5 / 500	9.6 / 19.2 / 93.75 / 187.5 / 500	9.6 / 19.2 / 93.75 / 187.5 / 500
Profibus DP				
波特率	Mbaud	1.5 / 12	1.5 / 12	1.5 / 12
Profibus DP				
地址		2 switches (address 00 - 127) or network programmable	2 switches (address 00 - 127) or network programmable	2 switches (address 00 - 127) or network programmable
数字功能		read pressure, select units: Torr, mbar, Pa, micron, counts ; monitor gauge status, detailed alarm and warning information, safe state allows definition of behavior in case of error	read pressure, select units: Torr, mbar, Pa, micron, counts ; monitor gauge status, detailed alarm and warning information, safe state allows definition of behavior in case of error	read pressure, select units: Torr, mbar, Pa, micron, counts ; monitor gauge status, detailed alarm and warning information, safe state allows definition of behavior in case of error
Profibus DP 连接器		D-Sub, 9-pin, female	D-Sub, 9-pin, female	D-Sub, 9-pin, female
RS485C				
波特率	kBaud	9.6 / 19.2 / 38.4 /57.6	9.6 / 19.2 / 38.4 /57.6	9.6 / 19.2 / 38.4 /57.6
RS485C				
地址		2 switches (address 00 - 255)	2 switches (address 00 - 255)	2 switches (address 00 - 255)

## 规格

类型	PSG550 Tungsten	PSG552 Nickel	PSG554 ceramic coated
数字功能	read pressure, select units: Torr, mbar, Pa, micron, counts ; monitor gauge status, detailed alarm and warning information, safe state allows definition of behavior in case of error	read pressure, select units: Torr, mbar, Pa, micron, counts ; monitor gauge status, detailed alarm and warning information, safe state allows definition of behavior in case of error	read pressure, select units: Torr, mbar, Pa, micron, counts ; monitor gauge status, detailed alarm and warning information, safe state allows definition of behavior in case of error
RS485 连接器	D-Sub, 15-pin HD, male	D-Sub, 15-pin HD, male	D-Sub, 15-pin HD, male
EtherCAT			
协议 EtherCAT	protocol specialized for EtherCAT	protocol specialized for EtherCAT	protocol specialized for EtherCAT
通讯标准	ETG.5003.1 S (R) V1.1.0 Common Device ProfileETG.5003.2080 S (R) V1.3.0 Specific Device Profile: Vacuum Gauge	ETG.5003.1 S (R) V1.1.0 Common Device ProfileETG.5003.2080 S (R) V1.3.0 Specific Device Profile: Vacuum Gauge	ETG.5003.1 S (R) V1.1.0 Common Device ProfileETG.5003.2080 S (R) V1.3.0 Specific Device Profile: Vacuum Gauge
节点地址	Explicit Device Identification	Explicit Device Identification	Explicit Device Identification
物理层	100BASE-Tx (IEEE 802.3)	100BASE-Tx (IEEE 802.3)	100BASE-Tx (IEEE 802.3)
EtherCAT 连接器	2 x RJ45, 8-pin (socket), IN and OUT	2 x RJ45, 8-pin (socket), IN and OUT	2 x RJ45, 8-pin (socket), IN and OUT
电缆	shielded Ethernet CAT5e or higher	shielded Ethernet CAT5e or higher	shielded Ethernet CAT5e or higher
过程数据	Fixed PDO mapping and configurable PDO mapping	Fixed PDO mapping and configurable PDO mapping	Fixed PDO mapping and configurable PDO mapping
邮箱 (CoE)	SDO requests, responses and information	SDO requests, responses and information	SDO requests, responses and information
EtherCAT			
电缆长度	m (ft.)	≤100 (330)	≤100 (330)

备件


	PSG550 Tungsten	PSG552 Nickel	PSG554 ceramic coated
PSG550 备用传感器, 1/8" NPT	355-930	-	-
PSG550 备用传感器, 29x29mm	355-934	-	-
PSG550 备用传感器, 4-VCR	355-932	-	-
PSG550 备用传感器, 4-VCR / 90°	355-935	-	-
PSG550 备用传感器, 7/16-20 UNF	355-933	-	-
PSG550 备用传感器, 8-VCR	355-931	-	-
PSG550 备用传感器, DN 16 CF-F	355-927	-	-
PSG550 备用传感器, DN 16 CF-R, 长	355-928	-	-
PSG550 备用传感器, DN 16 ISO-KF	355-925	-	-
PSG550 备用传感器, DN 25 ISO-KF	355-929	-	-
PSG550 备用传感器, DN16 ISO-KF, 长	355-926	-	-
PSG552 备用传感器, 1/8" NPT	-	355-941	-
PSG552 备用传感器, 29 x 29mm	-	355-945	-
PSG552 备用传感器, 4-VCR	-	355-943	-
PSG552 备用传感器, 4-VCR / 90°	-	355-946	-
PSG552 备用传感器, 7/16-20 UNF	-	355-944	-
PSG552 备用传感器, 8-VCR	-	355-942	-
PSG552 备用传感器, DN 16 CF-F	-	355-938	-
PSG552 备用传感器, DN 16 CF-R, 长	-	355-939	-
PSG552 备用传感器, DN 16 ISO-KF	-	355-936	-
PSG552 备用传感器, DN 25 ISO-KF	-	355-940	-
PSG552 备用传感器, DN16 ISO-KF, 长	-	355-937	-
PSG554 备用传感器, 1/8" NPT	-	-	355-952
PSG554 备用传感器, 29x29mm	-	-	355-956
PSG554 备用传感器, 4-VCR	-	-	355-954
PSG554 备用传感器, 4-VCR / 90°	-	-	355-957
PSG554 备用传感器, 7/16-20 UNF	-	-	355-955
PSG554 备用传感器, 8-VCR	-	-	355-953
PSG554 备用传感器, DN 16 CF-F	-	-	355-949
PSG554 备用传感器, DN 16 CF-R, 长	-	-	355-950
PSG554 备用传感器, DN 16 ISO-KF	-	-	355-947
PSG554 备用传感器, DN 16 ISO-KF, 长	-	-	355-948
PSG554 备用传感器, DN 25 ISO-KF	-	-	355-951



## 附件

	PSG550 Tungsten	PSG552 Nickel	PSG554 ceramic coated
Diagnostic cable 1.9m (P3)	303-333	303-333	303-333
卡箍 DN 10-16 ISO-KF	211-001	211-001	211-001
细目过滤中心环组件DN 16 ISO-KF	211-097	211-097	211-097

## 尺寸

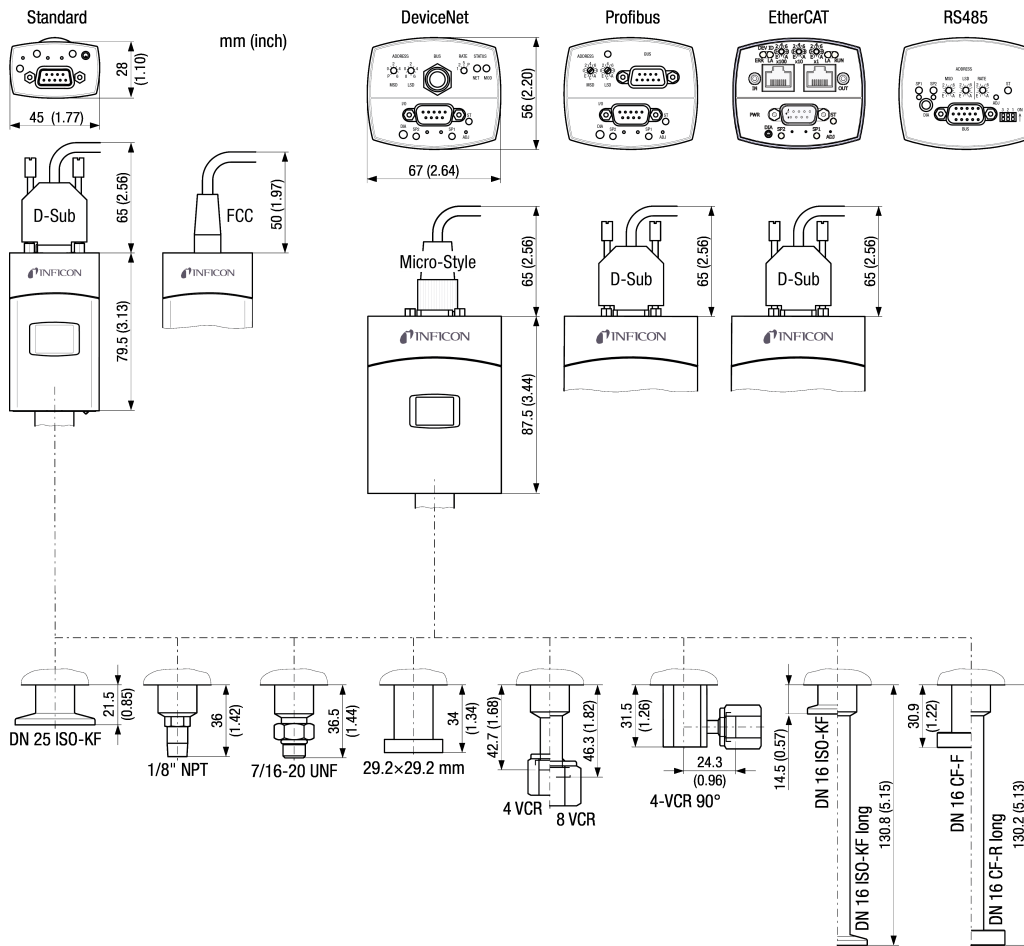

[www.inficon.com](http://www.inficon.com) [reachus@inficon.com](mailto:reachus@inficon.com)

由于我们的持续产品改进计划，因此产品规格可能会有变更，恕不另行通知。  
RateWatcher 是 INFICON 的商标。所有其他商标均为其各自所有者的财产。

(2020-07) © 2020 INFICON