

QS5

VACUUM PUMP

An affordable pump that lasts.

QS5 is a 2-stage, 5 CFM rotary vane pump with premium features without the premium price. Dual voltage operation, brass fittings, and an exhaust demister make QS5 a versatile and durable pump for everyday use. A two-year warranty ensures QS5 will stand up to daily punishment for years.

ADVANTAGES

- 5 CFM displacement for vacuum down to 15 microns
- Inlet check valve prevents oil from flowing back into the system
- Durable metal fittings and base
- Oil demister helps reduce oil in exhaust
- Versatile dual voltage operation




115V / 230V

5 CFM
142 l/min
8,5 m³/h

1/2 HP



A2L CERTIFIED

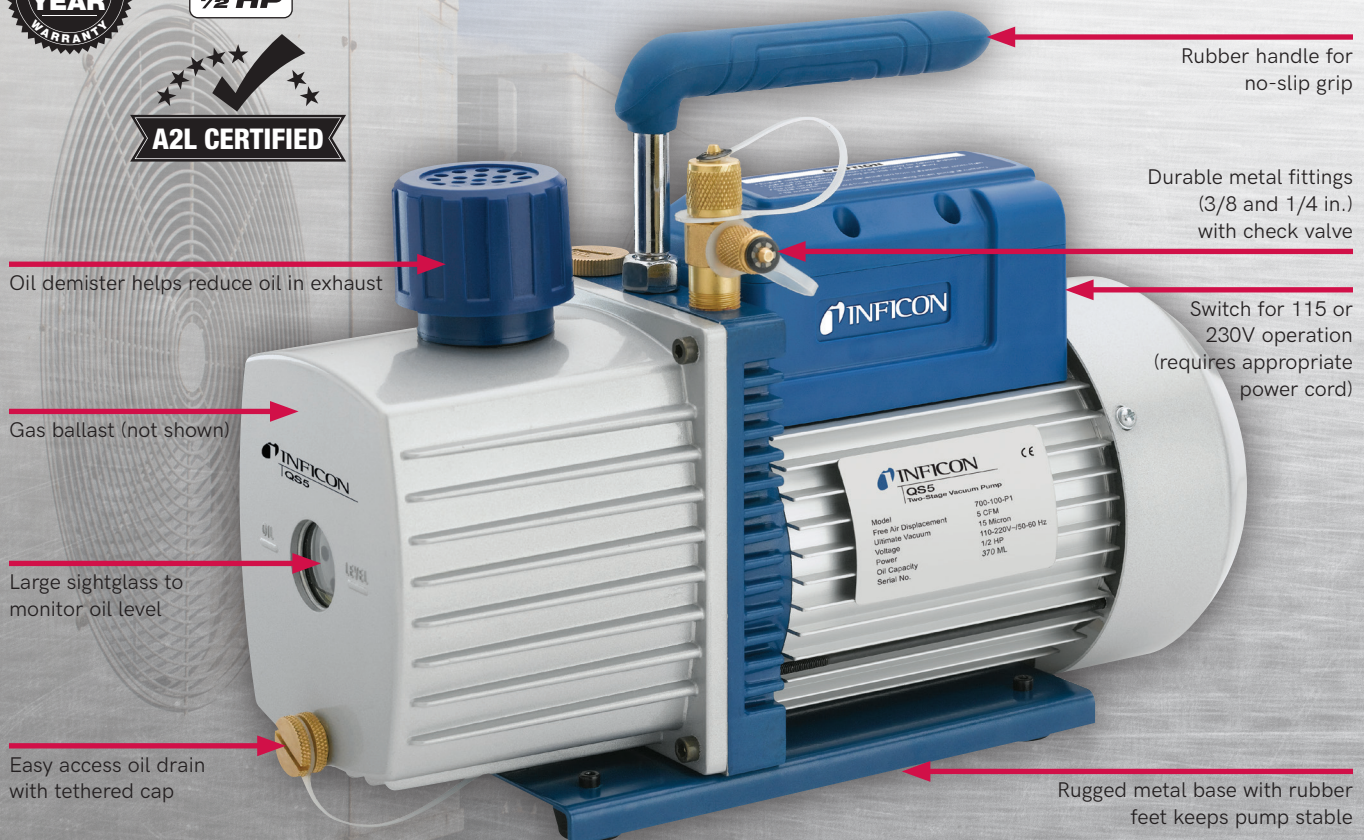

SPECIFICATIONS

Includes	QS5 Detachable power cord Vacuum pump oil
Free air displacement	5 cfm (142 l/min 8.52 m³/h)
Motor	1/2 HP AC
Pump stages	2
Oil capacity	12.5 oz. (370 ml)
Weight	24 lb. (10.89 kg)
Certifications	A2L Certified CE, UKCA
Power source	115/230 V (ac) dual voltage operation
Stages	2
Warranty	Two-year over-the-counter

ORDERING INFORMATION

QS5 pump, 115 V (ac) 700-100-P1

QS5 pump, 230 V (ac) 700-100-P10

Accessories and Replacement Parts

Power cord (115 V) 068-0684

Power cord (230 V Euro) 068-0685