

CDG100D Torr based other ranges


INFICON SKY CDG100D manometers are your best choice for accurate total pressure measurement and control. CDG100D gauges are temperature controlled at 100 °C for superior performance in demanding semiconductor and plasma processes. They are available for full scale ranges from 100 mTorr to 1000 Torr, with all common flange types and fieldbus interfaces and provide a linear 0 to 10 V, gas type independent, pressure signal. INFICON capacitance manometers use an ultra pure alumina ceramic diaphragm which is corrosion proof. The advantages of the ceramic sensor are better signal stability, faster recovery from atmosphere, short warm up time and an extraordinary lifetime. INFICON CDG are high quality, cost effective pressure sensors for demanding semiconductor, plasma and vacuum applications.



BENEFITS

- Lower CoO (cost of ownership), 50% faster warm up, energy efficient low power consumption
- Easy integration, wide variety of full scales, flanges and interfaces, standard with two set points
- Easy one push button or remote signal zero command, zero offset adjustable
- Diagnostic port for quick service and maintenance
- Two year warranty, longer life time with advanced heating concept and gauge protection
- No long term recalibration due to excellent signal stability and repeatability, even in harsh plasma applications
- Compliance & standards: CE, EN, UL, SEMI, RoHS

ORDERING INFORMATION

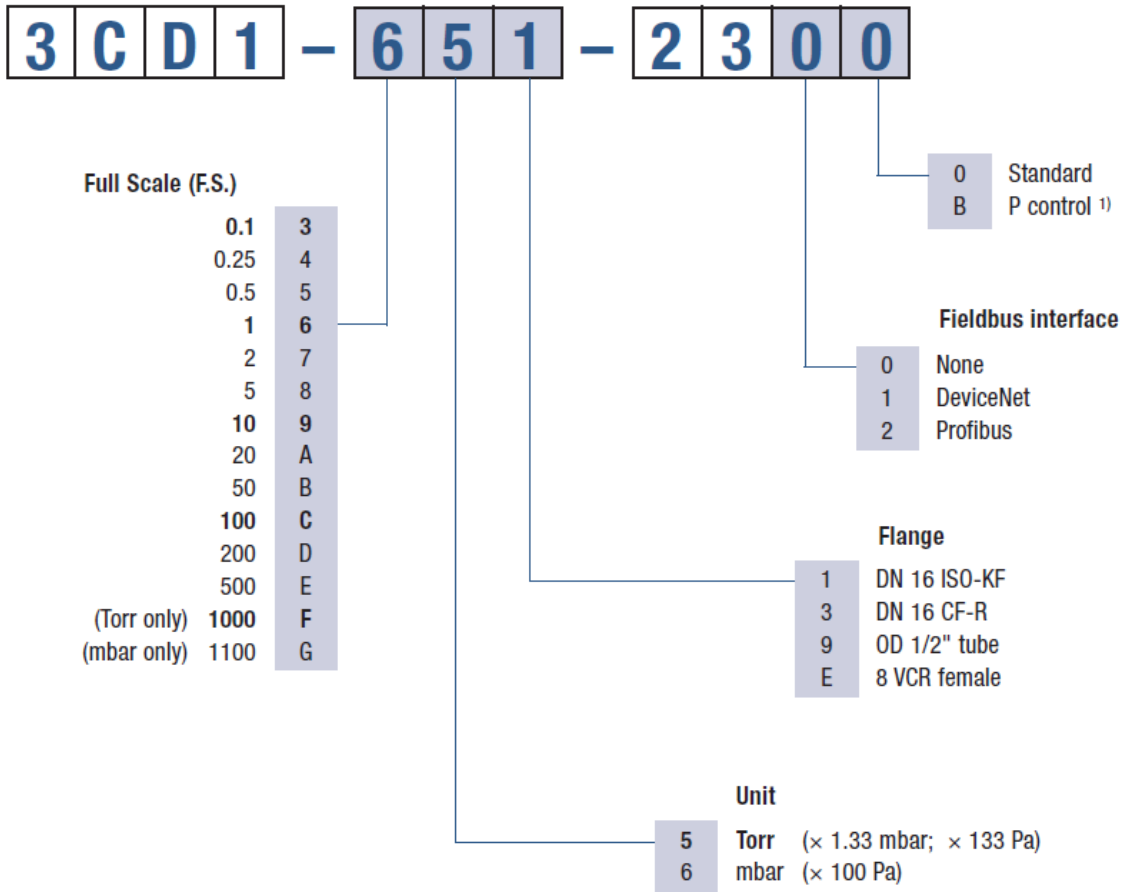

¹⁾ Optimised signal filter setting for pressure control.

bold = standard products

Other flange types and full scale ranges (F.S.) on request.

SPECIFICATIONS

Type		500 Torr	200 Torr	50 Torr	20 Torr	5 Torr	2 Torr
F.S. (Full Scale)	Torr	500	200	50	20	5	2
F.S. (Full Scale)	Pa	66,661	26,664	6,666.1	2,666	666.61	266.66
F.S. (Full Scale)	mbar	666.61	267	66.67	26.7	6.6661	2.67
Accuracy (1)	% of reading	0.2	0.2	0.2	0.2	0.2	0.2
Temperature effect							
on zero	percent FS/°C	0.0025	0.0025	0.0025	0.0025	0.0025	0.0025
Temperature effect							
on span	% of reading / °C	0.02	0.02	0.02	0.02	0.02	0.02
Pressure, max.	kPa (absolute)	400	260	260	260	260	260
Response time (2)	ms	30	30	30	30	30	30
Resolution	percent FS	0.003	0.003	0.003	0.003	0.003	0.003
Lowest reading	percent FS	0.01	0.01	0.01	0.01	0.01	0.01
Lowest suggested reading	percent FS	0.05	0.05	0.05	0.05	0.05	0.05
Temperature							
Operation (ambient)	°C	+10 ... +50	+10 ... +50	+10 ... +50	+10 ... +50	+10 ... +50	+10 ... +50
Bakeout at flange	°C	≤110	≤110	≤110	≤110	≤110	≤110
Storage	°C	-40 ... +65	-40 ... +65	-40 ... +65	-40 ... +65	-40 ... +65	-40 ... +65
Lowest suggested control pressure	percent FS	0.5	0.5	0.5	0.5	0.5	0.5
Power consumption							
During Heat up	W	≤15	≤15	≤15	≤15	≤15	≤15
At operating temperature	W	≤10	≤10	≤10	≤10	≤10	≤10
Supply voltage		+14 ... +30 VDC or ±15 V (±5%)	+14 ... +30 VDC or ±15 V (±5%)	+14 ... +30 VDC or ±15 V (±5%)	+14 ... +30 VDC or ±15 V (±5%)	+14 ... +30 VDC or ±15 V (±5%)	+14 ... +30 VDC or ±15 V (±5%)
Output signal (analog)	V (dc)	0 ... +10	0 ... +10	0 ... +10	0 ... +10	0 ... +10	0 ... +10
Degree of protection		IP 40	IP 40	IP 40	IP 40	IP 40	IP 40

SPECIFICATIONS

Type		0.5 Torr	0.25 Torr
F.S. (Full Scale)	Torr	0.5	0.25
F.S. (Full Scale)	Pa	66.66	33.3
F.S. (Full Scale)	mbar	0.67	0.33
Accuracy (1)	% of reading	0.4	0.4
Temperature effect			
on zero	percent FS/°C	0.005	0.005
Temperature effect			
on span	% of reading / °C	0.02	0.02
Pressure, max.	kPa (absolute)	130	130
Response time (2)	ms	30	130
Resolution	percent FS	0.003	0.003
Lowest reading	percent FS	0.01	0.01
Lowest suggested reading	percent FS	0.05	0.05
Temperature			
Operation (ambient)	°C	+10 ... +50	+10 ... +50
Bakeout at flange	°C	≤110	≤110
Storage	°C	-40 ... +65	-40 ... +65
Lowest suggested control pressure	percent FS	0.5	0.5
Power consumption			
During Heat up	W	≤15	≤15
At operating temperature	W	≤10	≤10
Supply voltage		+14 ... +30 VDC or ±15 V (±5%)	+14 ... +30 VDC or ±15 V (±5%)
Output signal (analog)	V (dc)	0 ... +10	0 ... +10
Degree of protection		IP 40	IP 40

SPECIFICATIONS

Type		500 Torr	200 Torr	50 Torr	20 Torr	5 Torr	2 Torr
Standards		EN 61000-6-2/-6 -3, EN 61010, UL 61010-1, CSA 22.2 No.61010-1, SEMI S-2	EN 61000-6-2/-6 -3, EN 61010, UL 61010-1, CSA 22.2 No.61010-1, SEMI S-2	EN 61000-6-2/-6 -3, EN 61010, UL 61010-1, CSA 22.2 No.61010-1, SEMI S-2	EN 61000-6-2/-6 -3, EN 61010, UL 61010-1, CSA 22.2 No.61010-1, SEMI S-2	EN 61000-6-2/-6 -3, EN 61010, UL 61010-1, CSA 22.2 No.61010-1, SEMI S-2	EN 61000-6-2/-6 -3, EN 61010, UL 61010-1, CSA 22.2 No.61010-1, SEMI S-2
Electrical connection		D-sub, 15 pole, male	D-sub, 15 pole, male	D-sub, 15 pole, male	D-sub, 15 pole, male	D-sub, 15 pole, male	D-sub, 15 pole, male
Setpoint (SP1,SP2)							
Relay contact	V (dc)	≤30	≤30	≤30	≤30	≤30	≤30
Setpoint (SP1,SP2)							
Relay contact	A (dc)	≤0.5	≤0.5	≤0.5	≤0.5	≤0.5	≤0.5
Setpoint (SP1,SP2)							
Hysteresis	percent FS	1	1	1	1	1	1
Diagnostic port							
Protocol		RS232-C	RS232-C	RS232-C	RS232-C	RS232-C	RS232-C
Read		pressure, status, ID	pressure, status, ID	pressure, status, ID	pressure, status, ID	pressure, status, ID	pressure, status, ID
Set		set points, filter, zero adjust, factory reset, DC offset	set points, filter, zero adjust, factory reset, DC offset	set points, filter, zero adjust, factory reset, DC offset	set points, filter, zero adjust, factory reset, DC offset	set points, filter, zero adjust, factory reset, DC offset	set points, filter, zero adjust, factory reset, DC offset
Materials exposed to vacuum		Aluminum oxide ceramic (Al ₂ O ₃), stainless steel (AISI 316L ⁽³⁾)	Aluminum oxide ceramic (Al ₂ O ₃), stainless steel (AISI 316L ⁽³⁾)	Aluminum oxide ceramic (Al ₂ O ₃), stainless steel (AISI 316L ⁽³⁾)	Aluminum oxide ceramic (Al ₂ O ₃), stainless steel (AISI 316L ⁽³⁾)	Aluminum oxide ceramic (Al ₂ O ₃), stainless steel (AISI 316L ⁽³⁾)	Aluminum oxide ceramic (Al ₂ O ₃), stainless steel (AISI 316L ⁽³⁾)
Internal volume							
I. volume 1/2" tube	cm ³ (in. ³)	4.2 (0.26)	4.2 (0.26)	4.2 (0.26)	4.2 (0.26)	4.2 (0.26)	4.2 (0.26)
I. volume 8 VCR®	cm ³ (in. ³)	4.2 (0.26)	4.2 (0.26)	4.2 (0.26)	4.2 (0.26)	4.2 (0.26)	4.2 (0.26)
I. volume DN 16 CF-R	cm ³ (in. ³)	4.2 (0.26)	4.2 (0.26)	4.2 (0.26)	4.2 (0.26)	4.2 (0.26)	4.2 (0.26)
I. volume DN 16 ISO KF	cm ³ (in. ³)	4.2 (0.26)	4.2 (0.26)	4.2 (0.26)	4.2 (0.26)	4.2 (0.26)	4.2 (0.26)
Weight							
Weight 1/2" tube	g	897	897	897	897	897	897

SPECIFICATIONS

Type		0.5 Torr	0.25 Torr
Standards		EN 61000-6-2/-6 -3, EN 61010, UL 61010-1, CSA 22.2 No.61010-1, SEMI S-2	EN 61000-6-2/-6 -3, EN 61010, UL 61010-1, CSA 22.2 No.61010-1, SEMI S-2
Electrical connection		D-sub, 15 pole, male	D-sub, 15 pole, male
Setpoint (SP1,SP2)			
Relay contact	V (dc)	≤30	≤30
Setpoint (SP1,SP2)			
Relay contact	A (dc)	≤0.5	≤0.5
Setpoint (SP1,SP2)			
Hysteresis	percent FS	1	1
Diagnostic port			
Protocol		RS232-C	RS232-C
Read		pressure, status, ID	pressure, status, ID
Set		set points, filter, zero adjust, factory reset, DC offset	set points, filter, zero adjust, factory reset, DC offset
Materials exposed to vacuum		Aluminum oxide ceramic (Al ₂ O ₃), stainless steel (AISI 316L ⁽³⁾)	Aluminum oxide ceramic (Al ₂ O ₃), stainless steel (AISI 316L ⁽³⁾)
Internal volume			
I. volume 1/2" tube	cm ³ (in. ³)	4.2 (0.26)	4.2 (0.26)
I. volume 8 VCR®	cm ³ (in. ³)	4.2 (0.26)	4.2 (0.26)
I. volume DN 16 CF-R	cm ³ (in. ³)	4.2 (0.26)	4.2 (0.26)
I. volume DN 16 ISO KF	cm ³ (in. ³)	4.2 (0.26)	4.2 (0.26)
Weight			
Weight 1/2" tube	g	897	897

SPECIFICATIONS


Type		500 Torr	200 Torr	50 Torr	20 Torr	5 Torr	2 Torr
Weight 8 VCR®	g	837	837	837	837	837	837
Weight DN 16 CF-R	g	852	852	852	852	852	852
Weight DN 16 ISO KF	g	875	875	875	875	875	875

(1) Non-linearity, hysteresis, repeatability at 25 °C ambient operating temperature without temperature effects after 2 hours operation.

(2) Increase 10 ... 90% F.S.

(3) 18% Cr, 10% Ni, 3% Mo, 69% Fe

DIMENSIONS

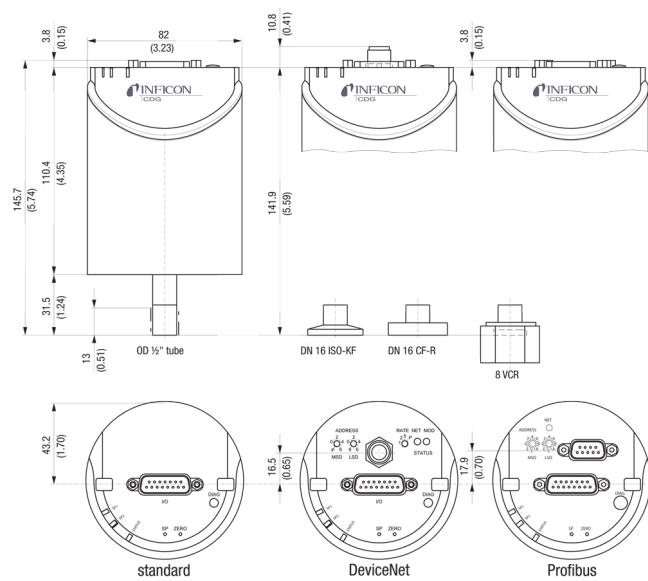

SPECIFICATIONS

Type		0.5 Torr	0.25 Torr
Weight 8 VCR®	g	837	837
Weight DN 16 CF-R	g	852	852
Weight DN 16 ISO KF	g	875	875



www.inficon.com reachus@inficon.com

Due to our continuing program of product improvements, specifications are subject to change without notice.
RateWatcher is a trademark of INFICON. All other trademarks are the property of their respective owners.

(2013-03) © 2012 INFICON