




Premium Quality  
made in Germany

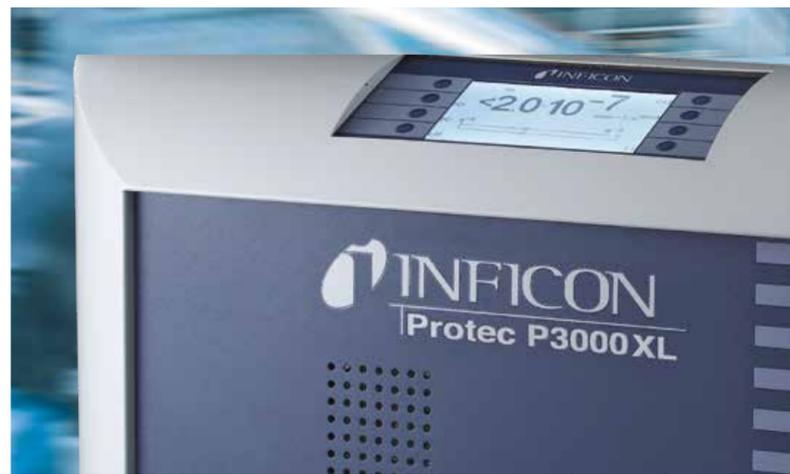

## The best choice for the highest performance

INFICON offers world-leading technologies in measurement technology, sensor technology and process control. Particularly in refrigeration and air conditioning, semiconductor manufacturing and automotive production, INFICON leak detectors make an important contribution to process efficiency, quality assurance and environmental protection.

With INFICON, you have a competent service representative at your side who knows the challenges of your industry and who, together with you, will find the optimal solution for your requirements. INFICON ensures the best service and the greatest possible support through specialized experts in numerous branch offices worldwide. State-of-the-art production facilities are located in the USA, Europe and Asia.

## PROTEC P3000 (XL) HELIUM LEAK DETECTOR

TECHNICAL SPECIFICATIONS	PROTEC P3000	PROTEC P3000XL
Minimum detectable leak rate	1 x 10 <sup>-7</sup> mbarl/s	1x10 <sup>-6</sup> mbarl/s @ 3000 sccm 1x10 <sup>-7</sup> mbarl/s @ 300 sccm
Measurement range	5 decades	4 decades @ 3000 sccm 5 decades @ 300 sccm
Sensor response time		450 ms
Response time including sniffer line		<0.7 s
Leak rate units		mbar l/s; Pa m <sup>3</sup> /s; ppm
Leak rate units for refrigerant equivalents		g/a; oz/yr; lb/yr
Run-up time		approx. 5 min
Dimensions (width x depth x height)		610 x 265 x 370 mm
Weight		27 kg
Gas flow	300 sccm	300/3000 sccm
Ambient temperature		10-45 °C

## ORDERING INFORMATION

PRODUCT	CAT. NO.	PRODUCT	CAT. NO.
Protec P3000		Sniffer tips for the SL3000 (Protec P3000)	
230 V, 50 Hz	520-001	ST 312, 120 mm, rigid	12213
100/115 V, 50/60 Hz	520-002	FT 312, 120 mm, flexible	12214
Protec P3000XL		ST 200, 200 mm, rigid	12218
230 V, 50 Hz	520-003	FT 250, 250 mm, flexible	12266
100/115, 50/60 Hz	520-004	ST 385, 385 mm, rigid	12215
Remote control version		FT 385, 385 mm, flexible	12216
without external control unit		FT 600, 600 mm, flexible	12209
Protec P3000, RC, 230 V, 50 Hz	520-103	ST 400, 400 mm, 45° angled	12272
Protec P3000, RC, 110/115 V, 50/60 Hz	520-104		
Protec P3000XL, RC, 230 V, 50 Hz	520-105	Sniffer tips for the SL3000XL (Protec P3000XL)	
Protec P3000XL, RC, 110/115 V, 50/60 Hz	520-106	ST312XL, 120 mm, rigid	521-018
External control unit for the Protec P3000R		FT312XL, 120mm, flexible	521-019
Table top version	551-100	ST385XL, 385 mm, rigid	521-020
Rack version	551-101	FT385XL, 385 mm, flexible	521-021
Connection cable for display unit		FT250XL, 250 mm, flexible	521-022
5 m length	551-102		
0.7 m length	551-103	PRO-Check reference leak - Optional (not included with delivery of the Protec P3000)	521-001
Sniffer line for the Protec P3000		PRO-Check replacement gas cartridge	521-010
with integrated display and push buttons		Calibrated test leak for helium	
SL3000-3, 3 m length	525-001	S-TL 4, for leak rates up to 10 <sup>-4</sup> mbar l/s	122 37
SL3000-5, 5 m length	525-002	S-TL 5, for leak rates up to 10 <sup>-5</sup> mbar l/s	122 38
SL3000-10, 10 m length	525-003	S-TL 6, for leak rates up to 10 <sup>-6</sup> mbar l/s	122 39
SL3000-15, 15 m length	525-004	Holder for sniffer line	525-006
Sniffer line for the Protec P3000		Cover for reference leak port	525-007
with integrated display and push buttons		Water protection tip for SL3000	122 46
SL3000XL-3, 3 m length	521-011	Oil/water protection tip	521-016
SL3000XL-5, 5 m length	521-012	Replacement filter for protection tip	521-017
SL3000XL-10, 10 m length	521-013	XL filter cartridge	521-018
SL3000XL-15, 15 m length	521-014		
Sniffer line adapter for system integration		Protec and Wise Technology are trademarks of INFICON.	
for the Protec P3000	525-005		
for the Protec P3000XL	521-015		

**INFICON** Instruments for Intelligent Control®

[www.inficon.com](http://www.inficon.com) [reachus@inficon.com](mailto:reachus@inficon.com)

Due to ongoing product improvements, specifications may change without prior notice.  
kba26EN-e (1911) © 2019 INFICON



Wise  
TECHNOLOGY

## Protec P3000 (XL) Helium Leak Detector

Efficient leak detection - moderate cost



**INFICON**

# Protec P3000 – The best helium leak detector in its class

## Cost-effective, reliable and virtually maintenance-free: The high performance leak detector for harsh industrial environments

Particularly in use under harsh production conditions, the Protec P3000 has proven itself, even in three-shift operation. Our INFICON Wise Technology™ sensor does not require vacuum or a turbomolecular pump. This is how our Protec series sets new standards in productivity, reliability and operating costs.

The Protec P3000 has proven itself in all industrial sectors where leak tightness is of particular importance, such as in the testing of systems and components in the areas of refrigeration/air conditioning, the automotive industry and new energy. Thanks to fast response times, the Protec P3000(XL) optimally utilizes the available cycle times. Numerous functions ensure easy and comfortable use, even by inexperienced operators.

## RELIABLE, EVEN WITH IMPRECISE HANDLING

In addition to having a long service life and being maintenance-free, the INFICON Wise Technology sensor makes our sniffer leak detectors something unique: The Protec P3000XL has the highest gas flow on the market - up to 3000 sccm. This means that you can still detect leaks efficiently even if you move the sniffer tip at a greater distance away from or at a higher speed over your test part.

## QUALITY YOU WILL MEASURE



Because we have designed the Protec P3000(XL) so that the gas flow through the sniffer line is particularly high, it can still identify leaks from a significant distance away.

For example, you will also quickly and reliably detect leaks on the back of a pipe joint.

## EFFICIENT AND PRODUCTIVE

The Protec P3000 series has numerous features that increase the efficiency and reliability for your sniffer leak detection. The I-Guide mode guides the user during leak detection so that he checks all the necessary connections with the correct technique. The integrated lighting in the sniffer tip makes it easy to hit the test points precisely.

The P3000(XL) can also be easily and quickly calibrated with the internal reference leak. This guarantees the continuous validity of your sniffer leak detection.

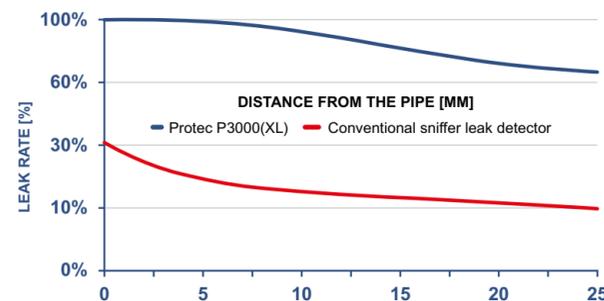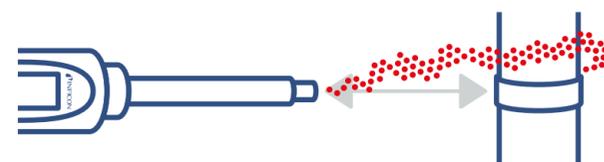

## MULTIPLE ALARM FUNCTIONS

Redundant alarms ensure that the operator does not miss a leak that exceeds the preset rejection rate: the background color in the handle display changes from green to red, the LEDs for lighting the sniffer tip start flashing, the entire handle vibrates, and an audible alarm sounds.

## PROTEC P3000RC FOR INTEGRATED LEAK DETECTION SYSTEMS

The INFICON Protec P3000RC is another member of the Protec P3000 family. It is ideal for integration into automated leak detection systems that do not have access to a built-in device display.

For setup and maintenance work, the Protec P3000RC can be connected to an external control unit, while the sniffer line display is sufficient for daily operation. Two small LEDs in the housing indicate the status (Ready, Error, etc.).



## HIGH FLOW AT 3000 SCCM

- Unique in the market: Gas flow up to 50 times greater than conventional devices
- Reliable leak detection, even in hard-to-reach places
- This makes leak detection faster and less user-dependent
- Highest sensitivity, even at a greater distance or at a higher speed



## YOUR BENEFITS AT A GLANCE

- **Low operating costs**  
The INFICON Wise Technology helium sensor does not need a vacuum, turbopump, or maintenance. This lowers your operating costs and avoids downtimes.
- **Fast and reliable**  
Reliable localization of even the smallest leaks, with fast response times and without faulty measurements. Even short cycle times are used optimally.
- **Reliable leakage detection**  
The INFICON High Flow at 3000 sccm reliably detects leakages, even in the case of imprecise handling.
- **Redundant leak alarms**  
Redundant alarms via sounds, lights, and vibrations make sure that you do not miss a leak. And, on the display in the handle, you always have the leak rate in view.
- **Complete operator guidance**  
The I-Guide mode can be used to define the leak positions to be checked with time sequences and repetition rates. As a result, even the most inexperienced operator can efficiently detect leakages.

## INTELLIGENT SNIFFER PROBE

- The ergonomically designed sniffer probe always displays the measured leak rate on an integrated display
- Users can focus on the sniffing process while monitoring the leak rate
- The vibration and alarm feature of the handle alerts the operator when the trigger level is exceeded



## LOW FLOW AT 300 SCCM

- 300 sccm: The optimal flow for pinpoint localization of escaping tracer gas
- Quickly switch from High Flow to Low Flow to accurately locate displayed leaks