


Power Failure Venting Valve

electromagnetically actuated
DN 10 ISO-KF

VIM010-A

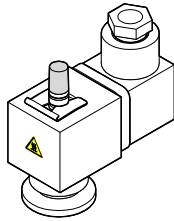


Operating Manual
Incl. Manufacturer's Declaration

sina58e1-a (0109)

Product Identification

In all communications with Inficon, please specify the information on the product nameplate. For convenient reference copy that information into the space provided below.

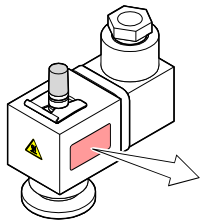

INFICON AG, LI-9496 Balzers

Model: _____
 PN: _____
 SN: _____
 _____ V== _____ W

Validity

This document applies to products with part numbers

250-850 (24 VDC)
 250-851 (200 ... 230 VAC)
 250-852 (110 ... 115 VAC)

The part number can be taken from the product nameplate.

We reserve the right to make technical changes without prior notice.

Intended Use

The Power failure venting valve is used for automatic venting of pumps as well as of small and medium vacuum systems.

If the Power failure venting valve is to be integrated in a vacuum system where toxic process gases are used or toxic gases arise during the process and where an overpressure can occur, take appropriate safety measures for exhausting such gases and dispose of them without polluting the environment.



Functional Principle

The Power failure venting valve opens in the event of a power failure. However, if the pressure in the vacuum system is >2.5 bar, the valve remains closed.


The Power failure venting valve remains closed as long as the solenoid coil is energized.

Safety

Symbols Used



Personnel Qualifications

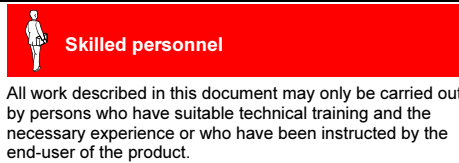

General Safety Instructions

- Adhere to the applicable regulations and take the necessary precautions for the process media used. Consider possible reactions between the materials and the process media.
- Adhere to the applicable regulations and take the necessary precautions for all work you are going to do and consider the safety instructions in this document.
- Before beginning to work, find out whether any vacuum components are contaminated. Adhere to the relevant regulations and take the necessary precautions when handling contaminated parts.

Communicate the safety instructions to all other users.

Liability and Warranty

Inficon assumes no liability and the warranty becomes null and void if the end-user or third parties

- disregard the information in this document
- use the product in a non-conforming manner
- make any kind of interventions (modifications, alterations etc.) on the product
- use the product with accessories and options not listed in the corresponding product documentation.

The end-user assumes the responsibility in conjunction with the process media used.


Technical Data

Part number	250-850	250-851	250-852
Connection flange	DN 10 ISO-KF		
Nominal voltage	24 VDC ±10%	200 230 V ±10% 50/60 Hz	100 115 V ±10% 50/60 Hz
Nominal power pickup holding	2.5 W 2.5 W	5 VA 3.7 VA	5 VA 3.7 VA
Type of connection	cable socket DIN 43650		
Duty cycle	100%		
Installation angle	any		
Actuation	opens with pressure spring closes electromagnetically		
Opening time ¹⁾	30 ms		
Closing time ¹⁾	30 ms		
Service life ²⁾	3 million cycles		
Tightness	<1×10 ⁻⁷ mbar l/s		
Venting time for 50 l vessel	270 s		
Pressure range	1×10 ⁻⁶ mbar ... 2.5 bar (absolute)		
Flow direction in the event of a power failure	Pressure in the vacuum system <1 bar	Pressure in the vacuum system 1 ... 2.5 bar	
	If the pressure in the vacuum system is >2.5 bar, the valve remains closed.		
Temperatures ambience	0 °C ... 50 °C		
solenoid coil ambience 20 °C ambience 50 °C	≤55 °C ≤80 °C		
bakeout housing actuator	<60 °C <50 °C		
Degree of protection	IP 65 according to DIN 40 050		
Materials housing armature pole tube pressure spring sealing profile filter protective lid packing	aluminum steel brass steel NBR bronze PE carton box, foamed material		
Weight	0.1 kg		

¹⁾ At a pressure difference Δp = 0 bar.

²⁾ Switching cycles under clean conditions.

Dimensions [mm]

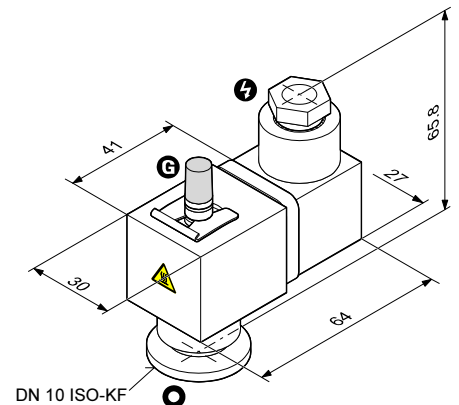

- Electrical connection
- Gas inlet
- Protective lid

Installation

Vacuum Connection

STOP DANGER

Caution: overpressure in the vacuum system >1 bar
 Injury caused by released parts and harm caused by escaping process gases can result if clamps are opened while the vacuum system is pressurized.
 Do not open any clamps while the vacuum system is pressurized. Use the type clamps which are suited to overpressure.


Caution

Caution: vacuum component
 Dirt and damages impair the function of the vacuum component.
 When handling vacuum components, take appropriate measures to ensure cleanliness and prevent damages.

Caution

Caution: dirt sensitive area
 Touching the product or parts thereof with bare hands increases the desorption rate.
 Always wear clean, lint-free gloves and use clean tools when working in this area.

Remove the protective lid and connect the valve to the vacuum system using a small flange fitting.

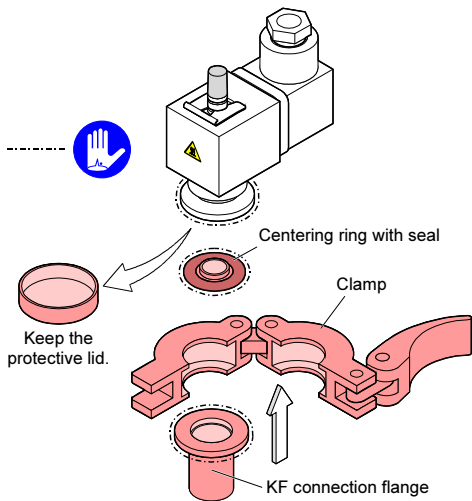

Electrical Connection


Caution

Caution: supply voltage
 Incorrect voltages can destroy the product.
 The rating of the supply voltage must correspond to the nominal voltage of the product (→ nameplate). If they do not correspond, exchange the solenoid coil (→ "Maintenance/Repair").


- The cable must meet the following specifications:
- flexible
 - conductor cross section 0.75 mm²
 - cable diameter ≤ 7 mm
 - 3 poles with protective conductor

Procedure


1 Unfasten the screw and unplug the cable socket.

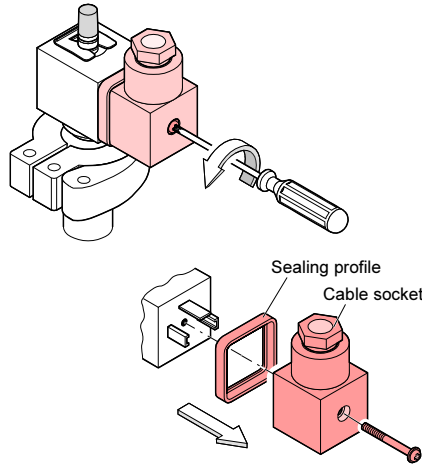


2 Remove the insert.

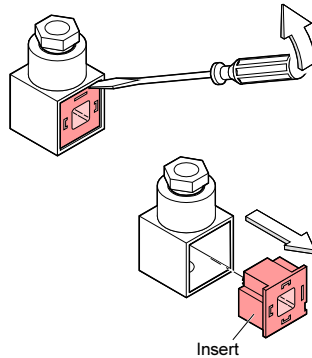


3 Unscrew the strain relief and remove the cable gland.

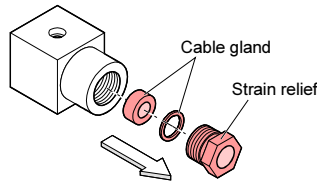

4 Slide the nut, washer, sealing washer and housing on the cable.

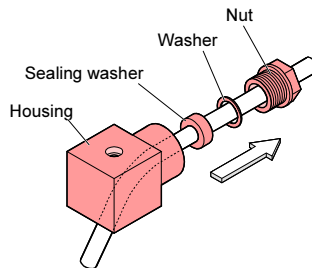


5 Prepare the cable.

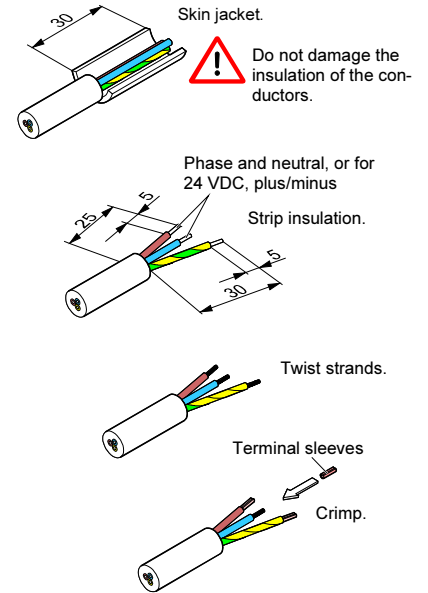


6 Connect the cable.


For the 24 VDC version, the polarity need not be taken into consideration.
 For safety reasons, we recommend to connect the protective ground also to the 24 VDC version.

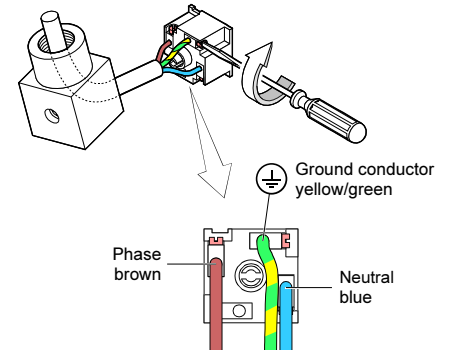


7 Push the insert and in until it catches.

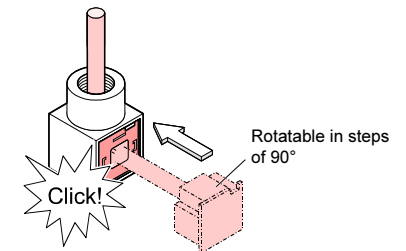


8 Mount the cable gland and strain relief.

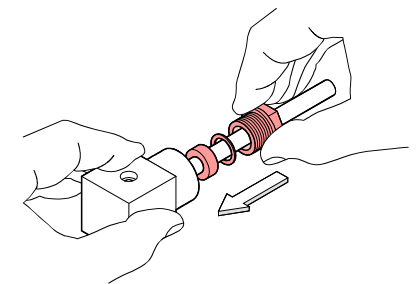

- 9 Tighten the strain relief.

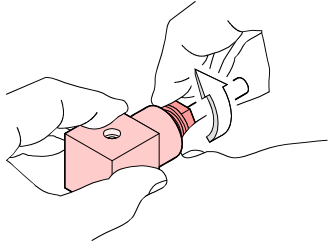

- 10 Remove the clamp and turn the solenoid coil so that the electrical connection is in the desired position. Fix it by inserting the clamp.


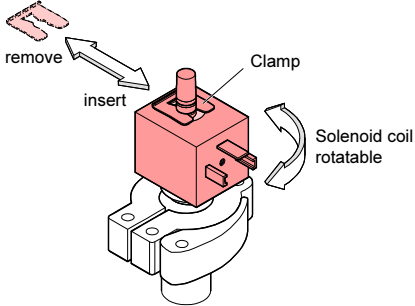


- 11 Mount the sealing profile. Plug in the cable socket and secure it with the screw.

Notice



To prevent interference with susceptible equipment near the solenoid coil, install the interference suppression kit (→ "Options") instead of the sealing profile.

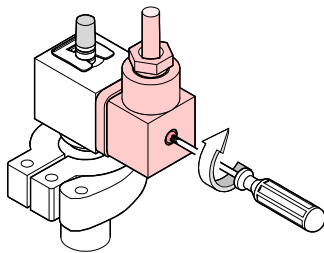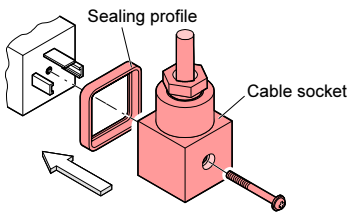

- 12 Connect the cable to the power supply.

Before connecting or disconnecting the product, turn off the power supply.

Operation

The product is ready for operation as soon as it has been installed.

DANGER



Caution: hot surface
Touching the hot surface (>55 °C) can cause burns.
Wear protective gloves.


Valve Positions

Valve closed:

- Solenoid coil energized
- or
- Power failure and $p > 2.5 \text{ bar}$

Atmosphere

Vacuum




Valve open:

- Power failure and $p \leq 2.5 \text{ bar}$

Atmosphere

Vacuum




Deinstallation

Electrical Connection



Before connecting or disconnecting the product, turn off the power supply.

Unlock the cable socket and unplug it.

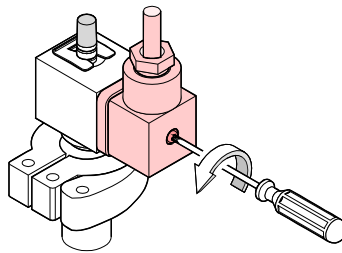

Vacuum Connection

DANGER



Caution: contaminated parts
Contaminated parts can be detrimental to health and environment.
Before beginning to work, find out whether any parts are contaminated. Adhere to the relevant regulations and take the necessary precautions when handling contaminated parts.

Caution



Caution: vacuum component
Dirt and damages impair the function of the vacuum component.
When handling vacuum components, take appropriate measures to ensure cleanliness and prevent damages.

Caution




Caution: dirt sensitive area
Touching the product or parts thereof with bare hands increases the desorption rate.
Always wear clean, lint-free gloves and use clean tools when working in this area.



The vacuum system must first be vented and the Power failure venting valve cooled down to <55 °C.

Remove the small flange fitting and put the protective lid in place.

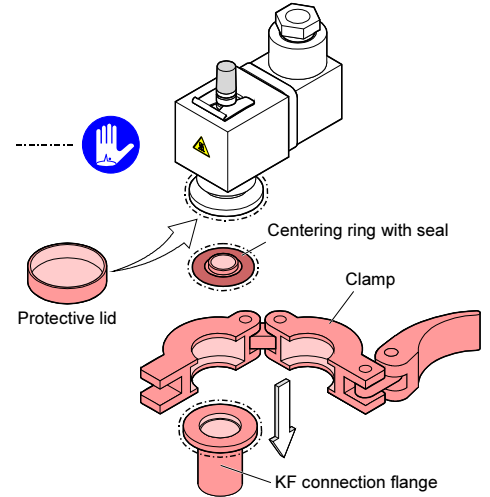

Maintenance, Repair

DANGER




Caution: contaminated parts
Contaminated parts can be detrimental to health and environment.
Before beginning to work, find out whether any parts are contaminated. Adhere to the relevant regulations and take the necessary precautions when handling contaminated parts.

DANGER



Caution: cleaning agents
Cleaning agents can be detrimental to health and environment.
Adhere to the relevant regulations and take the necessary precautions when handling and disposing of cleaning agents. Consider possible reactions with the product materials (→ "Technical Data").


Clean parts (except solenoid coil with cable socket and clamp) in an ultrasonic bath or rinse with alcohol and dry with an industrial blower.

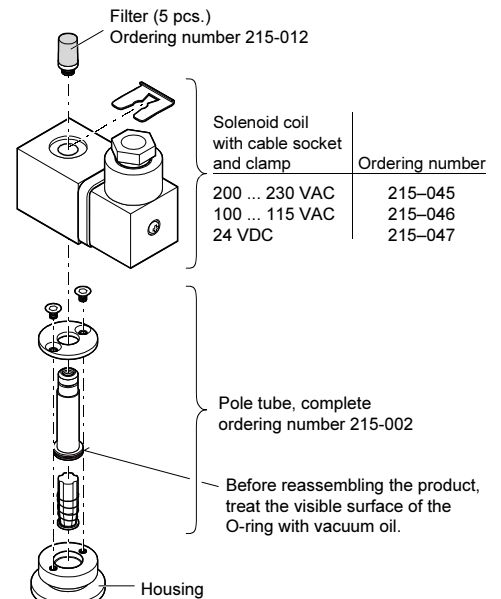

If venting takes considerably longer than before, replace the filter.

Options

Description	Nominal voltage	Ordering number
Interference suppression kit	230 VAC	215-406
	115 VAC	215-406
	24 VDC	215-405

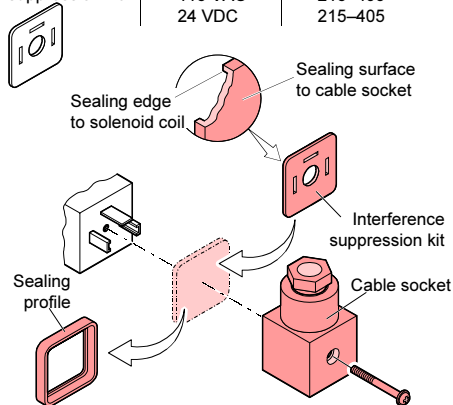

Returning the Product

WARNING



Caution: forwarding contaminated products
Contaminated products (e.g. radioactive, toxic, caustic or microbiological hazard) can be detrimental to health and environment.
Products returned to Inficon should preferably be free of harmful substances. Adhere to the forwarding regulations of all involved countries and forwarding companies and enclose a duly completed declaration of contamination.

Products that are not clearly declared as "free of harmful substances" are decontaminated at the expense of the customer.

Products not accompanied by a duly completed declaration of contamination are returned to the sender at his own expense.

Disposal

DANGER



Caution: contaminated parts
Contaminated parts can be detrimental to health and environment.
Before beginning to work, find out whether any parts are contaminated. Adhere to the relevant regulations and take the necessary precautions when handling contaminated parts.

WARNING



Caution: substances detrimental to the environment
Products or parts thereof (mechanical and electric components, operating fluids etc.) can be detrimental to the environment.
Dispose of such substances in accordance with the relevant local regulations.

Separating the components

After disassembling the product, separate its components according to the following criteria:

- Contaminated components
Contaminated components (radioactive, toxic, caustic, or biological hazard etc.) must be decontaminated in accordance with the relevant national regulations, separated according to their materials, and disposed of.
- Other components
Such components must be separated according to their materials and recycled.

Declaration of Contamination

The service, repair, and/or disposal of vacuum equipment and components will only be carried out if a correctly completed declaration has been submitted. Non-completion will result in delay. This declaration may only be completed (in block letters) and signed by authorized and qualified staff.

- Description of product**
Type _____
Part number _____
Serial number _____
- Reason for return**

- Operating fluid(s) used**
(Must be drained before shipping.)

- Process related contamination of product:**

toxic	no <input type="checkbox"/> 1)	yes <input type="checkbox"/>
corrosive	no <input type="checkbox"/> 1)	yes <input type="checkbox"/>
biological hazard	no <input type="checkbox"/>	yes <input type="checkbox"/> 2)
explosive	no <input type="checkbox"/>	yes <input type="checkbox"/> 2)
radioactive	no <input type="checkbox"/>	yes <input type="checkbox"/> 2)
other harmful substances	no <input type="checkbox"/> 1)	yes <input type="checkbox"/>

1) or not containing any amount of hazardous residues that exceed the permissible exposure limits

2) Products thus contaminated will not be accepted without written evidence of decontamination!

The product is free of any substances which are damaging to health
- Harmful substances, gases and/or by-products**
Please list all substances, gases, and by-products which the product may have come into contact with:

Trade/product name manufacturer	Chemical name (or symbol)

Precautions associated with substance	Action if human contact
- Legally binding declaration:**
I/we hereby declare that the information on this form is complete and accurate and that I/we will assume any further costs that may arise. The contaminated product will be dispatched in accordance with the applicable regulations.
 Organization/company _____
 Address _____
 Post code, place _____
 Phone _____ Fax _____
 Email _____
 Name _____
 Company stamp _____
 Date and legally binding signature _____

This form can be downloaded from our website.
Copies: Original for addressee
1 copy for accompanying documents
1 copy for file of sender

Manufacturer's Declaration

as defined by the Directive relating to machinery 98/37/EC, Appendix IIb

We, Inficon, hereby declare that putting the incomplete equipment mentioned below into operation is not permitted until evidence is given that the system into which that incomplete equipment shall be installed is in conformity with the provisions of the EC Directive relating to machinery.

We also declare that the equipment mentioned below complies with the provisions of the Directive relating to electrical equipment designed for use within certain voltage limits 73/23/EEC.

Power Failure Venting Valve

electromagnetically actuated
DN 10 ISO-KF

Part numbers

250-850
250-851
250-852

Standards

Harmonized and international/national standards and specifications:

- EN 292-2
- EN 60204-1
- ISO 1609
- DIN 28 403
- DIN 40 050

Signatures

INFICON AG, Balzers

19 September 2001

Hans-Christoph Gehlhar
Product Manager

19 September 2001

Dr. Georg Sele
Technical Support Manager
Quality Representative



LI-9496 Balzers
Liechtenstein
Tel +423 / 388 3111
Fax +423 / 388 3700
reach.liechtenstein@inficon.com
www.inficon.com