




## Electrical Connection

Make sure the vacuum connection is properly made (→ "Vacuum Connection").

- If no sensor cable is available, make one according to the following diagram.

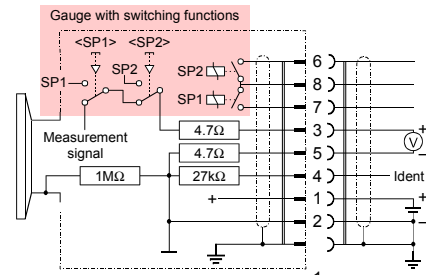

### Electrical connection

Pin 1	Supply
Pin 2	Supply common, GND
Pin 3	Measurement signal or thresholds SP1/2
Pin 4	Gauge identification
Pin 5	Signal common
Pin 6, 8	Relay SP2, closing contact
Pin 7, 8	Relay SP1, closing contact

- Connect the sensor cable to the gauge and the controller.

## Operation

When the supply voltage is applied, the measurement signal is available between pins 3 and 5 (relationship between measurement signal and pressure → "Technical Data"). Allow a stabilization period of at least 10 minutes. It is advisable to operate the gauge continuously, irrespective of the pressure.

## Gas Type Dependence

The measurement value is gas dependent. The pressure reading applies to dry air, O<sub>2</sub>, CO and N<sub>2</sub>. For other gases, it has to be corrected (→ "Technical Data").

If the gauge is operated with an INFICON controller, a calibration factor for correction of the actual reading can be applied (→ of the corresponding controller).


## Adjusting the Gauge

The gauge is factory calibrated. Due to long time operation or contamination, a zero drift could occur. Periodically check the zero and adjust it if necessary.

For adjusting the zero, operate the gauge under the same ambient conditions and in the same mounting orientation as normally.

The gauge is adjusted to default values. However, it can also be adjusted to other pressure values, if the exact pressure value is known (reference measurement).

- If you are using a seal with centering ring and filter, check that they are clean or replace them if necessary (→ "Deinstallation").
- Activate the gauge and operate it at atmospheric pressure for at least 10 minutes.
- Press the button with a pin (max.  $\varnothing 1.1$  mm) and the ATM adjustment is carried out: The gauge is adjusted to 1000 mbar (10 V (dc)) by default. By pressing the button >5 s the pressure value is increased towards 1200 mbar (or, by pressing it again, decreased towards 500 mbar) until the button is released or the limit is reached.

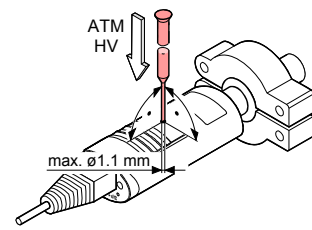


- Evacuate to  $p \ll 10^{-4}$  mbar (recommended) or to a pressure in the range of  $10^{-4} \dots 10^{-2}$  mbar and wait at least 2 minutes.

- Press the button with a pin and the HV adjustment is carried out: The gauge is adjusted to  $1.2 \times 10^{-4}$  mbar (1.1 V (dc)) by default. By pressing the button >5 s the pressure value is increased toward  $1 \times 10^{-2}$  mbar until the button is released or the limit is reached.

## Switching Functions

(PSG500-S and PSG502-S only)


The setpoints are adjustable within a pressure range of  $2 \times 10^{-3} \dots 500$  mbar (voltage range of 2.67 ... 9.61 V (dc)). Each switching function provides a floating relay contact (→ "Electrical Connection").

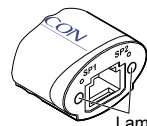

The status of the switching function is indicated by a lamp.

Status	Lamp	Relay
off	dark	deenergized
on	lit	energized

Measurement signal (Pressure p)

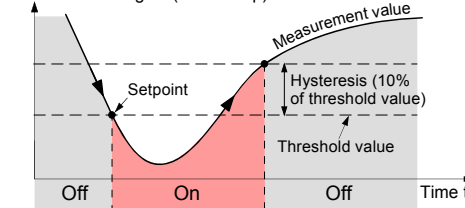

## Adjusting the Setpoints

**STOP DANGER**


**DANGER: malfunction**

If processes are controlled via the signal output, keep in mind that by pressing a button <SP> the measurement signal is suppressed and that the corresponding threshold value is output instead. This can cause malfunctions.

Press a button <SP> only if you are sure that no damages can arise from a malfunction.

The status of the relay and lamp is not affected by pressing the button.

- Press the button <SP1> with a pin (max.  $\varnothing 1.1$  mm): The gauge changes to the switching function mode and outputs the current lower threshold value at the measurement value output for about 5 s. When the button is kept depressed for more than 5 s, the threshold setting is modified until the button is released or until the limit of the setting range is reached.

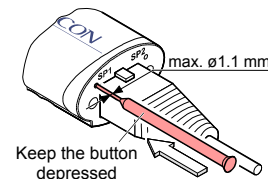

The upper threshold is 10% above the lower one (hysteresis).

- When the button is pressed again within 5 s the threshold setting is adjusted in the reverse direction.

- Release the button. The gauge resumes operation after 5 s and the connected controller displays the current measurement value.

The adjustment procedure for <SP2> is the same as described for <SP1>.

## Deinstallation

**STOP DANGER**

**DANGER: contaminated parts**

Contaminated parts can be detrimental to health and environment.

Before beginning to work, find out whether any parts are contaminated. Adhere to the relevant regulations and take the necessary precautions when handling contaminated parts.

**Caution**

**Caution: vacuum component**

Dirt and damages impair the function of the vacuum component.

When handling vacuum components, take appropriate measures to ensure cleanliness and prevent damages.

**Caution**

**Caution: dirt sensitive area**

Touching the product or parts thereof with bare hands increases the desorption rate.

Always wear clean, lint-free gloves and use clean tools when working in this area.

- Vent the vacuum system.
- Put the gauge out of operation.
- Unplug the sensor cable.
- Remove the gauge from the vacuum system and install the protective lid.

## Maintenance, Repair

In case of severe contamination or a malfunction, the sensor can be replaced.

Gauge failures due to contamination or wear and tear, as well as expendable parts (e.g. filament), are not covered by the warranty.

INFICON assumes no liability and the warranty becomes null and void if any repair work is carried out by the end-user or third parties.

## Spare Parts

When ordering spare parts, always indicate:

- all information on the product nameplate
- description and ordering number according to the spare parts list

Sensor	for gauge	Ordering number
	350-060, 350-080	350-920
	350-062, 350-082	350-922
	350-061, 350-081	350-921
	350-064, 350-084	350-924
	350-065, 350-085	350-926
	350-063, 350-083	350-923
	350-066, 350-086	350-925
	350-067, 350-087	350-927
	350-068, 350-088	350-928
	350-200	350-930
	350-140	350-900
	350-142	350-902
	350-141	350-901
	350-144	350-904
	350-145	350-906
	350-143	350-903
	350-146	350-905
	350-147	350-907
	350-148	350-908
	350-300	350-940

## Returning the Product

**WARNING**

**WARNING: forwarding contaminated products**

Contaminated products (e.g. radioactive, toxic, caustic or microbiological hazard) can be detrimental to health and environment.

Products returned to INFICON should preferably be free of harmful substances. Adhere to the forwarding regulations of all involved countries and forwarding companies and enclose a duly completed declaration of contamination <sup>1)</sup>.

<sup>1)</sup> Form under [www.inficon.com](http://www.inficon.com)

Products that are not clearly declared as "free of harmful substances" are decontaminated at the expense of the customer. Products not accompanied by a duly completed declaration of contamination are returned to the sender at his own expense.

## Disposal

**STOP DANGER**

**DANGER: contaminated parts**

Contaminated parts can be detrimental to health and environment.

Before beginning to work, find out whether any parts are contaminated. Adhere to the relevant regulations and take the necessary precautions when handling contaminated parts.

**WARNING**

**WARNING: substances detrimental to the environment**

Products or parts thereof (mechanical and electric components, operating fluids etc.) can be detrimental to the environment.

Dispose of such substances in accordance with the relevant local regulations.

## Separating the components

After disassembling the product, separate its components according to the following criteria:

- Contaminated components  
Contaminated components (radioactive, toxic, caustic, or biological hazard etc.) must be decontaminated in accordance with the relevant national regulations, separated according to their materials, and disposed of.
- Other components  
Such components must be separated according to their materials and recycled.

## EU Declaration of Conformity

**CE** We, INFICON, hereby declare that the equipment mentioned below complies with the provisions of the Directive relating to electromagnetic compatibility 2014/30/EU and the Directive on the restriction of the use of certain hazardous substances in electrical and electronic equipment 2011/65/EU.

### Products

#### Pirani Standard Gauge

PSG500/-S, PSG502-S,  
PSG510-S, PSG512-S

### Standards

Harmonized and international/national standards and specifications:

- EN 61000-6-2:2005 (EMC: generic emission standard)
- EN 61000-6-3:2007 + A1:2011 (EMC: generic immunity standard)
- EN 61010-1:2010 (Safety requirements for electrical equipment for measurement, control and laboratory use)
- EN 61326-1:2013 (EMC requirements for electrical equipment for measurement, control and laboratory use)

### Manufacturer / Signatures

INFICON AG, Alte Landstraße 6, LI-9496 Balzers

19 October 2015

19 October 2015

*Urs Wälchli*

*Marco Kern*

Dr. Urs Wälchli  
Managing Director

Marco Kern  
Product Manager